

**INSTALLATION, OPERATION,
AND MAINTENANCE MANUAL**
WITH PARTS LIST



PA SERIES PUMP

MODEL
PA12A60-B-6068H-ESP

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

www.grpumps.com

©2009 The Gorman-Rupp Company

Register your new
Gorman-Rupp pump online at
www.grpumps.com

Valid serial number and e-mail address required.



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your pump model and serial number in the spaces provided below. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model: _____

Serial Number: _____

TABLE OF CONTENTS

INTRODUCTION	PAGE I – 1
SAFETY - SECTION A	PAGE A – 1
INSTALLATION – SECTION B	PAGE B – 1
Pump Dimensions	PAGE B – 1
PREINSTALLATION INSPECTION	PAGE B – 1
Battery Installation	PAGE B – 2
POSITIONING PUMP	PAGE B – 2
Lifting	PAGE B – 2
Mounting	PAGE B – 2
SUCTION AND DISCHARGE PIPING	PAGE B – 3
Materials	PAGE B – 3
Line Configuration	PAGE B – 3
Connections to Pump	PAGE B – 3
Gauges	PAGE B – 3
SUCTION LINES	PAGE B – 3
Fittings	PAGE B – 3
Strainers	PAGE B – 3
Sealing	PAGE B – 4
Suction Line Positioning	PAGE B – 4
DISCHARGE LINES	PAGE B – 5
Siphoning	PAGE B – 5
Valves	PAGE B – 5
ALIGNMENT	PAGE B – 5
AUTO-START	PAGE B – 5
Float Switch Installation	PAGE B – 6
OPERATION – SECTION C	PAGE C – 1
OPERATION	PAGE C – 1
PRIMING	PAGE C – 1
STARTING	PAGE C – 1
Manual Starting	PAGE C – 1
Automatic Starting	PAGE C – 2
OPERATION	PAGE C – 2
Leakage	PAGE C – 2
Pump Vacuum Check	PAGE C – 2
Liquid Temperature And Overheating	PAGE C – 2
Strainer Check	PAGE C – 2
STOPPING	PAGE C – 3
BEARING TEMPERATURE CHECK	PAGE C – 3
Cold Weather Preservation	PAGE C – 3
TROUBLESHOOTING – SECTION D	PAGE D – 1
PREVENTIVE MAINTENANCE	PAGE D – 3
PUMP MAINTENANCE AND REPAIR - SECTION E	PAGE E – 1
STANDARD PERFORMANCE CURVE	PAGE E – 1

TABLE OF CONTENTS
(continued)

PARTS LISTS:

Pump Model	PAGE E – 3
Pump Model Assembly	PAGE E – 10
612M60–B Pump Model Assembly	PAGE E – 12
Priming Chamber Kit	PAGE E – 16
Priming Chamber Assembly	PAGE E – 17
Engine Drive Assembly	PAGE E – 18
Impeller Assembly Machining Tolerances	PAGE E – 19
Drive Assembly	PAGE E – 14
PUMP AND SEAL DISASSEMBLY AND REASSEMBLY	PAGE E – 20
Priming Chamber Removal And Disassembly	PAGE E – 20
Discharge Check Valve Removal and Disassembly	PAGE E – 21
Suction Head And Wear Ring Removal	PAGE E – 21
Pump Casing Removal	PAGE E – 21
Impeller Removal	PAGE E – 22
Seal Removal	PAGE E – 22
Pedestal Assembly Removal	PAGE E – 22
Pump Shaft and Bearing Removal and Disassembly	PAGE E – 23
Engine Drive Disassembly	PAGE E – 23
Bearing Cleaning And Inspection	PAGE E – 24
Engine Drive Reassembly	PAGE E – 24
Pump Shaft and Bearing Reassembly and Installation	PAGE E – 26
Pedestal Assembly Installation	PAGE E – 27
Seal Reassembly and Installation	PAGE E – 28
Impeller Installation	PAGE E – 30
Pump Casing Installation	PAGE E – 30
Suction Head And Wear Ring Installation	PAGE E – 30
Discharge Check Valve Assembly and Installation	PAGE E – 31
Priming Chamber Assembly And Installation	PAGE E – 31
LUBRICATION	PAGE E – 31
Seal Assembly	PAGE E – 31
Bearings	PAGE E – 31
Engine	PAGE E – 32

INTRODUCTION

Thank You for purchasing a Gorman-Rupp pump. **Read this manual** carefully to learn how to safely install and operate your pump. Failure to do so could result in personal injury or damage to the pump.

This pump is a sound-attenuated PA Series, priming-assisted environmental silent pump. The centrifugal pump unit is designed for handling non-volatile, non-flammable liquids containing specified entrained solids. The basic material of pump construction is ductile iron, with stainless steel shaft and ductile iron wearing parts.

Because pump installations are seldom identical, this manual cannot possibly provide detailed instructions and precautions for every aspect of each specific application. Therefore, it is the responsibility of the owner/installer of the pump to ensure that applications not addressed in this manual are performed **only** after establishing that neither operator safety nor pump integrity are compromised by the installation. Pumps and related equipment **must** be installed and operated according to all national, local and industry standards.

If there are any questions regarding the pump which are not covered in this manual or in other literature accompanying the unit, please contact your Gorman-Rupp distributor or the Gorman-Rupp Company:

The Gorman-Rupp Company
P.O. Box 1217

Mansfield, Ohio 44901—1217

Phone: (419) 755—1011

or:

Gorman-Rupp of Canada Limited
70 Burwell Road

St. Thomas, Ontario N5P 3R7

Phone: (519) 631—2870

For information or technical assistance on the engine, contact the engine manufacturer's local dealer or representative.

The following are used to alert personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:



Immediate hazards which WILL result in severe personal injury or death. These instructions describe the procedure required and the injury which will result from failure to follow the procedure.



Hazards or unsafe practices which COULD result in severe personal injury or death. These instructions describe the procedure required and the injury which could result from failure to follow the procedure.



Hazards or unsafe practices which COULD result in minor personal injury or product or property damage. These instructions describe the requirements and the possible damage which could result from failure to follow the procedure.

NOTE

Instructions to aid in installation, operation, and maintenance or which clarify a procedure.

SAFETY - SECTION A

This information applies to Prime Aire® Series pumps. Refer to the manual accompanying the engine or power source before attempting to begin operation.

Because pump installations are seldom identical, this manual cannot possibly provide detailed instructions and precautions for each specific application. Therefore, it is the owner/installer's responsibility to ensure that applications not addressed in this manual are performed only after establishing that neither operator safety nor pump integrity are compromised by the installation.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure the pump is cool before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



This pump is equipped with an automatic starting system, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect

the positive battery cable before performing any maintenance. Failure to do so may result in serious personal injury.



This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids. Do not attempt to pump volatile, corrosive, or flammable liquids which may damage the pump or endanger personnel as a result of pump failure.



Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.



After the pump has been installed, make certain that the pump and all piping or hose connections are tight, properly supported and secure before operation.



Do not operate the pump against a closed discharge valve. If operated against a closed discharge valve, pump

components will deteriorate, and the liquid could come to a boil, build pressure, and cause the pump casing to rupture or explode. Momentary closure of a discharge valve is acceptable **only** when required for startup or shutdown procedures.



Do not remove plates, covers, gauges, pipe plugs, or fittings from an overheated pump. Vapor pressure within the pump can cause parts being disengaged to be ejected with great force. Allow the pump to cool completely before servicing.



This pump may be used to handle materials which could cause illness through direct exposure or emitted fumes. Wear adequate protective clothing when working on the pump or piping.



Do not operate the pump without guards in place over the rotating parts. Exposed rotating parts can catch clothing, fingers or tools, causing severe injury to personnel.



Make sure the pump is level. Lower jack stands and chock the wheels, if so equipped. Use caution when positioning the skid-mounted unit to prevent damage to the fuel tank.



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.



Fuel used by internal combustion engines presents an extreme explosion and fire hazard. Make certain that all fuel lines are securely connected and free of leaks. Never refuel a hot or running engine. Avoid overfilling the fuel tank. Always use the correct type of fuel.



Never tamper with the governor to gain more power. The governor establishes safe operating limits that should not be exceeded. Refer to the Performance Curve in Section, Page E-1 for the maximum continuous operating speed for this pump.

INSTALLATION – SECTION B

Review all SAFETY information in Section A.

Since pump installations are seldom identical, this section offers only general recommendations and practices required to inspect, position, and arrange the pump and piping.

Most of the information pertains to a standard **static lift** application where the pump is positioned above the free level of liquid to be pumped.

If installed in a **flooded suction application** where the liquid is supplied to the pump under pressure, some of the information such as mounting, line

configuration, and priming must be tailored to the specific application. Since the pressure supplied to the pump is critical to performance and safety, **be sure** to limit the incoming pressure to 50% of the maximum permissible operating pressure as shown on the pump performance curve.

For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

Pump Dimensions

See Figure 1 for the approximate physical dimensions of this pump.

OUTLINE DRAWING

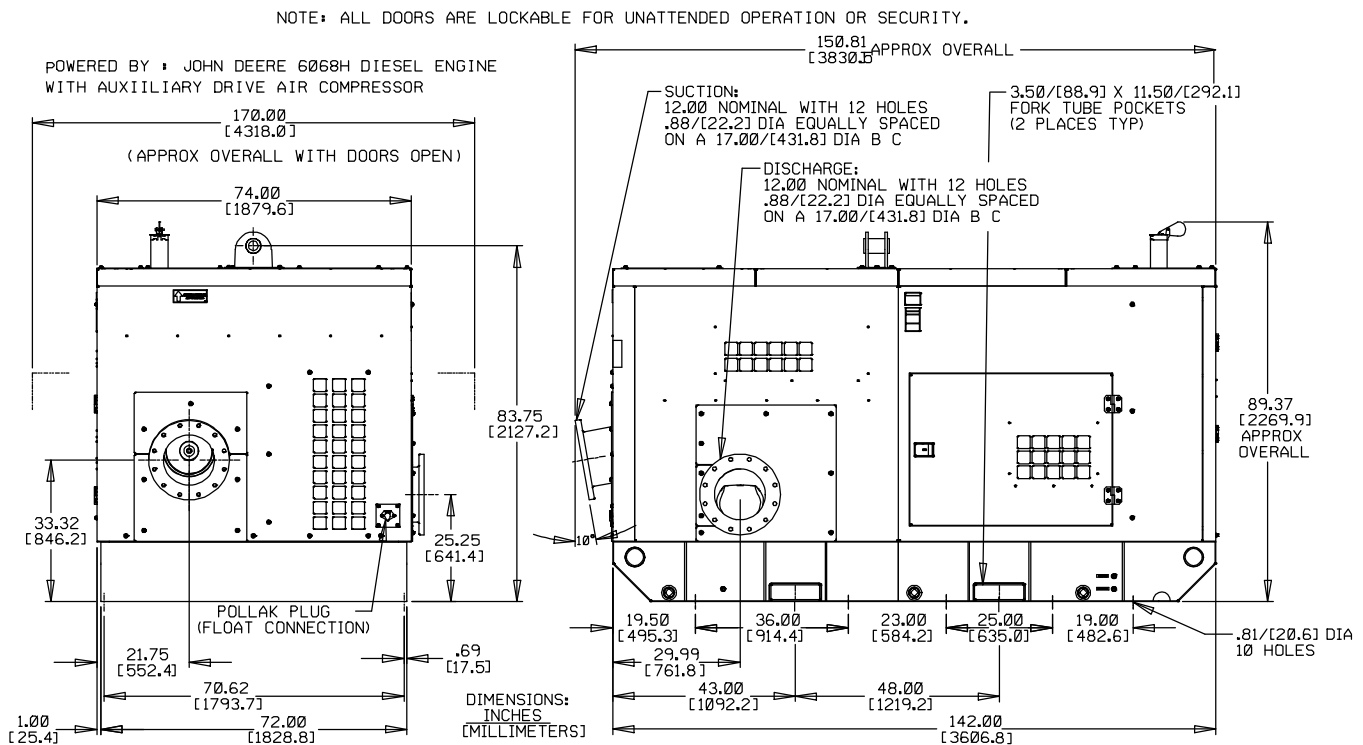


Figure 1. Pump Model PA12A60-B-6068H-ESP

PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before shipment from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- Inspect the pump for cracks, dents, damaged threads, and other obvious damage.
- Check for and tighten loose attaching hardware. Since gaskets tend to shrink after drying, check for loose hardware at mating surfaces.

- c. Carefully read all tags, decals, and markings on the pump assembly, and perform all duties indicated. Note that the pump shaft rotates in the required direction.



Only operate this pump in the direction indicated by the arrow on the pump body and on the accompanying decal. Otherwise, the impeller could become loosened from the shaft and seriously damage the pump.

- d. Check levels and lubricate as necessary. Refer to **LUBRICATION** in the **Maintenance and Repair Manual** and perform duties as instructed.
- e. If the pump has been stored for more than 12 months, some of the components or lubricants may have exceeded their maximum shelf life. These **must be inspected or replaced** to ensure maximum pump service.

If the maximum shelf life has been exceeded, or if anything appears to be abnormal, contact your Gorman-Rupp distributor or the factory to determine the repair or updating policy. **Do not** put the pump into service until appropriate action has been taken.

Battery Installation

Unless otherwise specified on the pump order, the engine battery is **not** included with engine driven units.

Refer to the information accompanying the battery and/or electrolyte solution for activation and charging instructions.

Before installing the battery, clean the positive and negative cable connectors, and the battery terminals. Secure the battery by tightening the holddown brackets. The terminals and clamps may be coated with petroleum jelly to retard corrosion. Connect and tighten the positive cable first, then the negative cable.

POSITIONING PUMP



Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.

Lifting

Pump unit weights will vary depending on the mounting and drive provided. Check the shipping tag on the unit packaging for the actual weight, and use lifting equipment with appropriate capacity. Drain the pump and remove all customer-installed equipment such as suction and discharge hoses or piping before attempting to lift existing, installed units.

Mounting

Locate the pump in an accessible place as close as practical to the liquid being pumped. Level mounting is essential for proper operation. The pump may have to be supported or shimmed to provide for level operation and eliminate vibration.

For engine driven units, the pump **must** be positioned as level as possible to ensure sufficient lubrication and fuel supply to the engine.

If the pump has been mounted on a moveable base, make certain the base is stationary by setting the brake and blocking the wheels before attempting to operate the pump.



If the pump has been mounted on a movable base, do not attempt to operate the pump unless the unit is level. Be sure the leveling stands are positioned on a solid surface, and the wheels are chocked.

SUCTION AND DISCHARGE PIPING

Pump performance is adversely effected by increased suction lift, discharge elevation, and friction losses. See the performance curve and operating range shown on Page E-1 to be sure your overall application allows pump to operate within the safe operation range.

Materials

Either pipe or hose may be used for suction and discharge lines; however, the materials must be compatible with the liquid being pumped. If hose is used in suction lines, it must be the rigid-wall, reinforced type to prevent collapse under suction. Using piping couplings in suction lines is not recommended.

Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

Connections to Pump

Before tightening a connecting flange, align it exactly with the pump port. Never pull a pipe line into place by tightening the flange bolts and/or couplings.

Lines near the pump must be independently supported to avoid strain on the pump which could cause excessive vibration, decreased bearing life, and increased shaft and seal wear. If hose-type lines are used, they should have adequate support

to secure them when filled with liquid and under pressure.

Gauges

The pump is drilled and tapped for installing discharge pressure and vacuum suction gauges. It is recommended that gauges be installed to monitor pump performance. Seal the gauge threads with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem horizontal to avoid air pockets.

Strainers

Be certain to use the strainer furnished with the pump; any spherical solids which pass through the strainer will also pass through the pump itself.

If a strainer not furnished with the pump is installed by the pump user, make certain that the total area of the openings in the strainer is at least three or four times the cross section of the suction line, and that the openings will not permit passage of solids larger than the solids handling capability of the pump.

This pump is designed to handle up to 3 inch (76,2 mm) diameter spherical solids.

Sealing

Since even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift, all connections in the suction line should be sealed with pipe dope to ensure an air-tight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

Suction Lines In Sumps

If a single suction line is installed in a sump, it should be positioned away from the wall of the sump at a distance equal to 1 1/2 times the diameter of the suction line.

If there is a liquid flow from an open pipe into the sump, the flow should be kept away from the suction inlet because the inflow will carry air down into the sump, and air entering the suction line will reduce pump efficiency.

If it is necessary to position inflow close to the suction inlet, install a baffle between the inflow and the suction inlet at a distance 1-1/2 times the diameter of the suction pipe. The baffle will allow entrained

air to escape from the liquid before it is drawn into the suction inlet.

If two suction lines are installed in a single sump, the flow paths may interact, reducing the efficiency of one or both pumps. To avoid this, position the suction inlets so that they are separated by a distance equal to at least 3 times the diameter of the suction pipe.

Suction Line Positioning

The depth of submergence of the suction line is critical to **efficient** pump operation. Figure 2 shows recommended minimum submergence vs. velocity.

Although not recommended, the vacuum assisted priming feature allows the pump to be operated temporarily in a "slurping" application with varying water levels.

NOTE

The pipe submergence required may be reduced by installing a standard pipe increaser fitting at the end of the suction line. The larger opening size will reduce the inlet velocity. Calculate the required submergence using the following formula based on the increased opening size (area or diameter).



Figure 2. Recommended Minimum Suction Line Submergence vs. Velocity

DISCHARGE LINES

Siphoning


Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action causing damage to the pump could result.

Valves

This pump is designed with a check valve in the discharge line.

If a throttling valve is desired in the discharge line, use a valve as large as the largest pipe to minimize friction losses. Never install a throttling valve in a suction line.

With high discharge heads, it is recommended that a throttling valve be installed in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.

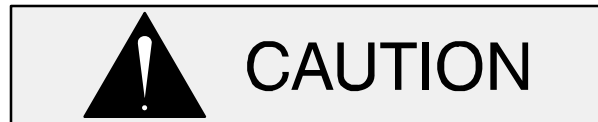

If the application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

ALIGNMENT

The alignment of the pump, air compressor and engine is critical for trouble-free mechanical operation. See Section E, **Securing Intermediate And Drive Assembly To Engine** in **MAINTENANCE AND REPAIR**, for details.

AUTO-START

The standard pump is equipped with an auto-start control system which allows the pump to start and stop as the liquid level in the wet well or sump rises and falls.

Refer to the information which follows for installation details for the liquid level sensing system provided with your pump.

Float Switch Installation

The Float Switch autostart system employs either a single or double float switch, where a bulb raises or lowers (floats) with the liquid level, thus activating an enclosed miniature switch. The floats are equipped with a socket type connector that plugs into a matching receptacle on the auto-start control box.

Standard floats are equipped with 50 feet (15,2 m) of cable.

When installing the floats, note the following:

- a. **Be sure** to provide sufficient room in the wet well or sump so that floats do not get obstructed or drawn into the suction line. If a flexible suction hose is used, it may be extended to lay along the bottom of the wet well or sump and the float can be attached to the hose above the point where it bends along the bottom. Direct the suction line toward the flow, and the float(s) away from the flow. If a stand-

pipe is available, attach the float switch cable to the standpipe in the sump at the approximate desired liquid level.

- b. In a single float system, the cable can be tethered to the suction line or standpipe approximately 6 inches (152 mm) above the float. This setting allows approximately 9 inches (229 mm) of liquid rise between pump start/stop. The start/stop interval may be increased by extending the float end of the cable. The liquid level in the sump will increase approximately 8 inches (203 mm) between start/stop intervals for every 6 inches (152 mm) of cable increase.
- c. If a double float switch system is used, position the "Start" float at the desired high water level in the sump, and the "Stop" float at the desired low water level in the pump.
- d. Refer to Figure 3 for additional float switch data.

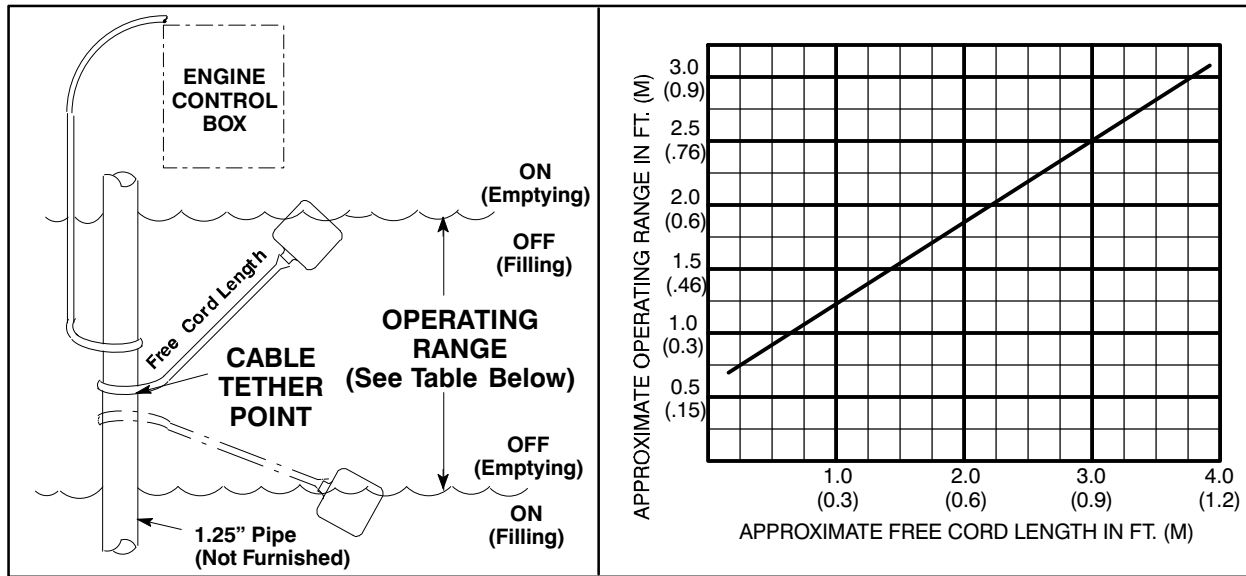


Figure 3. Float Switch Data

OPERATION – SECTION C

Review all **SAFETY** information in Section A.

Follow the instructions on all tags, labels and decals attached to the pump.



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.

OPERATION



This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids. Do not attempt to pump volatile, corrosive, or flammable liquids which may damage the pump or endanger personnel as a result of pump failure.



Pump speed and operating condition points must be within the continuous performance range shown on the performance curve in Section E on page E-1.

PRIMING

Install the pump and piping as described in **INSTALLATION**. Make sure that the piping connections are tight, and that the pump is securely mounted. Check that the pump is properly lubricated (see **LUBRICATION** in **MAINTENANCE AND REPAIR**).

The pump will begin to prime upon startup. The air in the suction line will be discharged from the educator discharge line. Complete priming is indicated by a positive discharge pressure reading.

If full priming is not achieved, the discharge check valve may be malfunctioning. If this occurs, shut down the pump and consult **Maintenance and Repair**, Section E for further details.

STARTING

Check the fuel level and oil levels in the engine, air compressor, pump bearings and seal housing.

Make sure the pump is level. Lower the jack stands and chock the wheels, if so equipped.



Make sure the pump is level. Lower jack stands and chock the wheels, if so equipped. Use caution when positioning the skid-mounted unit to prevent damage to the fuel tank.



This pump is equipped with automatic liquid level controls, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect the positive battery cable before performing any maintenance. Failure to do so may result in serious personal injury.

Consult the engine operations manual before attempting to start the unit.

Manual Starting

On initial start-up, set the engine speed at in the half-throttle position. Turn the keyswitch to 'MANUAL'. After the engine starts and the unit is fully primed, adjust the engine RPM until the desired flow rate is achieved.

Automatic Starting

With the float system installed, follow the procedures outlined for manual starting and throttle adjustment. Switch the keyswitch to 'OFF' until the water level rises above the on point for the float system, then turn the keyswitch to the 'AUTO' setting. The unit will run until the float signals the control that the water in the wet well is at the float off point, at which time the unit will shut down automatically. When the float signals the control that the water in the wet well is at the float on point, the unit will re-start automatically, repeating the cycle.

OPERATION

Leakage

Once the pump is fully primed, no leakage should be visible at pump mating surfaces, or at pump connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

Pump Vacuum Check

Read the vacuum gauge with the pump primed and at operation speed. Shut off the pump. The vacuum gauge reading will immediately drop proportionate to static suction lift, and should then stabilize. If the vacuum reading falls off rapidly after stabilization, an air leak exists. Before checking for the source of the leak, check the point of installation of the vacuum gauge.

Liquid Temperature And Overheating

The **maximum** liquid temperature for this pump is 160° F (71° C). Do not apply it at a higher operating temperature.

Overheating can occur if operated with the valves in the suction or discharge lines closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump immediately and allow it to completely cool before servicing it. **Approach any over-heated pump cautiously.**



Allow an over-heated pump to completely cool before servicing. Do not remove plates, covers, gauges, or fittings from an overheated pump. Liquid within the pump can reach boiling temperatures, and vapor pressure within the pump can cause parts being disengaged to be ejected with great force. After the pump cools, drain the liquid from the pump by removing the casing drain plug. Use caution when removing the plug to prevent injury to personnel from hot liquid.

As a safeguard against rupture or explosion due to heat, this pump is equipped with a pressure relief valve which will open if vapor pressure within the pump casing reaches a critical point. If over-heating does occur, stop the pump immediately and allow it to cool before servicing it. **Approach any over-heated pump cautiously.** It is recommended that the pressure relief valve assembly be replaced at each overhaul, or any time the pump casing over-heats and activates the valve. **Never** replace this valve with a substitute which has not been specified or provided by the Gorman-Rupp Company.

Strainer Check

Check the strainer regularly, and clean it as necessary. The strainer should also be checked if pump flow rate begins to drop. Monitor and record the vacuum suction gauge readings regularly to detect strainer blockage.

Never introduce air or steam pressure into the pump casing or piping to remove a blockage. This could result in personal injury or damage to the equipment. If backflushing is absolutely necessary, **liquid pressure** must be limited to 50% of the maximum permissible operating pressure shown on the pump performance curve.

STOPPING

Never halt the flow of liquid suddenly. If the liquid being pumped is stopped abruptly, damaging

shock waves can be transmitted to the pump and piping system. Close all connecting valves slowly.

Reduce the throttle speed slowly and allow the engine to idle briefly before stopping.



If the application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

After stopping the pump, switch off the engine ignition and remove the key to ensure that the pump will remain inoperative.

BEARING TEMPERATURE CHECK

Bearings normally run at higher than ambient temperatures because of heat generated by friction. Temperatures up to 160°F (71°C) are considered normal for bearings, and they can operate safely to at least 180°F (82°C).

Checking bearing temperatures by hand is inaccurate. Bearing temperatures can be measured accurately by placing a contact-type thermometer against the housing. Record this temperature for future reference.

A sudden increase in bearing temperatures is a warning that the bearings are at the point of failing to operate properly. Make certain that the bearing lubricant is of the proper viscosity and at the correct level (see **LUBRICATION** in the Maintenance and Repair Manual). Bearing overheating can also be caused by shaft misalignment and/or excessive vibration.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.

Cold Weather Preservation

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts. If the pump will be idle for more than a few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump from completely draining, insert a rod or stiff wire in the drain port, and agitate the liquid during the draining process. Clean out any remaining solids by flushing with a hose.

TROUBLESHOOTING – SECTION D

Review all SAFETY information in Section A.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure pump is cool before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP FAILS TO PRIME	Discharge check valve contaminated, damaged, or unable to seat. Air compressor head 180° out. Air leak in suction line. Lining of suction hose collapsed. Leaking or worn seal or pump gasket. Suction lift or discharge head too high. Air compressor damaged or belts broken. Strainer clogged.	Clean or replace check valve. Consult factory. Correct leak. Replace suction hose. Check pump vacuum. Replace leaking or worn seal or gasket. Check piping installation and install bypass line if needed. See INSTALLATION . Check and repair/replace. Check strainer and clean if necessary.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Eductor clogged. Air leak in suction line. Lining of suction hose collapsed. Leaking or worn seal or pump gasket.	Check and clean eductor. Correct leak. Replace suction hose. Check pump vacuum. Replace leaking or worn seal or gasket.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE (cont.)	<p>Strainer clogged.</p> <p>Discharge check valve clogged.</p> <p>Suction intake not submerged at proper level or sump too small.</p> <p>Impeller or other wearing parts worn or damaged.</p> <p>Impeller clogged.</p> <p>Discharge head too high.</p> <p>Suction lift too high.</p> <p>Pump speed too slow.</p> <p>Belt or flexible coupling broken.</p>	<p>Check strainer and clean if necessary.</p> <p>Check and clean check valve.</p> <p>Check installation and correct submergence as needed.</p> <p>Replace worn or damaged parts. Check that impeller is properly centered and rotates freely.</p> <p>Free impeller of debris.</p> <p>Install bypass line.</p> <p>Measure lift w/vacuum gauge. Reduce lift and/or friction losses in suction line.</p> <p>Check engine output; consult engine operation manual.</p> <p>Check and replace as necessary.</p>
PUMP REQUIRES TOO MUCH POWER	<p>Pump speed too high.</p> <p>Extreme ambient temperature.</p> <p>Discharge head too low.</p> <p>Fuel filter clogged.</p> <p>Liquid solution too thick.</p> <p>Fuel contaminated.</p> <p>Pump or jack shaft bearing(s) frozen.</p>	<p>Check engine output.</p> <p>Reduce pump output.</p> <p>Adjust discharge valve.</p> <p>Check & replace often in extreme operating conditions.</p> <p>Dilute if possible.</p> <p>Check and replace as required.</p> <p>Disassemble, check and replace bearing(s) as required..</p>
PUMP CLOGS FREQUENTLY	<p>Discharge flow too slow.</p> <p>Suction check valve or foot valve clogged or binding.</p> <p>Liquid solution too thick.</p>	<p>Open discharge valve fully to increase flow rate, and run engine at maximum governed speed.</p> <p>Clean valve.</p> <p>Dilute if possible.</p>
EXCESSIVE NOISE	<p>Cavitation in pump.</p> <p>Pumping entrained air.</p> <p>Pump or drive not securely mounted.</p> <p>Impeller clogged or damaged.</p>	<p>Reduce suction lift and/or friction losses in suction line. Record vacuum and pressure gauge readings and consult local representative or factory.</p> <p>Locate and eliminate source of air bubble.</p> <p>Secure mounting hardware.</p> <p>Clean out debris; replace damaged parts.</p>

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
BEARINGS RUN TOO HOT	<p>Bearing temperature is high, but within limits.</p> <p>Low or incorrect lubricant.</p> <p>Suction and discharge lines not properly supported.</p> <p>Drive misaligned.</p> <p>Excessive tension on drive belt.</p>	<p>Check bearing temperature regularly to monitor any increase.</p> <p>Check for proper type and level of lubricant.</p> <p>Check piping installation for proper support.</p> <p>Align drive properly.</p> <p>Check belt tension. Adjust as required.</p>

PREVENTIVE MAINTENANCE

Since pump applications are seldom identical, and pump wear is directly affected by such things as the abrasive qualities, pressure and temperature of the liquid being pumped, this section is intended only to provide general recommendations and practices for preventive maintenance. Regardless of the application however, following a routine preventive maintenance schedule will help assure trouble-free performance and long life from your Gorman-Rupp pump. For specific questions concerning your application, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

Record keeping is an essential component of a good preventive maintenance program. Changes in suction and discharge gauge readings (if so

equipped) between regularly scheduled inspections can indicate problems that can be corrected before system damage or catastrophic failure occurs. The appearance of wearing parts should also be documented at each inspection for comparison as well. Also, if records indicate that a certain part (such as the seal) fails at approximately the same duty cycle, the part can be checked and replaced before failure occurs, reducing unscheduled down time.

For new applications, a first inspection of wearing parts at 250 hours will give insight into the wear rate for your particular application. Subsequent inspections should be performed at the intervals shown on the chart below. Critical applications should be inspected more frequently.


Preventive Maintenance Schedule					
Item	Service Interval*				
	Daily	Weekly	Monthly	Semi-Annually	Annually
General Condition (Temperature, Unusual Noises or Vibrations, Cracks, Leaks, Loose Hardware, Etc.)	I				
Pump Performance (Gauges, Speed, Flow)	I				
Bearing Lubrication		I			R
Seal Lubrication (And Packing Adjustment, If So Equipped)		I			R
V-Belts (If So Equipped)			I		
Air Release Valve Plunger Rod (If So Equipped)			I	C	
Front Impeller Clearance (Wear Plate)				I	
Rear Impeller Clearance (Seal Plate)				I	
Check Valve					I
Pressure Relief Valve (If So Equipped)					C
Pump and Driver Alignment					I
Shaft Deflection					I
Bearings					I
Bearing Housing					I
Piping					I
Driver Lubrication – See Mfgr’s Literature					I

Legend:
 I = Inspect, Clean, Adjust, Repair or Replace as Necessary
 C = Clean
 R = Replace

* Service interval based on an intermittent duty cycle equal to approximately 4000 hours annually. Adjust schedule as required for lower or higher duty cycles or extreme operating conditions.

PUMP MAINTENANCE AND REPAIR – SECTION E


MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.

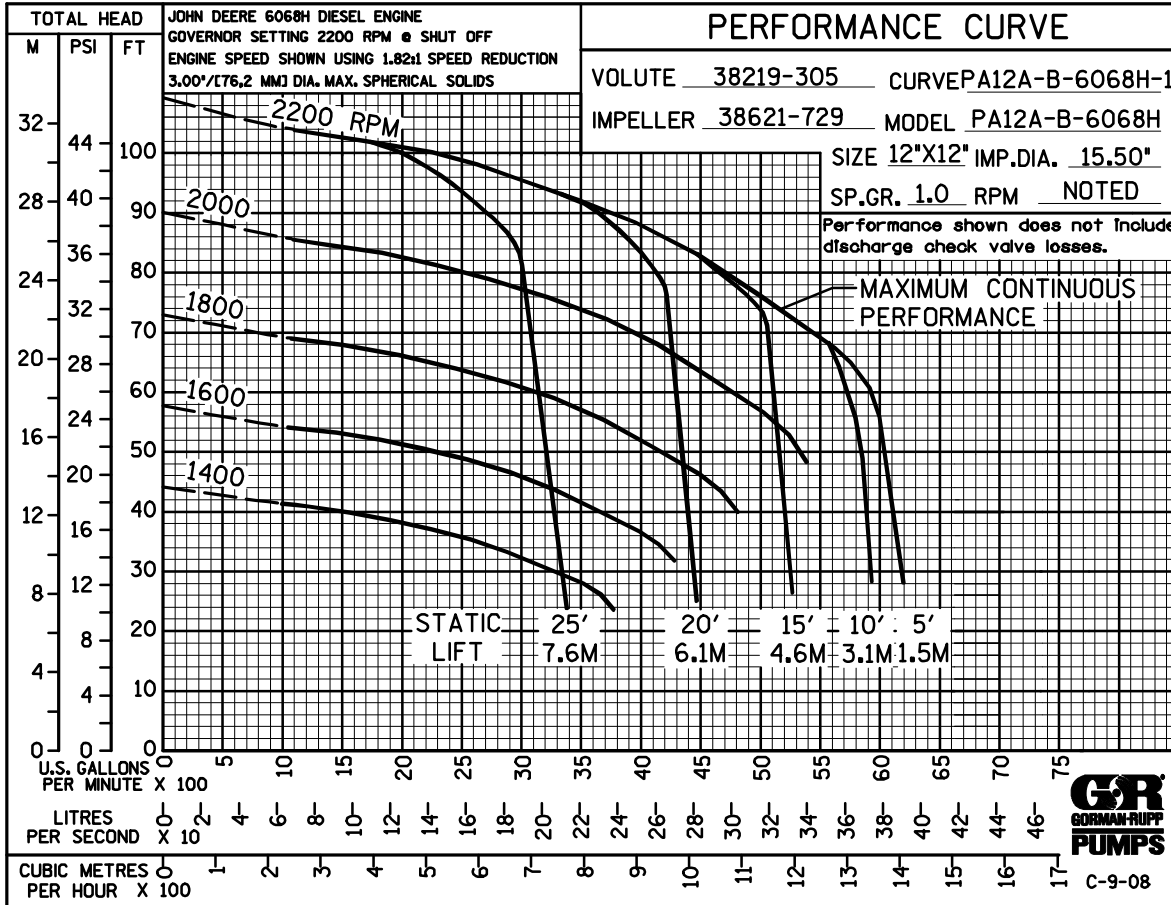

*** STANDARD PERFORMANCE FOR PUMP MODEL PA12A60-B-6068H-ESP**

* Based on 70°F (21°C) clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

 Contact the Gorman-Rupp Company to verify performance or part numbers.



CAUTION

Pump speed and operating condition points must be within the continuous performance range shown on the curve.

ILLUSTRATION

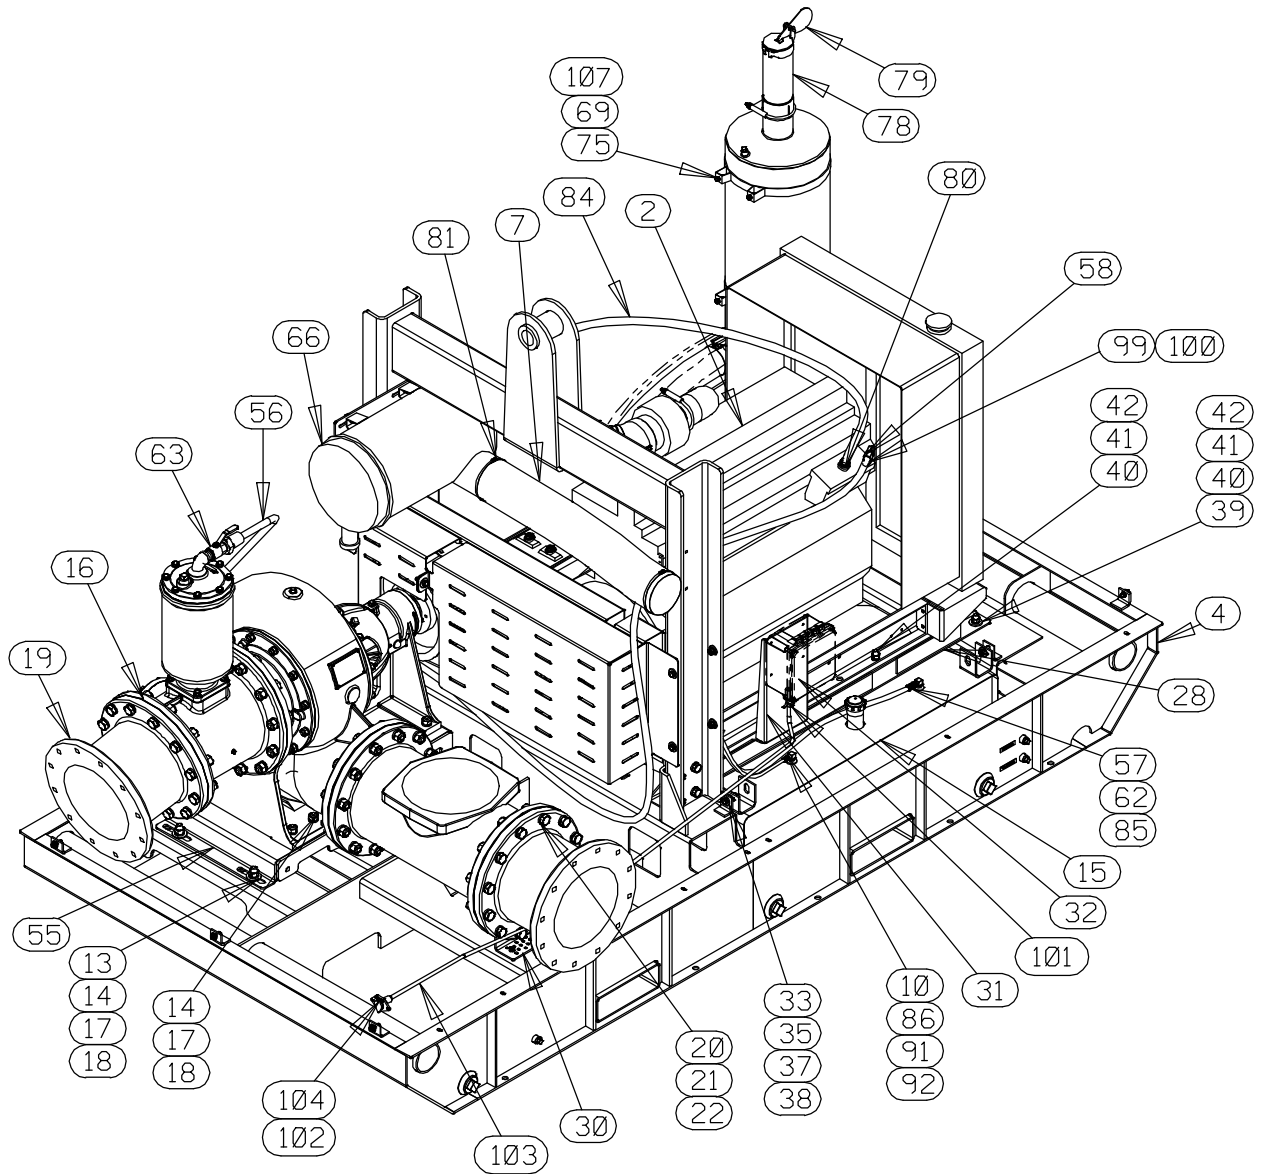


Figure 1. Pump Model PA12A60-B-6068H-ESP

PARTS LIST
Pump Model PA12A60-B-6068H-ESP
 (From S/N 1501367 Up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
2	J.D. 6068H ENGINE	29224-332	----	1
4	BASE ASSEMBLY	41565-593	24150	1
7	6" DIA. x 48" LG. FLEX DUCTING	18533-171	----	1
10	HOSE BARB FITTING	26523-386	----	2
13	FLAT WASHER	K12	15991	18
14	HEX NUT	D12	15991	22
15	FUEL TANK ASSEMBLY	46711-094	24150	1
16	GASKET	4991G	18000	2
17	HEX HD CAPSCREW	B1210	15991	20
18	LOCK WASHER	J12	15991	20
19	12" SPOOL	46353-844	----	2
20	LOCK WASHER	J14	15991	24
21	HEX HD CAPSCREW	B1415	15991	24
22	HEX NUT	D14	15991	24
28	ENGINE RAIL ASSEMBLY	41828-015	24150	1
30	CHECK VALVE SUPPORT ASSEMBLY	41881-968	----	1
31	CONTROL PANEL SUPPORT	34812-001	15120	1
32	CONTROL PANEL	29284-028	----	1
33	FLAT WASHER	K08	15991	10
35	HEX NUT	D08	15991	6
37	HALF PIPE COUPLING	AES06	15070	4
38	HEX HD CAPSCREW	B0808	15991	4
39	FLAT WASHER	K10	15991	12
40	HEX HD CAPSCREW	B1008	15991	8
41	LOCK WASHER	J10	15991	8
42	HEX NUT	D10	15991	8
55	PUMP SUPPORT ASSEMBLY	41581-041	----	1
56	VACUUM HOSE ASSEMBLY	46341-021	----	1
57	HOSE BARB FITTING	26523-015	----	2
58	HOSE ASSEMBLY	46341-026	----	1
62	CONNECTOR	26351-059	----	1
63	BALL VALVE	26631-054	----	1
66	AIR CLEANER	SUPPLIED W/ENGINE	----	1
69	LOCK WASHER	J06	15991	13
70	HEX NUT	D06	15991	9
75	HEX HD CAPSCREW	B0604	15991	5
78	STRAIGHT PIPE	31418-154	15000	1
79	WEATHER CAP	29334-313	----	1
80	HOSE BARB FITTING	26523-392	----	2
81	HOSE CLAMP	26518-724	----	2
84	3/4" I.D. x 54" LG. HOSE	18513-305	----	1
85	3/8" I.D. x 60" LG. HOSE	18513-302	----	1
86	3/16" I.D. x 48" LG. HOSE	18513-301	----	1
91	REDUCER PIPE BUSHING	AP0604	14100	1
92	HOSE CLAMP	26518-641	----	2
99	HEX ADAPTOR	26523-188	----	1
100	ELBOW	26341-310	----	1
102	FLANGED CAPSCREW	21643-505	----	2
103	16/4 x 96" LG. CABLE	188141-147	----	1
104	SOCKET CONNECTOR	27263-001	----	1
107	HEX HD CAPSCREW	B0615	15991	4

ILLUSTRATION

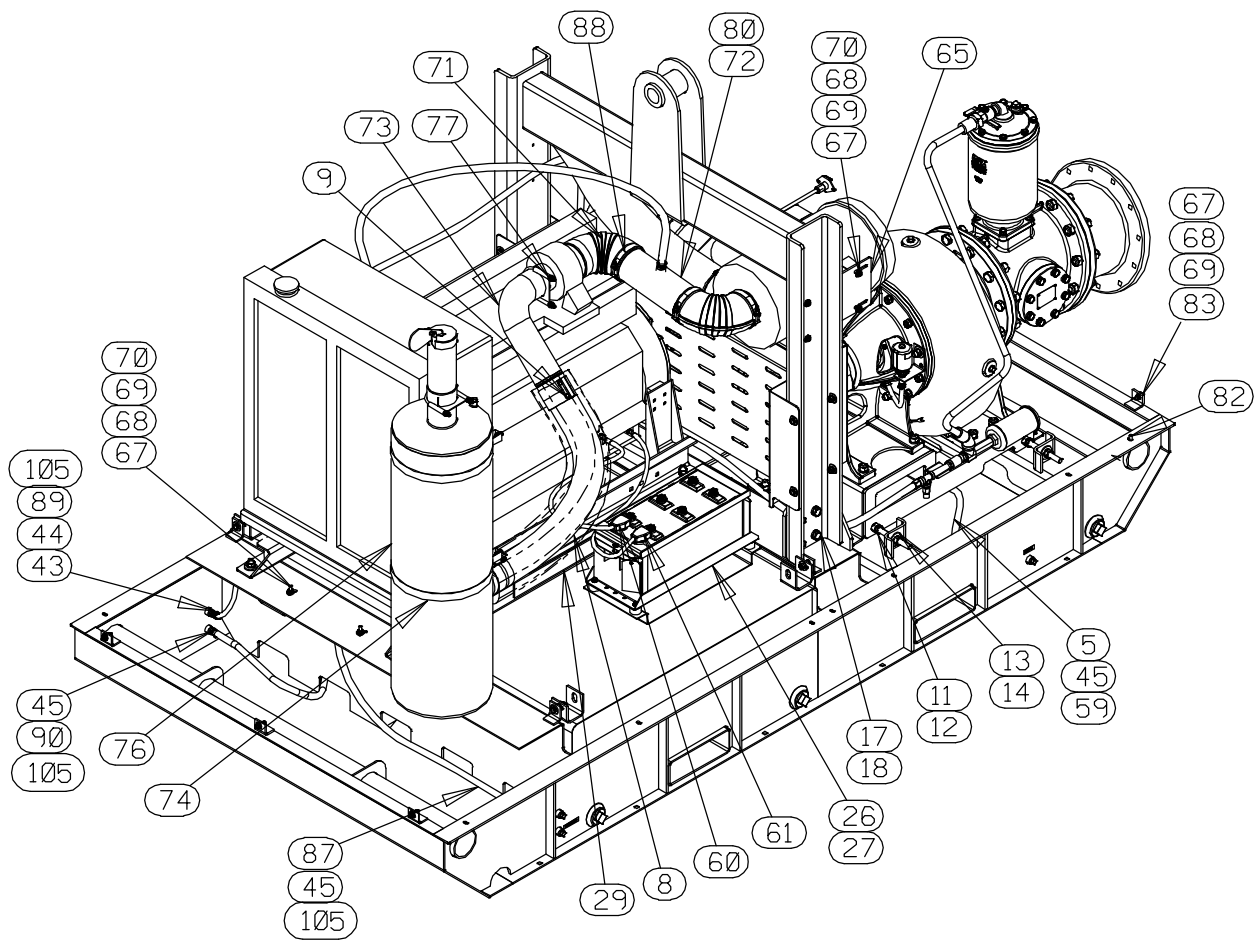




Figure 2. Pump Model PA12A60-B-6068H-ESP (Cont'd)

PARTS LIST
Pump Model PA12A60-B-6068H-ESP
 (From S/N 1501367 Up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
5	5/8" I.D. x 18" LG. HOSE	18513-304	----	1
8	4" FLEX EXHAUSTE TUBE x 48" LG.	29334-409	----	1
9	4" BAND CLAMP	29334-283	----	1
11	HEX JAM NUT	AT12	15991	2
12	THREADED ROD	31345-090	15000	2
13	FLAT WASHER	K12	15991	18
14	HEX NUT	D12	15991	22
17	HEX HD CAPSCREW	B1210	15991	20
18	LOCK WASHER	J12	15991	20
26	BATTERY BOX ASSEMBLY	42432-003	----	1
27	BATTERY	SEE OPTIONS	----	1
29	ENGINE RAIL ASSEMBLY	41828-016	24150	1
43	REDUCER PIPE BUSHING	AP0806	15079	1
44	HOSE BARB FITTING	26523-389	----	1
45	HOSE BARB FITTING	26523-391	----	7
59	HOSE CLAMP	26518-642	----	2
60	POS BATTERY CABLE ASSEMBLY	47311-111	----	1
61	NEG BATTERY CABLE ASSEMBLY	47311-185	----	1
65	AIR CLEANER MOUNT PLATE	33541-076	15080	1
67	HEX HD CAPSCREW	B0607	15991	8
68	FLAT WASHER	K06	15991	8
69	LOCK WASHER	J06	15991	13
70	HEX NUT	D06	15991	5
71	AIR INTAKE ELBOW	SUPPLIED W/ENGINE		1
72	INTAKE TUBE ASSEMBLY	46671-502	24150	1
73	4" EXHAUST ELBOW	31912-042	15000	1
74	MUFFLER MOUNTING BRACKET	29334-281	----	2
76	MUFFLER	29334-109	----	1
77	U-BOLT	29334-268	----	4
80	HOSE BARB FITTING	26523-392	----	2
82	FLANGED CAPSCREW	21634-515	----	5
83	FLANGED HEX NUT	21765-314	----	5
87	5/8" I.D. x 66" LG. HOSE	18513-304	----	1
88	T-BOLT CLAMP	SUPPLIED W/ENGINE		3
89	3/8" I.D. x 36" LG. HOSE	18513-302	----	1
90	5/8" I.D. x 36" LG. HOSE	18513-304	----	1
105	HOSE CLAMP	26518-666	----	5

ILLUSTRATION

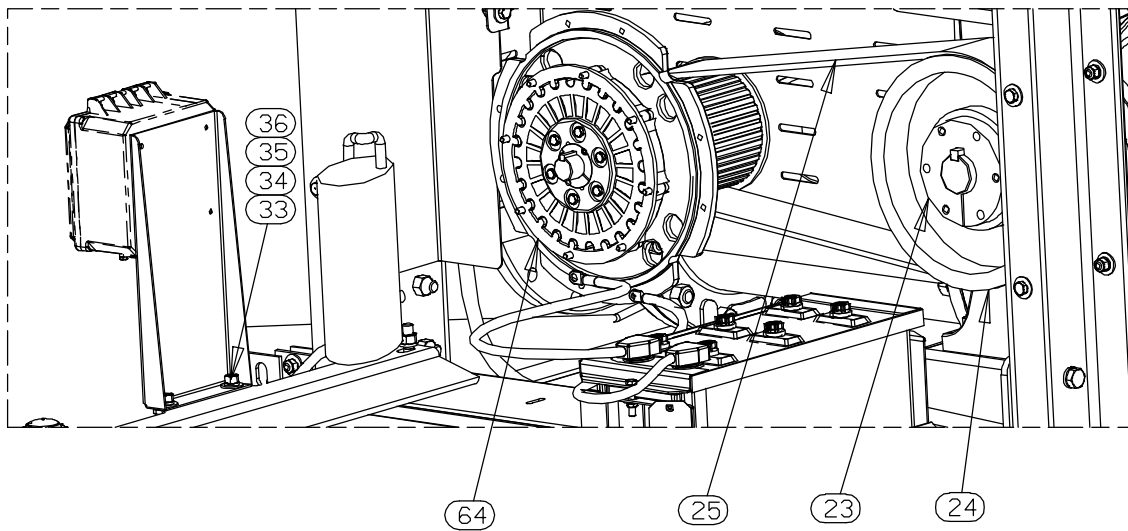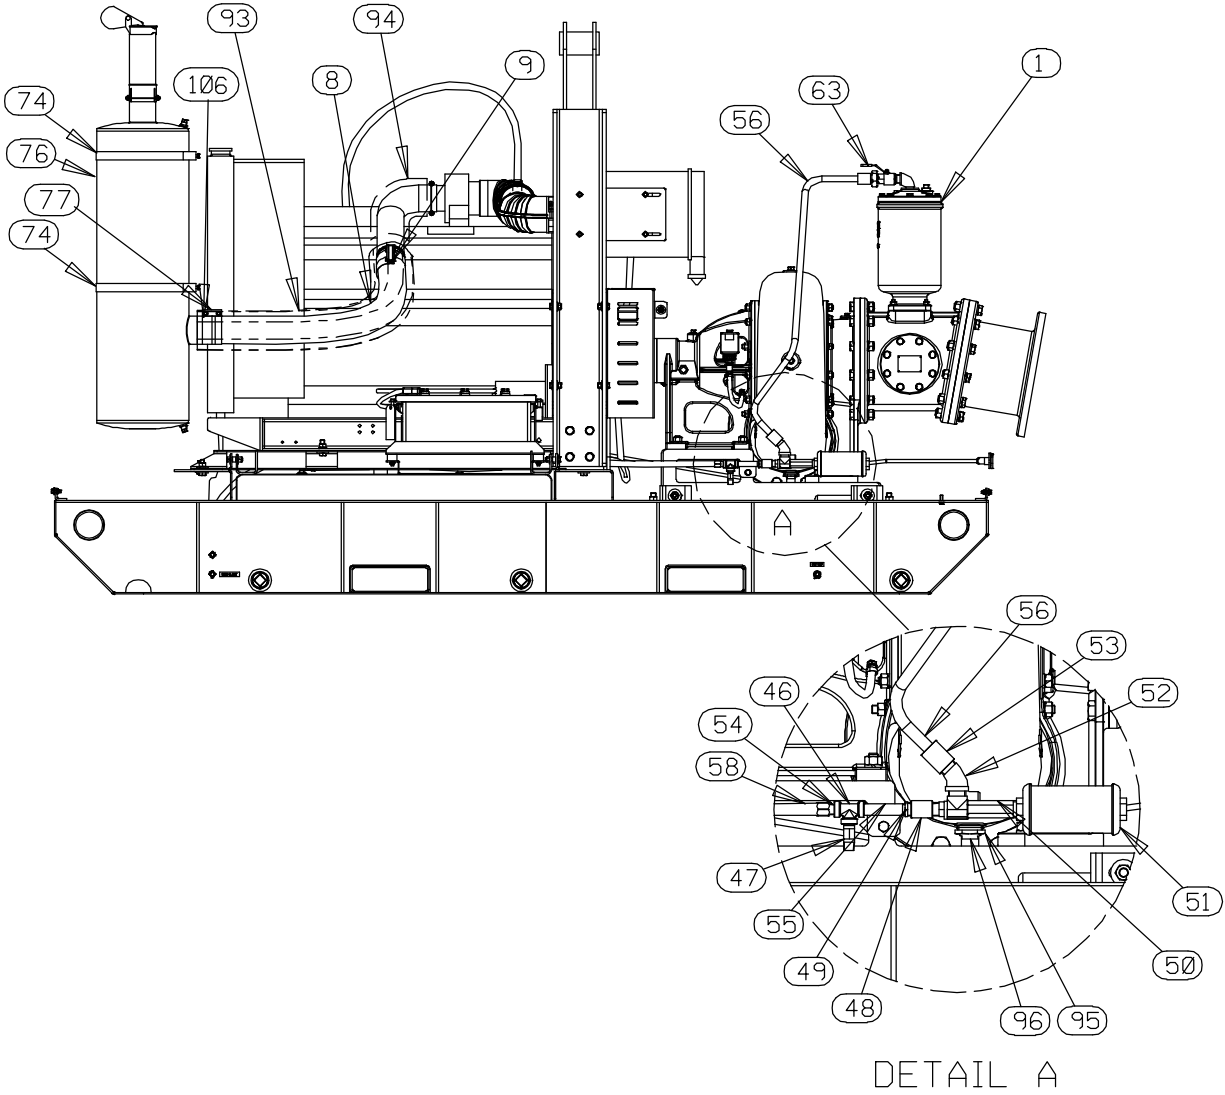

DRIVE DETAILS AND CONTROL PANEL MOUNT

Figure 3. Pump Model PA12A60-B-6068H-ESP (Cont'd)

PARTS LIST
Pump Model PA12A60-B-6068H-ESP (Cont'd)
 (From S/N 1501367 Up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP MODEL ASSEMBLY	46133-726	----	1
8	4" FLEX EXHAUSTE TUBE x 48" LG.	29334-409	----	1
9	4" BAND CLAMP	29334-283	----	2
23	BUSHING	24131-531	----	1
24	SPROCKET	24271-001	----	1
25	PUMP DRIVE BELT	24154-001	----	1
33	FLAT WASHER	K08	15991	10
34	LOCK WASHER	J08	15991	2
35	HEX NUT	D08	15991	6
36	HEX HD CAPSCREW	B0804	15991	2
46	PIPE TEE	U08	11999	1
47	PRESSURE RELIEF VALVE	26662-028	----	1
48	PIPE COUPLING	AE12	15079	1
49	REDUCER PIPE BUSHING	AP1208	15079	1
50	VENTURI	26817-001	----	1
51	VENTURI MUFFLER	29334-091	----	1
52	STREET ELBOW	AGS16	11999	1
53	PIPE COUPLING	AE16	15079	1
54	CONNECTOR	26351-065	----	1
55	PUMP SUPPORT ASSEMBLY	41581-041	----	1
56	VACUUM HOSE ASSEMBLY	46341-021	----	1
57	HOSE BARB FITTING	26523-015	----	2
58	HOSE ASSEMBLY	46341-026	----	1
63	BALL VALVE	26631-054	----	2
64	ENGINE DRIVE ASSEMBLY	44162-179	----	1
74	MUFFLER MOUNTING BRACKET	29334-281	----	2
76	MUFFLER	29334-109	----	1
93	EXHAUST BLANKET	29334-282	----	1
94	EXHAUST BLANKET	29334-292	----	1
95	REDUCER BUSHING	AP2416	11999	1
96	PIPE NIPPLE	T1624	15079	1
106	4" STRAIGHT PIPE	31418-156	15000	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

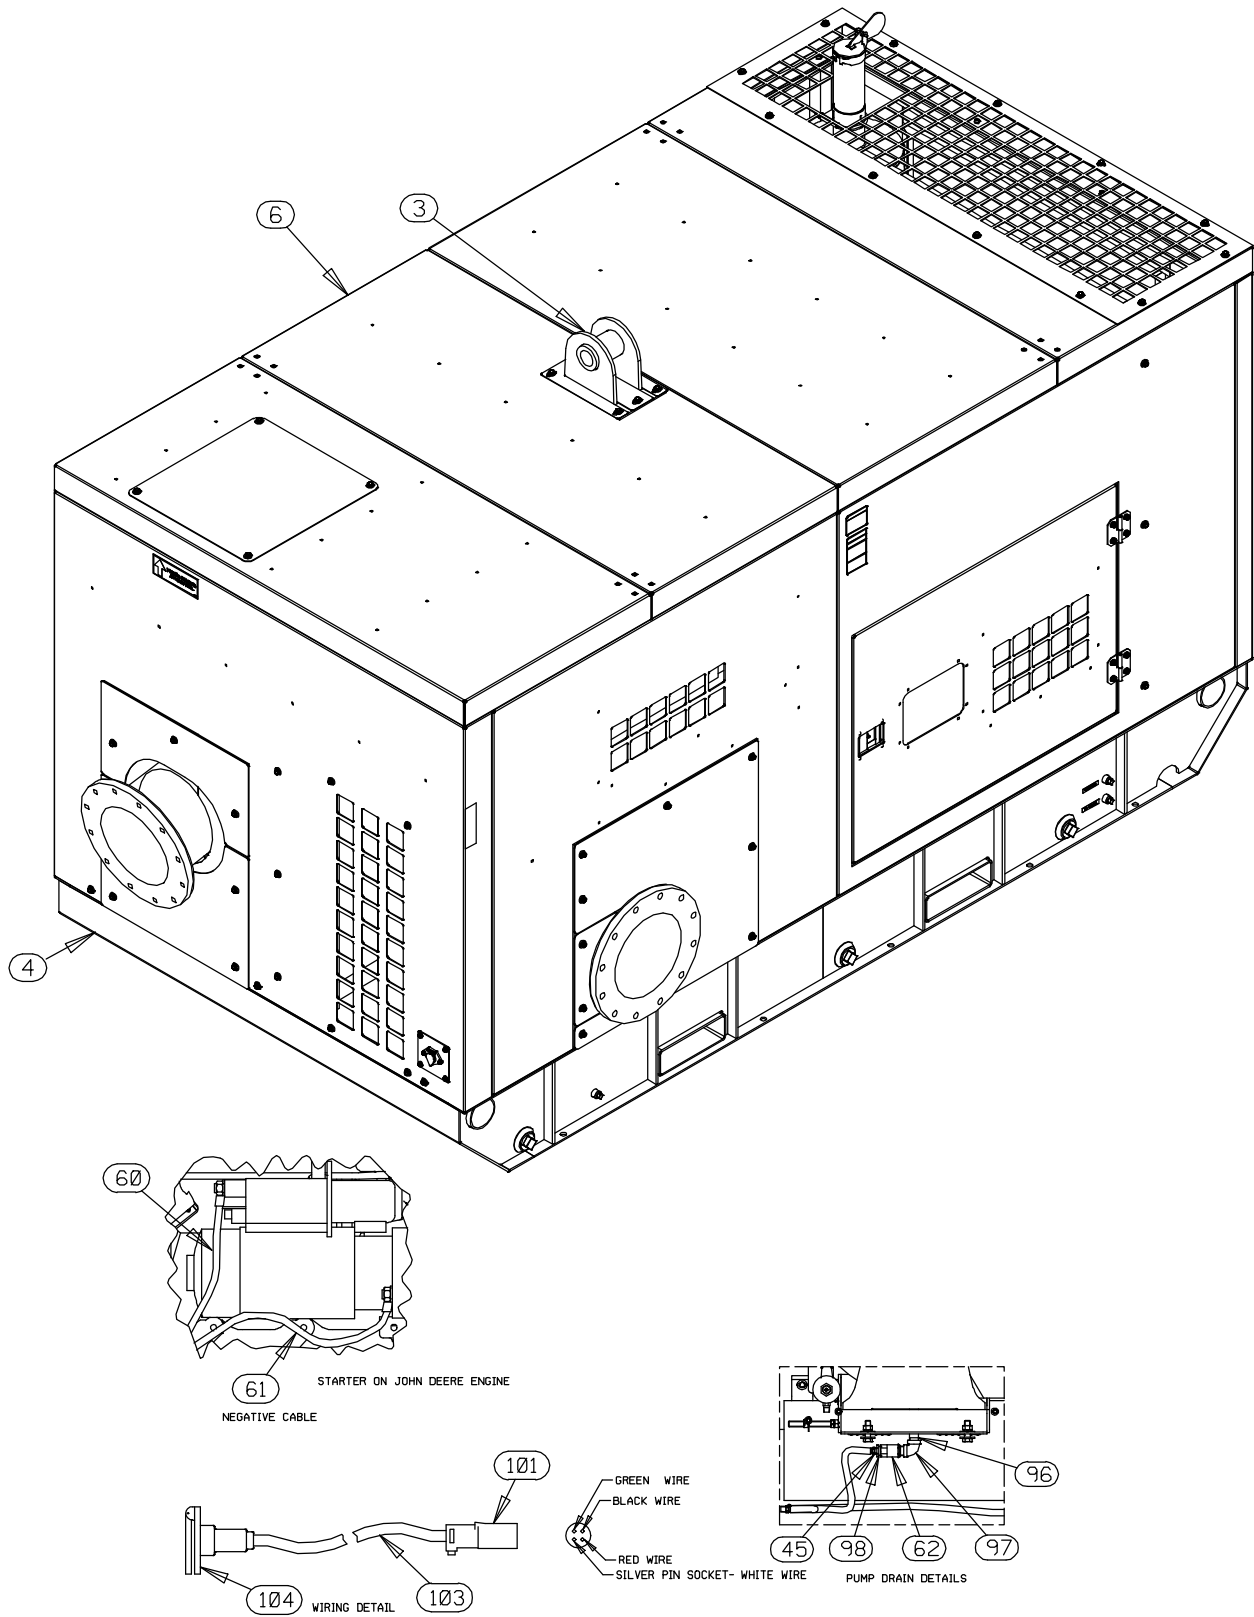


Figure 4. Pump Model PA12A60-B-6068H-ESP (Cont'd)

PARTS LIST
Pump Model PA12A60-B-6068H-ESP (Cont'd)
 (From S/N 1501367 Up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
3	BAIL/GUARD ASSY	42358-002	----	1
4	BASE ASSEMBLY	41565-593	24150	1
6	ENCLOSURE ASSEMBLY	42164-028	----	1
45	HOSE BARB FITTING	26523-391	----	7
60	POS BATTERY CABLE ASSEMBLY	47311-111	----	1
61	NEG BATTERY CABLE ASSEMBLY	47311-185	----	1
62	CONNECTOR	26351-059	----	1
96	PIPE NIPPLE	T1624	15079	1
97	ELBOW	R16	11999	1
98	REDUCER BUSHING	AP1608	11999	1
101	PLUG CONNECTOR	27261-301	----	1
103	16/4 x 96" LG. CABLE	188141-147	----	1
104	SOCKET CONNECTOR	27263-001	----	1
	NOT SHOWN:			
	INSTRUCTION DECAL	38818-144	----	1
	GUARD WARNING STICKER	38816-063	----	1
	ACCESS PANEL DECAL	38817-089	----	1
	WARNING DECAL	38816-203	----	2
	WARNING DECAL	38816-345	----	2
	OIL DRAIN LABEL	38816-323	----	1
	RADIATOR DRAIN LABEL	38816-322	----	1
	FUEL TANK DRAIN LABEL	38816-321	----	1
	PUMP DRAIN LABEL	38816-320	----	1
	NAME PLATE	38818-127	13000	1
	DRIVE SCREW	BM#04-03	17000	4
	LUBRICATION DECAL	38816-074	----	1
	G-R DECAL	GR-03	----	1
	DISCHARGE STICKER	6588BJ	----	1
	SUCTION STICKER	6588AG	----	1
	ENGINE STARTUP TAG	38816-269	----	1
	OIL LEVEL DECAL	38816-123	----	2
	PRIME AIRE DECAL	38812-078	----	2
	BATTERY TAG	38818-506	----	1
	WARNING DECAL	2613FE	----	2
	CAUTION DECAL	2613FJ	----	1
	LEVEL CONTROL LABEL	38816-332	----	1
	38' FOAM TAPE	18668-001	----	1
	FLOAT SWITCH KIT	48312-980	----	1
	INSTRUCTION DECAL	38817-024	----	1
	SILENT UNIT DECAL KIT	48154-812	----	1

ILLUSTRATION

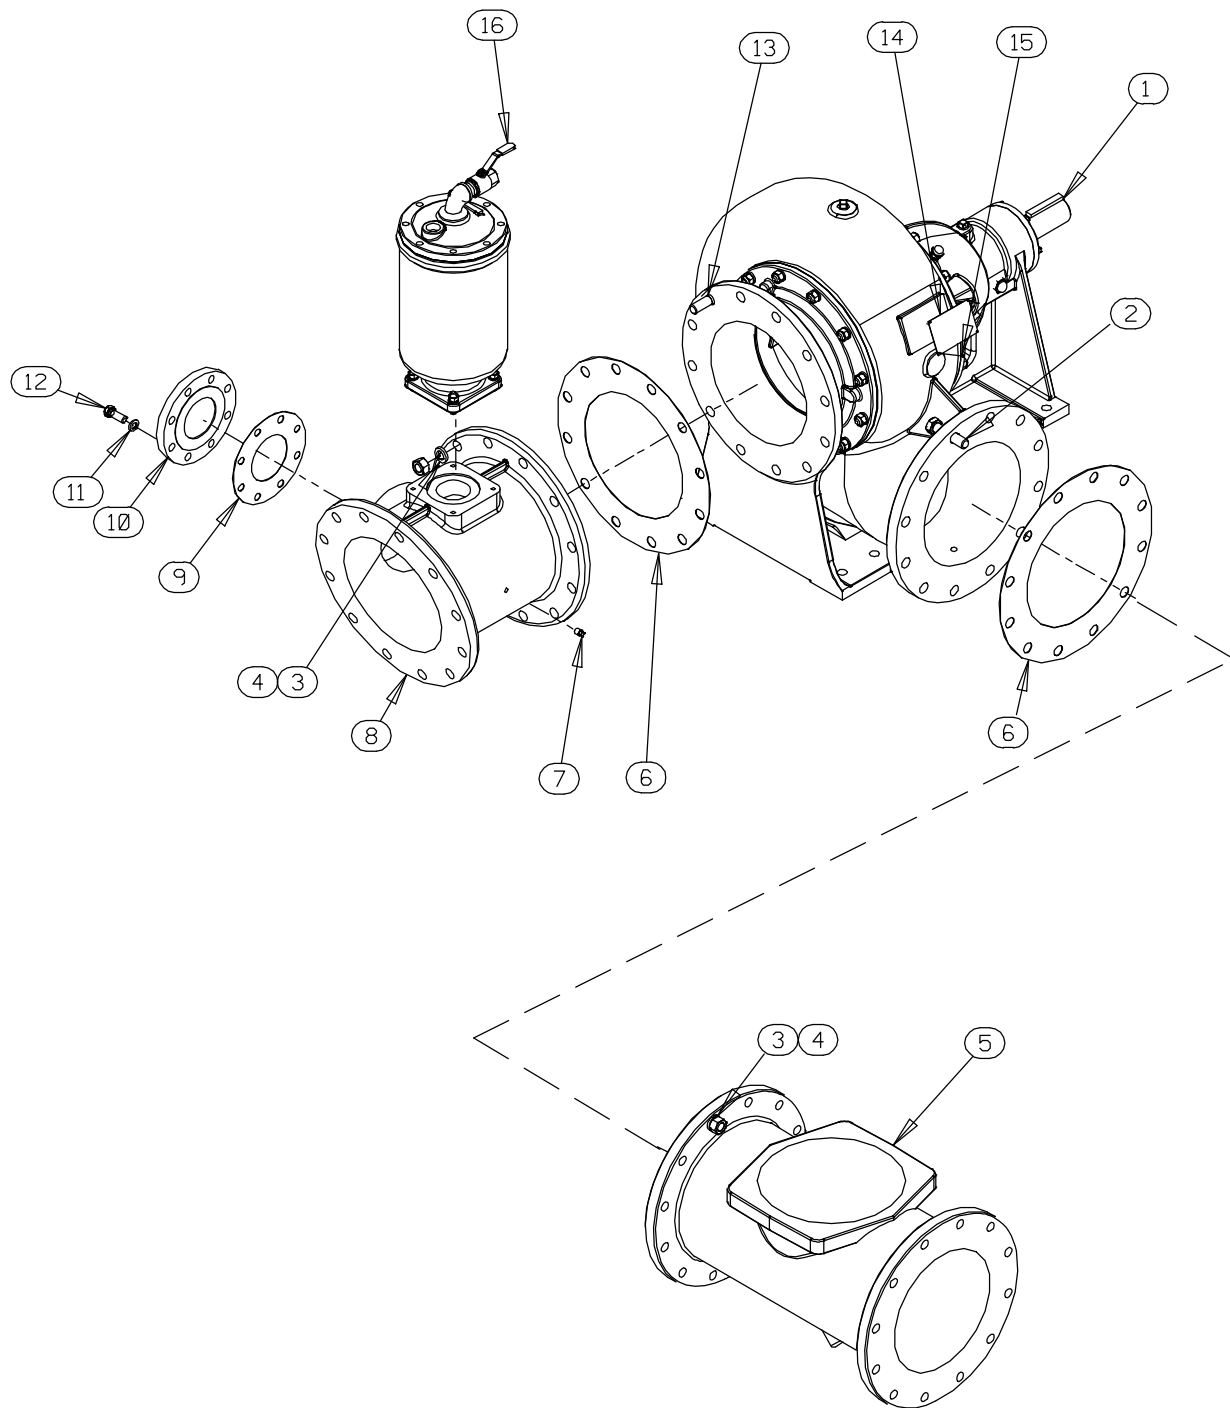


Figure 5. 46133-726 Pump Model Assembly

PARTS LIST
46133-726 Pump Model Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP ASSMEBLY	612M60-B	---	1
2	HEX HD CAPSCREW	B1416	15991	12
3	LOCKWASHER	J14	15991	24
4	HEX NUT	D14	15991	24
5	12" CHECK VALVE	26642-128	---	1
	-FLAPPER	26688-003	---	1
	-COVER GASKET	26688-004	---	1
6	FLANGE GASKET	4991G	18000	1
7	PIPE PLUG	P04	15079	1
8	12" SPOOL	38642-622	10000	1
9	* BLIND FLANGE GASKET	25113-034	---	1
10	4" BLIND FLANGE ASSY	42111-358	---	1
11	LOCKWASHER	J10	15991	8
12	HEX HD CAPSCREW	B1007	15991	8
13	HEX HD CAPSCREW	B1413	15991	12
14	NAME PLATE	38818-127	13000	REF
15	DRIVE SCREW	BM#04-03	17000	REF
16	PRIMING CHAMBER KIT	48275-006	---	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

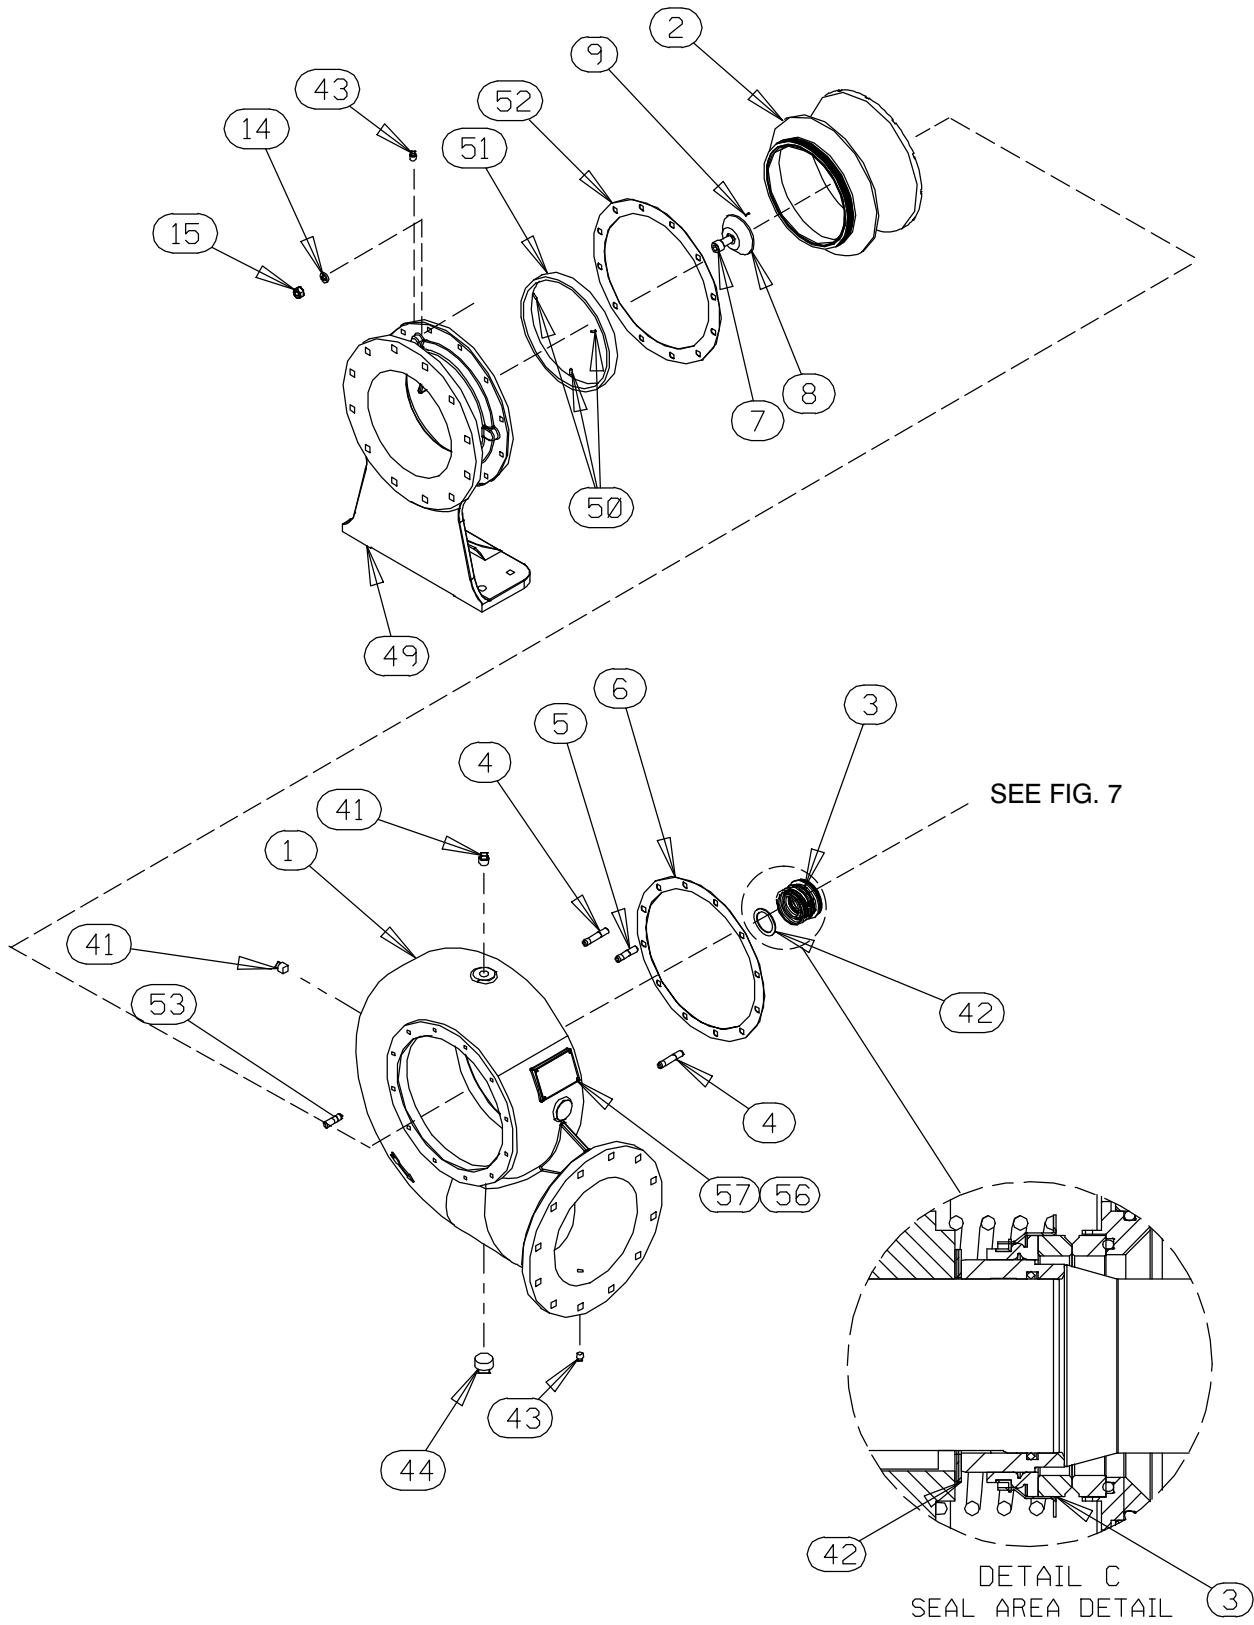


Figure 6. 612M60-B Pump Model Assembly

PARTS LIST
612M60-B Pump Model Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP CASING	38219-305	10010	1	34 *	ROLLER BEARING	23528-005	----	1
2 *	IMP/WEAR RING ASSY	46151-022	24110	1	35	BEARING CAP	38322-425	10010	1
	-IMPELLER	NOT AVAILABLE		1	36	AIR VENT	S1730	----	1
	* -WEAR RING	4182A	11030	1	37 *	BEARING CAP O-RING	25151-266	----	1
3 *	SEAL ASSEMBLY	46512-109	----	1	38	PIPE COUPLING	AE06	15079	1
4	STUD	C1013	15991	3	39	PIPE NIPPLE	T0608	15079	1
5	STUD	C1011	15991	9	40	SEAL PLATE	38272-717	10000	1
6 *	GASKET	38674-434	18000	1	41	PIPE PLUG	P12	15079	2
7 *	SOCKET HD CAPSCREW	BD1206	15990	1	42	IMP ADJ SHIM SET	48261-033	----	REF
8 *	IMPELLER WASHER	31167-022	15030	1	43	PIPE PLUG	P06	15079	2
9 *	ROLL PIN	S2197	----	1	44	CASING DRAIN PLUG	P24	10009	1
10	HOSE CLAMP	26518-642	----	2	45	SEAL PLATE COVER	38242-708	10000	1
11	MALE CONNECTOR	26523-409	----	2	46	HEX HD CAPSCREW	B0503-1/2	15991	6
12	BOTTLE OILER BRKT	41881-811	24150	1	47	LOCK WASHER	J05	15991	6
13	FLAT WASHER	K10	15991	1	48	.38" ID X 11" LG HOSE	18513-054	----	1
14	LOCK WASHER	J10	15991	22	49	SUCTION HEAD	4180	10010	1
15	HEX NUT	D10	15991	24	50	SPIRAL PIN	21137-123	----	3
16	MACHINE SCREW	X0405	15991	2	51 *	WEAR RING	4181A	140001	1
17	LOCK WASHER	J04	15991	2	52 *	GASKET	4180G	18000	1
18	SIGHT GAUGE	S1471	----	2	53	STUD	C1009	15991	12
19	VENTE PIPE PLUG	38649-009	15079	1	54	BOTTLE OILER	26713-004	----	1
20	PEDESTAL	38257-520	10000	1	55	SNAP RING	24124-057	----	1
21	PIPE PLUG	P04	15079	1	56	DRIVE SCREW	BM#04-03	17000	4
22	HEX HD CAPSCREW	B0605	15991	12	57	NAME PLATE	38818-127	13000	1
23 *	OIL SEAL	25258-845	----	3	NOT SHOWN:				
24	BEARING CAP	38322-429	10000	1		SUCTION STICKER	6588AG	----	1
25 *	O-RING	25152-249	----	1		ROTATION DECAL	2613M	----	1
26	BEARING ADJ SHIM SET	48261-055	----	1		STRAINER	46641-012	24150	1
27	BEARING LOCKNUT	23962-015	----	1		G-R DECAL	GR-06	----	1
28	BEARING LOCK WASHER	23962-515	----	1		WARNING DECAL	2613FE	----	1
29 *	BEARING CAP GASKET	4184G	18000	1		PAPER INSTR TAG	38817-024	----	1
30 *	BALL BEARING	23413-015	----	2		LUBRICATION DECAL	38816-079	----	2
31 *	SHAFT KEY	N1016	15990	1		PAPER INSTR TAG	38817-011	----	1
32 *	IMPELLER SHAFT	38512-522	17040	1		OIL LEVEL DECAL	38816-123	----	1
33 *	IMPELLER KEY	N0809	15990	1		DISCHARGESTICKER	6588BJ	----	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

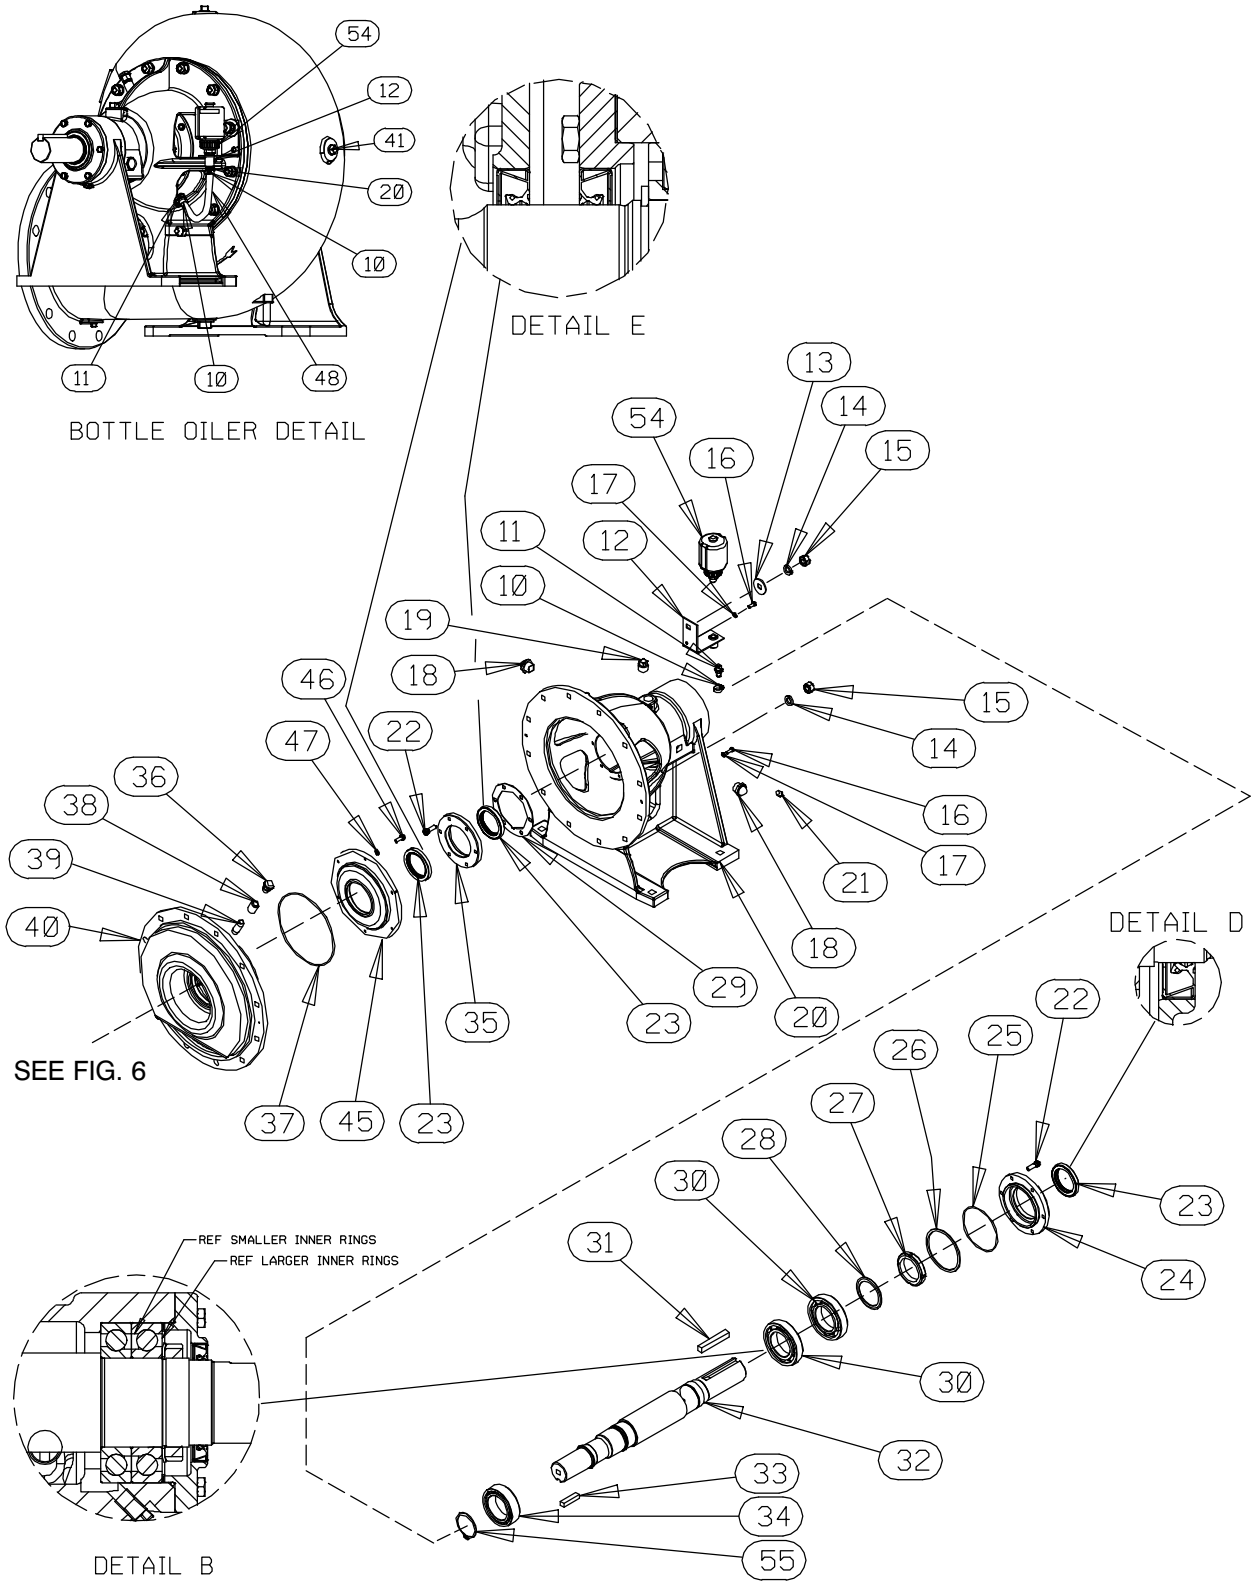


Figure 7. 612M60-B Pump Model Assembly (Cont'd)

PARTS LIST
612M60-B Pump Model Assembly (Cont'd)

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP CASING	38219-305	10010	1	34 *	ROLLER BEARING	23528-005	----	1
2 *	IMP/WEAR RING ASSY	46151-022	24110	1	35	BEARING CAP	38322-425	10010	1
	-IMPELLER	NOT AVAILABLE		1	36	AIR VENT	S1730	----	1
	* -WEAR RING	4182A	11030	1	37 *	BEARING CAP O-RING	25151-266	----	1
3 *	SEAL ASSEMBLY	46512-109	----	1	38	PIPE COUPLING	AE06	15079	1
4	STUD	C1013	15991	3	39	PIPE NIPPLE	T0608	15079	1
5	STUD	C1011	15991	9	40	SEAL PLATE	38272-717	10000	1
6 *	GASKET	38674-434	18000	1	41	PIPE PLUG	P12	15079	2
7 *	SOCKET HD CAPSCREW	BD1206	15990	1	42	IMP ADJ SHIM SET	48261-033	----	REF
8 *	IMPELLER WASHER	31167-022	15030	1	43	PIPE PLUG	P06	15079	2
9 *	ROLL PIN	S2197	----	1	44	CASING DRAIN PLUG	P24	10009	1
10	HOSE CLAMP	26518-642	----	2	45	SEAL PLATE COVER	38242-708	10000	1
11	MALE CONNECTOR	26523-409	----	2	46	HEX HD CAPSCREW	B0503-1/2	15991	6
12	BOTTLE OILER BRKT	41881-811	24150	1	47	LOCK WASHER	J05	15991	6
13	FLAT WASHER	K10	15991	1	48	.38" ID X 11" LG HOSE	18513-054	----	1
14	LOCK WASHER	J10	15991	22	49	SUCTION HEAD	4180	10010	1
15	HEX NUT	D10	15991	24	50	SPIRAL PIN	21137-123	----	3
16	MACHINE SCREW	X0405	15991	2	51 *	WEAR RING	4181A	140001	1
17	LOCK WASHER	J04	15991	2	52 *	GASKET	4180G	18000	1
18	SIGHT GAUGE	S1471	----	2	53	STUD	C1009	15991	12
19	VENTE PIPE PLUG	38649-009	15079	1	54	BOTTLE OILER	26713-004	----	1
20	PEDESTAL	38257-520	10000	1	55	SNAP RING	24124-057	----	1
21	PIPE PLUG	P04	15079	1	56	DRIVE SCREW	BM#04-03	17000	4
22	HEX HD CAPSCREW	B0605	15991	12	57	NAME PLATE	38818-127	13000	1
23 *	OIL SEAL	25258-845	----	3	NOT SHOWN:				
24	BEARING CAP	38322-429	10000	1		SUCTION STICKER	6588AG	----	1
25 *	O-RING	25152-249	----	1		ROTATION DECAL	2613M	----	1
26	BEARING ADJ SHIM SET	48261-055	----	1		STRAINER	46641-012	24150	1
27	BEARING LOCKNUT	23962-015	----	1		G-R DECAL	GR-06	----	1
28	BEARING LOCK WASHER	23962-515	----	1		WARNING DECAL	2613FE	----	1
29 *	BEARING CAP GASKET	4184G	18000	1		PAPER INSTR TAG	38817-024	----	1
30 *	BALL BEARING	23413-015	----	2		LUBRICATION DECAL	38816-079	----	2
31 *	SHAFT KEY	N1016	15990	1		PAPER INSTR TAG	38817-011	----	1
32 *	IMPELLER SHAFT	38512-522	17040	1		OIL LEVEL DECAL	38816-123	----	1
33 *	IMPELLER KEY	N0809	15990	1		DISCHARGESTICKER	6588BJ	----	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

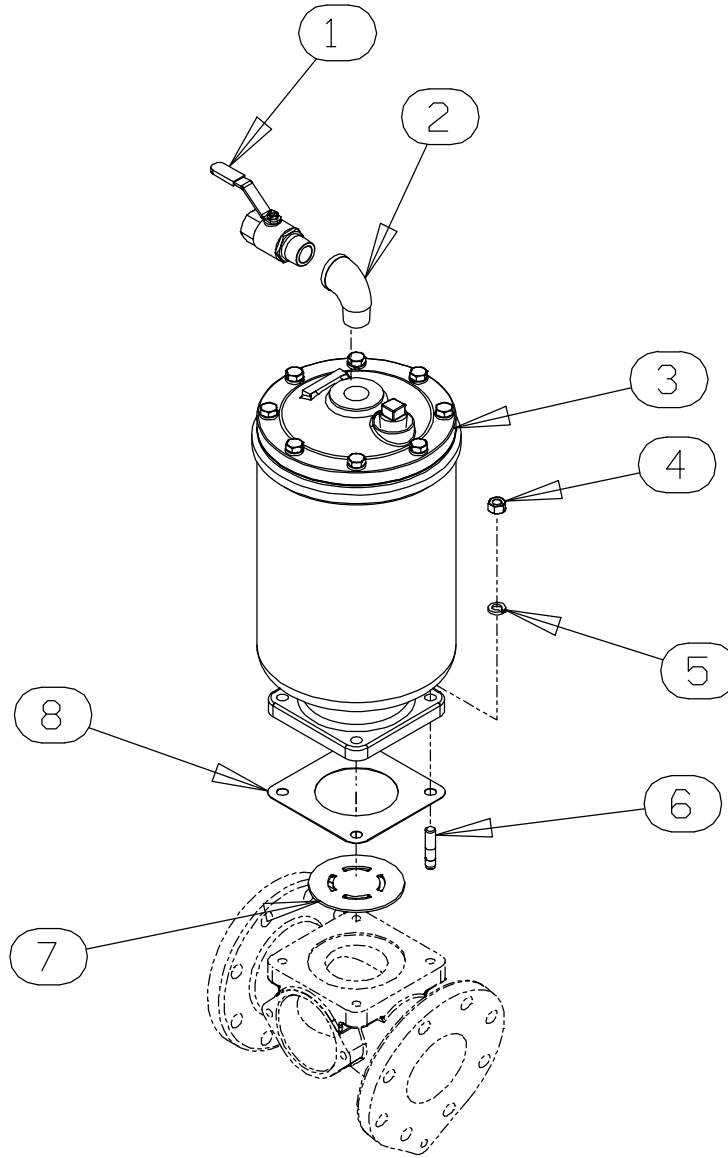


Figure 8. 48275-006 Priming Chamber Kit

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	BALL VALVE	26631-054	---	1
2	STREET ELBOW	RS16	11999	1
3	PRIMING CHAMBER ASSEMBLY	46112-709	---	1
4	HEX NUT	D08	15991	4
5	LOCK WASHER	J08	15991	4
6	STUD	C0809	15991	4
7	BAFFLE	31113-011	17000	1
8	* GASKET	38687-053	19060	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

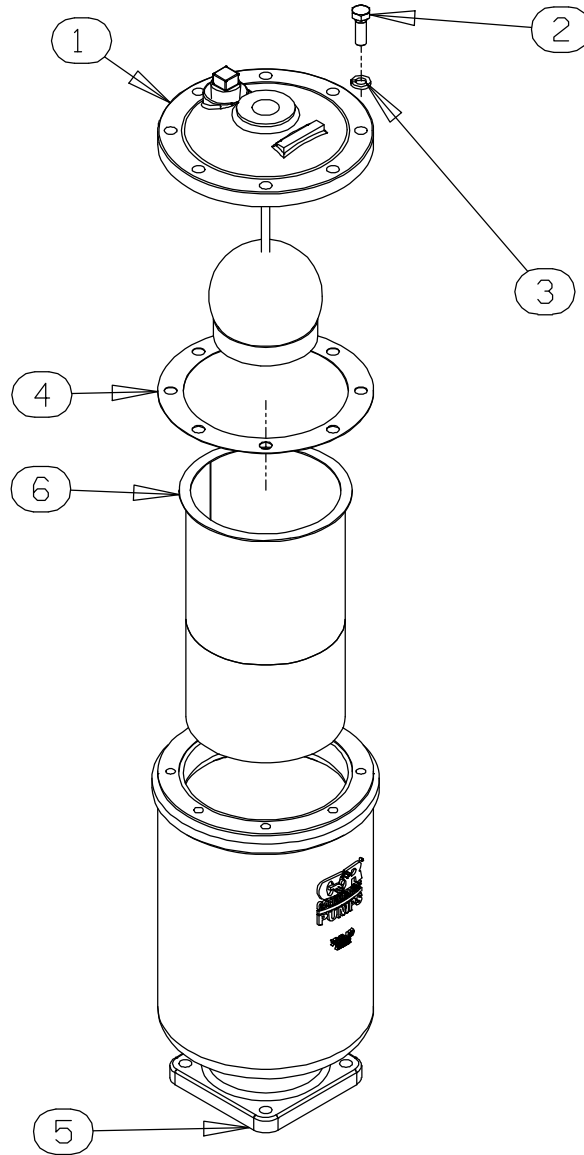


Figure 9. 46112-709 Priming Chamber Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PRIMING VALVE -ORIFICE BUTTON	26664-007 26688-021	--- ---	1 REF
2	HEX HD CAPSCREW	B0806	15991	8
3	LOCKWASHER	J08	15991	8
4	* PRIMING VALVE GASKET	38683-657	19060	1
5	PRIMING CHAMBER	38343-020	10000	1
6	STRAINER ASSY	46641-222	17000	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION


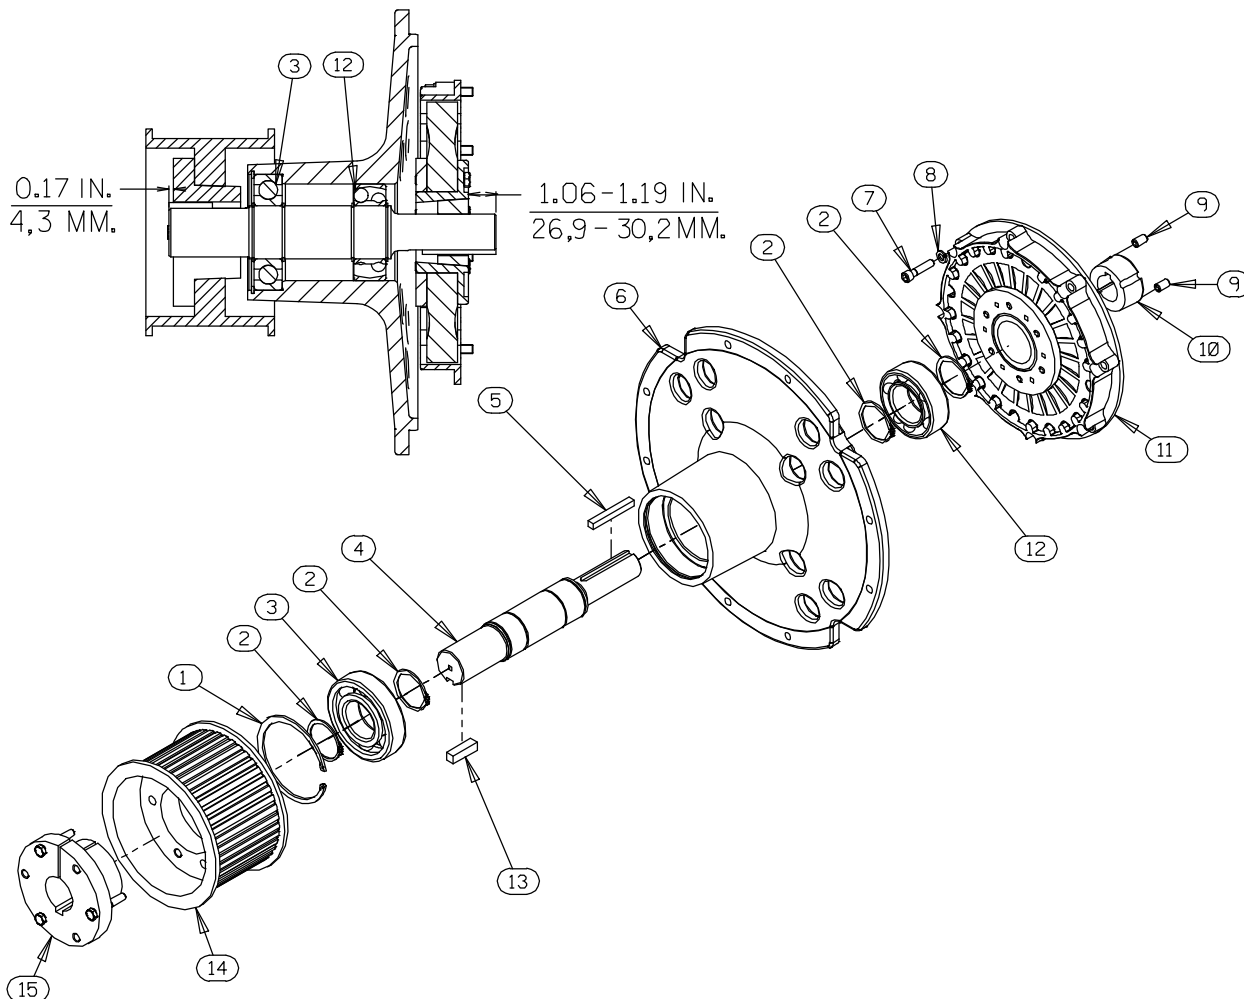


Figure 10. 44162-179 Engine Drive Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	RETAINING RING	24121-075	---	1
2	RETAINING RING	S215	---	4
3	* BALL BEARING	23282-012	---	1
4	* OUTPUT SHAFT	38512-051	1706H	1
5	* KEY	N0612	15990	1
6	BEARING HOUSING	38251-001	11010	1
7	SOCKET HEAD CAPSCREW	BD0606-1/2	15991	8
8	LOCK WASHER	J06	15991	8
9	ALLEN HEAD SETSCREW	GA0703-1/2	15990	REF
10	BUSHING	24131-496	---	1
11	COUPLING	24391-103	---	1
12	* BALL BEARING	23431-012	---	1
13	* KEY	N0807	15990	1
14	SPROCKET	24271-004	---	1
15	TAPER LOCK BUSHING	24131-526	---	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

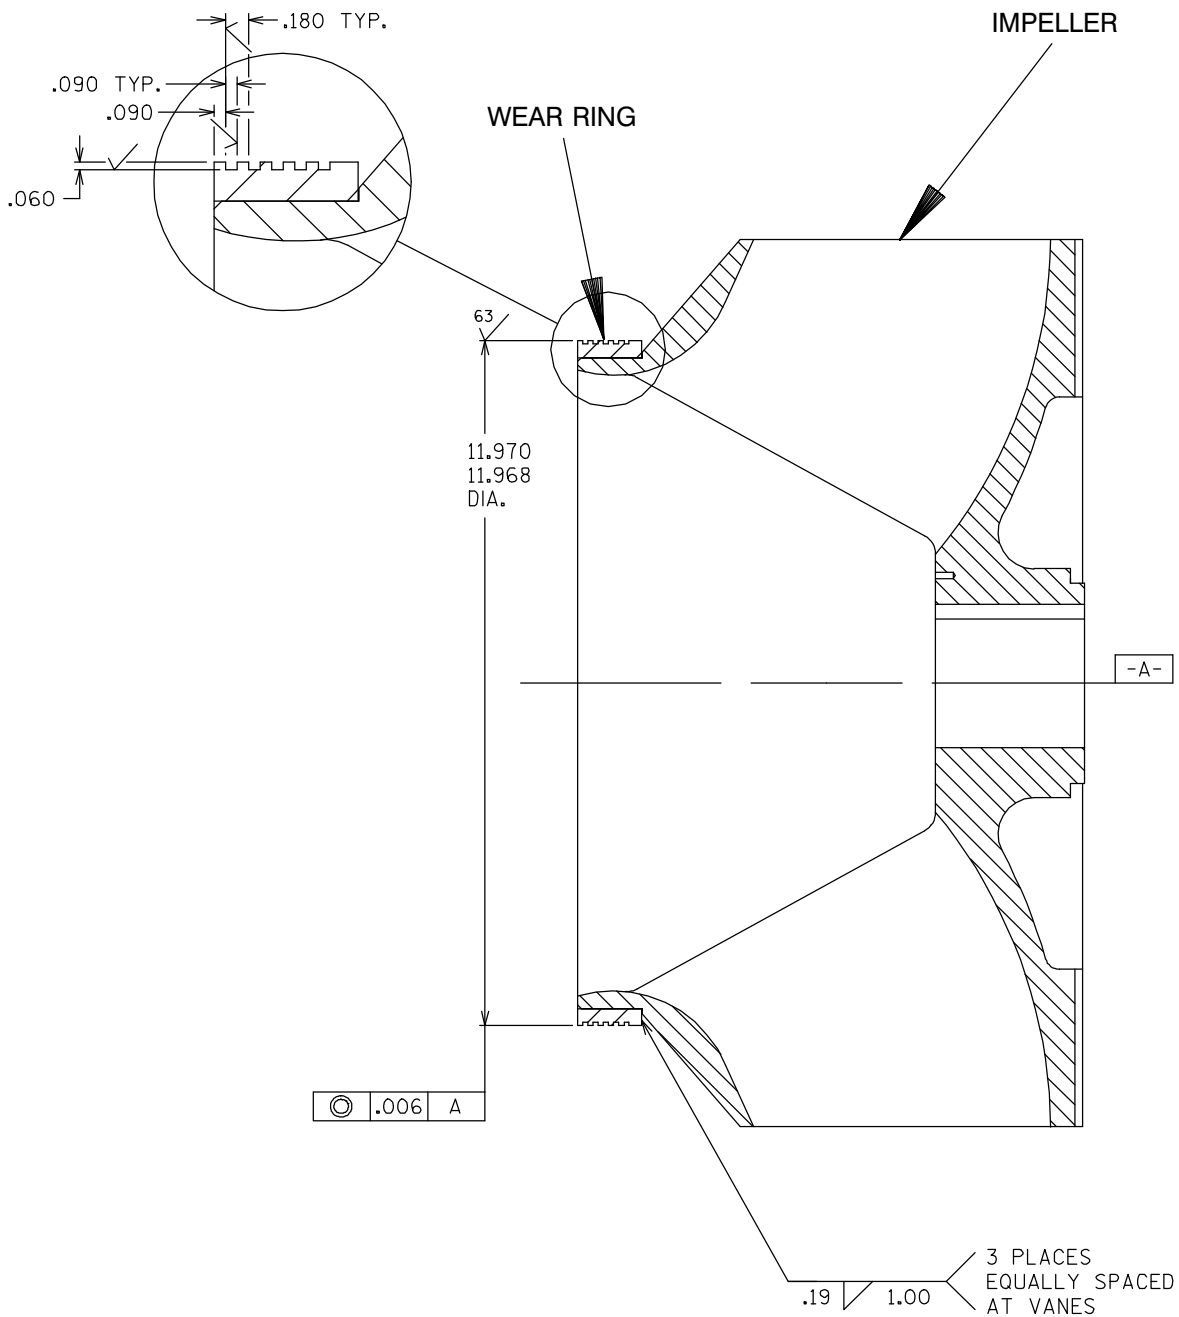

NOTE: UNLESS OTHERWISE SPECIFIED,
MACHINED SURFACES TO BE 125 RMS.

Figure 11. Impeller Assembly Machining Tolerances

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Review all SAFETY information in Section A.

Follow the instructions on all tags, label and decals attached to the pump.

This pump requires little service due to its rugged, minimum-maintenance design. However, if it becomes necessary to inspect or replace the wearing parts, follow these instructions which are keyed to the illustrations (see Figures 1 through 11) and the accompanying parts list.

This manual will alert personnel to known procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel. However, this manual cannot possibly anticipate and provide detailed precautions for every situation that might occur during maintenance of the unit. Therefore, it is the responsibility of the owner/maintenance personnel to ensure that **only** safe, established maintenance procedures are used, and that any procedures not addressed in this manual are performed **only** after establishing that neither personal safety nor pump integrity are compromised by such practices.

Before attempting to service the pump, shut down the engine and take precautions to ensure that the pump will remain inoperative. Close all valves in the suction and discharge lines.

For engine disassembly and repair, consult the literature supplied with the engine, or contact your local engine representative.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.

3. Allow the pump to completely cool if overheated.
4. Check the temperature before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



This pump may be used to handle materials which could cause illness through direct exposure or emitted fumes. Wear adequate protective clothing when working on the pump or piping.



No instructions are provided in this manual for disassembly and/or removal of the pump enclosure. If removal of the enclosure is required for pump service, be sure to use safe shop practices so as not to endanger personnel, and use caution to prevent damage to the enclosure.



Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.

Priming Chamber Removal And Disassembly

(Figure 8)

Disconnect both the suction piping and the air discharge tubing from the priming valve assembly (3). Support the priming valve assembly using a sling and a suitable lifting device. Disengage the hardware (4 and 5) and separate the priming valve assembly, gasket (8) and baffle (7) from the spool (8, Figure 5).

(Figure 9)

Remove the hardware (2 and 3) securing the priming valve (1) to the priming chamber (6). Carefully lift the valve components from the priming chamber. Remove the gasket (4) and clean the mating surfaces.

If the priming valve float is stuck or the strainer (6) is clogged, it can usually be cleaned without further disassembly.

The only serviceable part of the priming valve is the orifice button (not shown). If liquid continues to bypass through the priming chamber after adjusting the orifice button (see **Priming Chamber Reassembly and Installation** for adjustment), the button may require replacement. To replace the orifice button, remove one of the “e-clips” from the pivot pin closest to the orifice button and remove the pivot pin. This will allow the linkage to be raised high enough to access the orifice button.

Remove the hex nut and lockwasher securing the orifice button to the linkage bar and unscrew the orifice button from the linkage bar.

Discharge Check Valve Removal and Disassembly

(Figure 5)

Support the discharge check valve assembly (5) using a sling and a suitable lifting device. Remove the hardware (3 and 4) and separate the discharge check valve assembly and gasket (6) from the pump assembly (1).

The flapper and cover gasket are the only serviceable parts of the check valve. If the flapper requires replacement, remove the hardware securing the cover. Separate the valve cap and remove the flapper and gasket.

Suction Head And Wear Ring Removal

(Figure 6)

Unless replacement of the spool gasket (6, Figure 5) is required, the suction head (49) may be removed without separating it from the spool. However, if the spool gasket must be replaced, support the spool with a suitable hoist and sling, remove the hardware (3 and 4, Figure 5) and separate the suction spool and gasket from the suction head.

Remove the hardware securing the suction head (49) to the base. Support the suction head using a suitable hoist and sling. Disengage the hardware (14 and 15) and separate the suction head and wear ring (51) from the pump casing. Remove the suction head gasket (52) and clean the mating surfaces.

Inspect the wear ring for excessive wear or scoring. The wear ring is a press fit into the suction head and is additionally secured with the spiral pins (50). If replacement is required, use a small bit to drill three holes horizontally, 180° apart, through the wear ring between each of the spiral pins. Use a chisel or other suitable tool to complete the cuts through the wear ring. **Use caution** not to damage the suction head bore. Remove the wear ring sections from the suction head. Pull the spiral pins from the suction head.

If no further disassembly is required, see **Suction Head and Wear Ring Installation**.

Pump Casing Removal

(Figure 6)

Support the pump casing using a suitable hoist and sling.



Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. If slings or chains are used to move the pump or components, make sure that the load is balanced; otherwise serious personal injury or death could result. Suction and discharge hoses and piping must be removed from the pump before lifting.

NOTE

When removing the pump casing, use a wire to secure the assembled bottle oiler (54, Figure 7) and bracket (12, Figure 7) above the level of the oil in the seal cavity. This will prevent oil from leaking out of the oiler during disassembly.

If the impeller (2) is to be removed, the impeller screw (7) should be loosened before removing the pump casing. Immobilize the impeller by inserting a wood block through the pump discharge and into the impeller vanes. Remove the impeller screw and washer (8). Remove the wood block from the pump discharge.

Remove the hardware (13, 14 and 15, Figure 7) securing the pump casing and bottle oiler bracket to the pedestal (20, Figure 7).

Pull the pump casing straight away from the pedestal to prevent binding on the impeller. Remove the casing gasket (6) and clean the contacting surfaces.

Impeller Removal**(Figure 6)**

Before removing the impeller, loosen the hose clamp (10, Figure 7) and remove the hose (48, Figure 7) from the lower connector (11, Figure 7). Remove the bottle oiler and bracket assembly and drain the seal cavity. This will prevent the oil in the oiler from escaping when the impeller is removed.

With the impeller screw and washer removed as described in **Pump Casing Removal**, insert a pair of wedges 180° apart between the impeller and the seal plate (40, Figure 7). Tap the wedges alternately to force the impeller off the shaft. Retain the impeller key (33, Figure 7).

Inspect the impeller wear ring for excessive wear or scoring.



Proper replacement of the impeller wear ring requires machining and dynamic balancing the impeller assembly after the new wear ring is welded to the impeller. Failure

to properly install the new wear ring and machine and balance the impeller assembly can result in premature shaft, seal or bearing failure, or other damage to the pump.

To replace the wear ring, grind off the three weld spots securing the wear ring to the impeller. **Use caution** not to damage the impeller. Pry or carefully grind the wear ring off the impeller.

Seal Removal**(Figures 6 and 13)**

This pump is designed with two seals; a primary mechanical seal (3) located directly behind the impeller and a secondary oil seal (23, Figure 7) located in the seal plate cover (45, Figure 7). If the liquid being pumped leaks past the oil seal, both seals should be replaced immediately.

Remove the impeller shims (42). Tie and tag the shims for ease of reassembly. Remove the seal spring. Slide the rotating portion of the seal (consisting of the shaft sleeve and O-ring, bellows and retainer, and rotating element) off the shaft as a unit.

Apply oil to the sleeve and work it up under the rubber bellows. Slide the bellows and retainer off the sleeve. Remove the sleeve O-ring.

Slide the seal plate and remaining seal components off the shaft. Disengage the hardware (46 and 47, Figure 7) and separate the seal plate cover and O-ring (37, Figure 7) from the seal plate.

Use a suitably sized dowel to press the stationary portion of the seal out of the seal plate. Press the oil seal out of the seal plate cover.

If no further disassembly is required, refer to **Seal Installation**.

Pedestal Assembly Removal**(Figure 2)**

Disassembly of the pedestal requires separation of the pump and driver. Disengage the hardware securing the belt guard to the lifting bail and remove the guard.

See Figure 1 and loosen, but do not remove, the hardware (13, 14, 17 and 18) securing the pump support assembly (55) to the base.

Loosen the outer hardware (13 and 14) on the threaded rods (22). Unscrew the jam nuts (11) until they engage the adjusting brackets. Continue to unscrew the jam nuts in an alternating sequence to “push” the pump assembly (1, Figure 3) and pump support assembly toward the discharge check valve. When sufficient clearance is obtained, remove the pump drive belt (25, Figure 3) from the sprocket and drive assembly (24 and 64, Figure 3).

Remove the hardware (14, 17 and 18) securing the pedestal to the pump support assembly. Use a suitable hoist and sling to remove the pedestal assembly.

Pump Shaft and Bearing Removal and Disassembly

(Figure 3)

When the pump is properly operated and maintained, the pedestal should not require disassembly. Disassemble the shaft and bearings **only** when there is evidence of wear or damage.



Shaft and bearing disassembly in the field is not recommended. These operations should be performed only in a properly equipped shop by qualified personnel.

The sprocket and bushing (23 and 24) must be removed from the drive end of the shaft before disassembling the pedestal (20, Figure 7). To remove the sprocket, remove the screws securing the sprocket to the hub, then reinstall the screws in the tapped holes in the sprocket. Tighten the screws in an alternating sequence to press against the hub shoulder and “jack” the sprocket off the hub.

With the sprocket removed, the hub can be pulled or pried off the shaft. Remove the shaft key.

(Figure 7)

Before disassembling the pedestal, remove the pedestal drain plug (21) and drain the oil from the pedestal. Clean and reinstall the pipe plug.

Disengage the capscrews (22) and remove the outboard bearing cap (24), O-ring (25) and oil

seal (23). Remove the bearing shims (26). Press the oil seal from the bearing cap.

Straighten the tab on the washer (28) securing the bearing lock nut (27). Use a spanner wrench to remove the lock nut. Remove the tab washer.

Disengage the capscrews (22) and remove the inboard bearing cap (35) and oil seal (23). Remove the bearing cap gasket (29) and clean the mating surfaces. Press the oil seal from the bearing cap.

Place a block of wood against the impeller end of the shaft (32) and tap the shaft and assembled bearings (30 and 34) out of the pedestal.

After removing the shaft and bearings, clean and inspect the bearings **in place** as described in **Bearing Cleaning And Inspection**.

The bearing tolerances provide a tight press fit onto the shaft and a snug slip fit into the pedestal. Replace the bearings, shaft, or pedestal if the proper bearing fit is not achieved.

If bearing replacement is required, remove the retaining ring (55) and use a bearing puller to remove the inboard and outboard bearings from the shaft.

Engine Drive Disassembly

(Figure 10)

This engine is equipped with a jackshaft type drive assembly as shown in Figure 10.


To remove the sprocket (14), remove the capscrews securing the taperlock bushing (15) to the sprocket. Reinstall the capscrews in the tapped holes in the bushing and use a suitable puller to pull the bushing and sprocket off the output shaft (4). Retain the key (13).

Further disassembly requires separating the remaining drive components from the engine. Remove the hardware (not shown, supplied with the engine) securing the bearing housing (16) to the engine. Pull the shaft and bearing housing straight away from the engine. The rubber drive element of the coupling (11) will separate from the drive ring secured to the engine flywheel with the hardware (7 and 8). Disengage the hardware to remove the drive ring from the flywheel.

To remove the flexible portion of the coupling from the output shaft, unscrew the two allen head set-

screws (9) from the bushing (10). Screw one of the setscrews into the hole on the circumference of the bushing to separate the coupling and bushing. When the parts separate, remove the bushing, and slide the coupling off the shaft. Remove the key (5).

When properly operated and maintained, the output shaft and bearings should not require disassembly. Disassemble the shaft and bearings **only** when there is evidence of wear or damage.

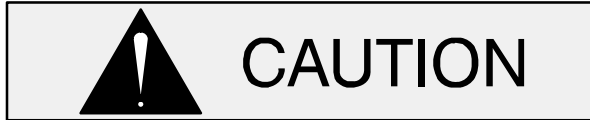

Shaft and bearing disassembly in the field is not recommended. These operations should be performed only in a properly equipped shop by qualified personnel.

To remove the shaft and bearings (3 and 12), use snap ring pliers to remove the retaining ring (1). Use a wood block to tap the shaft and bearings from the bearing housing from the driven end.

After removing the shaft and bearings, clean and inspect the bearings **in place** as described in **Bearing Cleaning And Inspection**.



To prevent damage during removal from the shaft, it is recommended that bearings be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

The bearing tolerances provide a tight press fit onto the shaft and a snug slip fit into the bearing housing. Replace the bearings, shaft, or bearing housing if the proper bearing fit is not achieved.

If bearing replacement is required, remove the outboard retaining rings (2) and use a bearing puller to remove the inboard (3) and outboard (12) bearings from the shaft.

It is not necessary to remove the inboard bearing retaining rings unless replacement is required. Use snap ring pliers to remove the retaining rings as required.

Bearing Cleaning And Inspection

(Figure 7)

Clean the pedestal, bearing housing, shafts and all component parts (except the bearings) with a soft cloth soaked in cleaning solvent. Inspect the parts for wear or damage and replace as necessary.



Most cleaning solvents are toxic and flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.

Clean the bearings thoroughly in **fresh** cleaning solvent. Dry the bearings with filtered compressed air and coat with light oil.



Bearings must be kept free of all dirt and foreign material. Failure to do so will greatly shorten bearing life. **Do not** spin dry bearings. This may scratch the balls or races and cause premature bearing failure.

Rotate the bearings by hand to check for roughness or binding. Inspect the bearing balls (or rollers) on open-type bearings. If rotation is rough or the balls or rollers are discolored, replace the bearings.

Engine Drive Reassembly

(Figure 10)

Inspect the output shaft for distortion, nicks, scratches, damaged keyways or galling on the bearing seating surfaces. Dress small nicks and burrs with a fine file or emery cloth. Replace the shaft if defective.

If removed, install the inboard bearing retaining rings (2) on the output shaft (4).



To prevent damage during removal from


the shaft, it is recommended that bearings be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

The bearings may be heated to ease installation. An induction heater, hot oil bath, electric oven, or hot plate may be used to heat the bearings. Bearings should **never** be heated with a direct flame or directly on a hot plate.

NOTE

*If a hot oil bath is used to heat the bearings, both the oil and the container must be **absolutely** clean. If the oil has been previously used, it must be **thoroughly** filtered.*

Heat the bearings to a uniform temperature **no higher than** 250°F (120°C), and slide the bearings onto the shaft, one at a time, until they are fully seated. This should be done quickly, in one continuous motion, to prevent the bearings from cooling and sticking on the shaft.

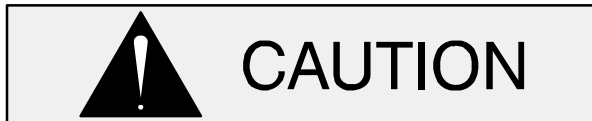

Use caution when handling hot bearings to prevent burns.

After the bearings have been installed and allowed to cool, check to ensure that they have not moved in shrinking. If movement has occurred, use a suitably sized sleeve and a press to reposition the bearings.

If heating the bearings is not practical, use a suitably sized sleeve and an arbor (or hydraulic) press to install the bearings on the shaft.

Slide the shaft and assembled bearings into the bearing housing until the outboard bearing is fully seated against the bearing housing shoulder.



When installing the shaft and bearings into the bearing bore, push against the outer race. **Never** hit the balls or ball cage.

Secure the shaft and bearings in the bearing housing with the bearing retaining ring (1).

Install the key (5) in the output shaft keyway. Position the flexible portion of the coupling assembly (3) on the shaft as shown in Figure 9.

NOTE

*The flexible portion of the coupling must be properly positioned on the shaft. The heads of the capscrews in the center of the coupling **must be positioned toward the drive end of the shaft.***

Align the keyway in the bushing (10) with the shaft key, and slide the bushing onto the shaft. Rotate the flexible portion of the coupling until the tapped holes for the two setscrews align with those in the bushing and install the setscrews. Position the coupling to the dimension shown in Figure 10.



Make certain that the flexible portion of the coupling is mounted as shown in Figure 9. The end of the shaft must protrude 1.06 to 1.19 inches (26,9 to 30,2 mm) from the face of the bushing. **This dimension is critical.** If the coupling is not properly positioned on the shaft, the coupling parts may not fully engage, or a pre-load condition can cause premature bearing failure.

With the flexible portion of the coupling and the bushing properly positioned on the shaft, tighten the two setscrews in an alternating sequence until the bushing and coupling are fully secured. Torque the setscrews to 23 ft. lbs. (280 in. lbs. or 3,2 m. kg.) maximum.

Position the key (13) in the shaft keyway. Position the drive sprocket over the shaft. Align the keyway in the taperlock bushing (15) with the shaft key and slide the bushing onto the shaft. Align the holes in the bushing with those in the sprocket, and install the bushing capscrews.

Position the sprocket on the shaft to the dimension shown in Figure 9 and tighten the bushing capscrews in an alternating sequence until the bushing and coupling are fully secured. Torque the setscrews to 60 ft. lbs. (720 in. lbs. or 8.3 m. kg.).

If the complete coupling assembly is being replaced, apply 'Loctite Retaining Compound No. 242' or equivalent compound to the threads of the hardware (7 and 9), and secure the outer ring of the coupling to the engine flywheel by torquing the hardware to 45 ft. lbs. (540 in. lbs. or 6,2 m. kg.).

Position the drive assembly so the flexible portion of the coupling seats inside the drive ring attached to the engine flywheel. Secure the bearing housing (6) to the engine bellhousing with the previously removed hardware.

NOTE

To ease installation, **lightly** lubricate the rubber portion of the coupling with a **non-petroleum based lubricant** such as vegetable oil or glycerin, or a silicon-based lubricant such as "WD40" or equivalent. **Do not** use petroleum-based lubricants, or any other substance which may soften or otherwise damage the rubber.

Pump Shaft and Bearing Reassembly and Installation

(Figure 7)

Inspect the impeller shaft (32) for distortion, nicks or scratches, or damaged keyways. Dress small nicks and burrs with a fine file or emery cloth. Replace the shaft if defective.



To prevent damage during removal from the shaft, it is recommended that bearings be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

The bearings may be heated to ease installation. An induction heater, hot oil bath, electric oven, or hot plate may be used to heat the bearings. Bearings should **never** be heated with a direct flame or directly on a hot plate.



Use caution when handling hot bearings to prevent burns.

NOTE

If a hot oil bath is used to heat the bearings, both the oil and the container must be **absolutely** clean. If the oil has been previously used, it must be **thoroughly** filtered.


Heat the bearings to a uniform temperature **no higher than** 250°F (120°C). Position the roller bearing (34) on the shaft with the internal snap ring positioned away from the impeller end of the shaft. Slide the roller bearing onto the shaft until fully seated against the shaft shoulder. This should be done quickly, in one continuous motion, to prevent the bearings from cooling and sticking on the shaft.

After the bearing has been installed and allowed to cool, check to ensure that it has not moved away from the shaft shoulder in shrinking. If movement has occurred, use a suitably sized sleeve and a press to reposition the bearing against the shaft shoulder.

Secure the roller bearing on the shaft with the bearing retaining ring (55).

Slide the heated outboard bearings (30) onto the shaft, one at a time, with the larger inner races of each bearing positioned away from each other as shown in Figure 7.

If heating the bearings is not practical, use a suitably sized sleeve and an arbor (or hydraulic) press to install the bearings on the shaft.

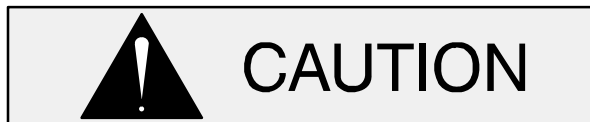

When installing the bearings onto the shaft, **never** press or hit against the outer race, balls, or ball cage. Press **only** on the inner race.

After the bearings have been installed and allowed to cool, check to ensure that they have not moved away from the shaft shoulders in shrinking. If movement has occurred, use a suitably sized

sleeve and a press to reposition the bearings against the shaft shoulder.

Secure the assembled shaft and bearings by clamping on the surface between the bearings. Use caution not to scratch or mar the part number etched into the shaft in this area. Install the tab washer (28) and bearing lock nut (27). Torque the lock nut to 150 ft. lbs. (1800 in. lbs. or 20,7 m. kg.). Locate the tab on the lockwasher that aligns with a slot in the lock nut, and bend the tab over into the slot.

Slide the shaft and assembled bearings into the pedestal from the drive end until the retaining in-board bearing (30) seats against the pedestal bore.



CAUTION

When installing the shaft and bearings into the bearing bore, push against the outer race. **Never** hit the balls or ball cage.

Press the oil seal (23) into the bearing cap (24) with the lip positioned as shown in Figure 7. Lubricate and install a new bearing cap O-ring (25) and secure the bearing cap with the capscrews (22). Use caution not to cut or roll the lip of the oil seal when installing the bearing cap.

Press the oil seal (23) into the bearing cap (35) with the lip positioned as shown in Figure 6. Replace the bearing cap gasket (29) and secure the bearing cap with the capscrews (22). Use caution not to cut or roll the lip of the oil seal when installing the bearing cap.

Lubricate the pedestal as indicated in **LUBRICATION**.

Install the sprocket and hub onto the impeller shaft as follows.

(Figures 7 and 12)

Install the key (31) in the shaft keyway. Align the keyway in the hub with the shaft key, and slide the hub onto the shaft with the shoulder positioned toward the pedestal.

Slide the sprocket over the hub, align the mounting screw holes and install the mounting screws.

Position the hub and sprocket to the dimensions shown in Figure 12 and torque the mounting capscrews to 75 ft. lbs. (900 in. lbs. or 10.4 m. kg.)

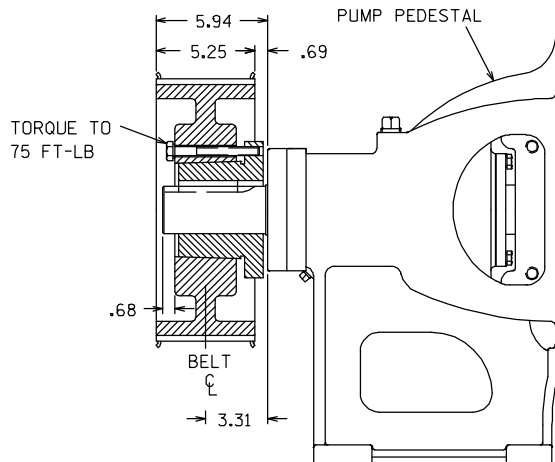


Figure 12. Hub and Sprocket Installation



CAUTION

Make certain that the hub and sprocket are mounted as shown in Figure 12. **This is critical.** If the sprocket is not properly positioned on the shaft, the pump drive belt will not be properly aligned, which can cause premature belt or bearing failure.

Pedestal Assembly Installation

(Figure 2)

See Figure 1 and use a suitable hoist and sling to position the pedestal assembly on the pump support assembly (55). Secure the pedestal to the pump support assembly using the previously removed hardware (14, 17 and 18).

Install the pump drive belt (25, Figure 3) after assembling the remaining pump components.

To adjust the drive belt tension, find the center of the belt span between the pump and engine sprockets. Use a belt deflection gauge to measure deflection **across the width of the belt** at this point. Use the hardware (13 and 14) to adjust belt tension to 3/8 inch (9,5 mm) of deflection at 30 lbs. (13,6 kg.) of pressure. **Do not** over-tighten the drive belt.



The inner edge of the pump pulley must be aligned with the outer edge of the drive pulley in order to prevent side wear of the cog belt.

Do not over-tighten the drive belt. Over-tightening will cause premature belt and/or bearing failure.

After tensioning, secure the pump support assembly by tightening the jam nuts (11) and remaining hardware (13 and 14).

Seal Reassembly and Installation

(Figures 6, 7 and 13)

Clean the bore of the seal plate (40), the seal plate cover (45) and the shaft (32) with a cloth soaked in fresh cleaning solvent.



Most cleaning solvents are toxic and flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.

Lay the seal plate cover on a flat surface with the inner side facing up. Press the oil seal (23) into the seal plate cover with the lip positioned as shown in Detail E, Figure 7.

Install a new O-ring (37) in the groove in the seal plate and secure the seal plate cover to the seal plate with the hardware (46 and 47).

Since the mechanical seal is the primary seal in the pump, special consideration should be given to ensure proper installation.

The seal is not normally reused because wear patterns on the finished faces cannot be realigned during reassembly. This could result in premature failure. If necessary to reuse an old seal in an emergency, **carefully** wash all metallic parts in fresh cleaning solvent and allow to dry thoroughly.

Handle the seal parts with extreme care to prevent damage. Be careful not to contaminate precision finished faces; even fingerprints on the faces can shorten seal life. If necessary, clean the faces with a non-oil based solvent and a clean, lint-free tissue. Wipe **lightly** in a concentric pattern to avoid scratching the faces.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage. Clean and polish the shaft sleeve, or replace it if there are nicks or cuts on either end. If any components are worn, replace the complete seal; **never mix old and new seal parts.**

If a replacement seal is being used, remove it from the container and inspect the precision finished faces to ensure that they are free of any foreign matter.

To ease installation of the seal, lubricate the bellows and stationary seat O-rings with water or a very **small** amount of oil, and apply a drop of light lubricating oil on the finished faces. Assemble the seal as follows, (see Figure 13).

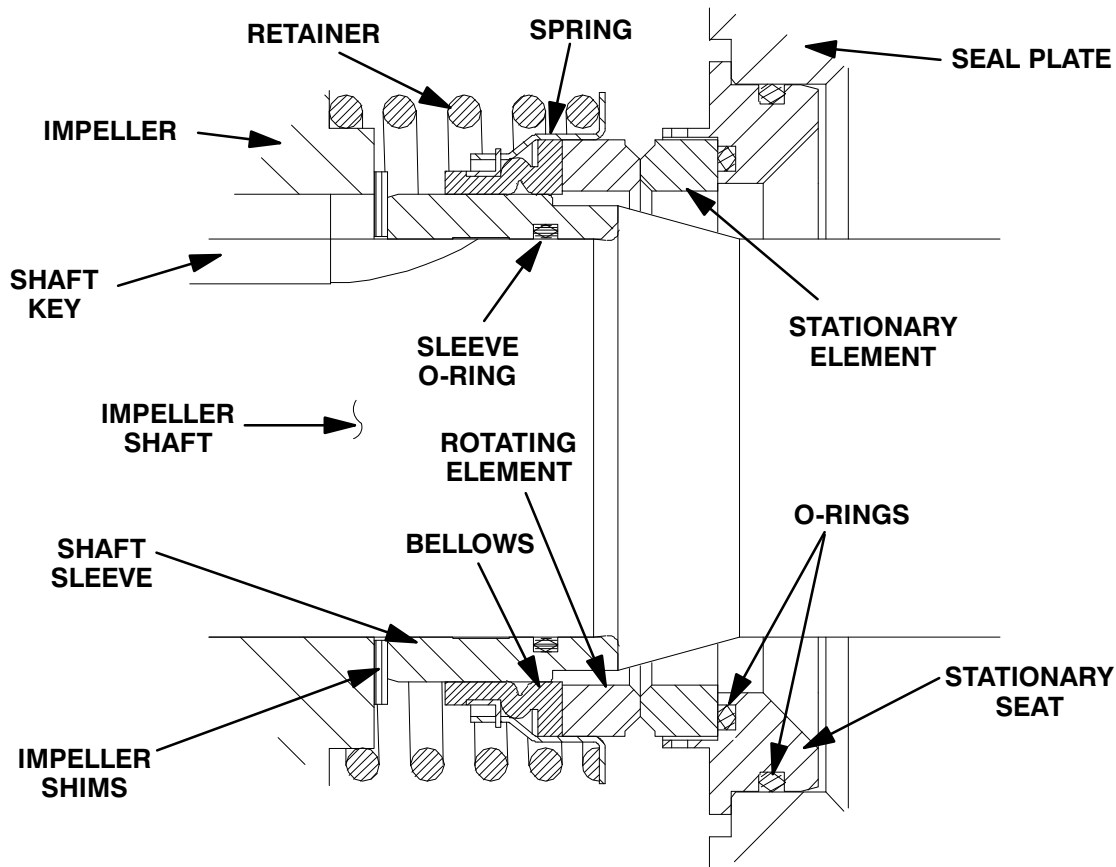


Figure 13. Seal Assembly



The standard seal is not designed for operation at temperatures above 160°F (71°C). Do not use at higher operating temperatures.

Lubricate the outboard stationary seat O-ring with water or light oil. Position the seal plate with the impeller side up and press the stationary subassembly (consisting of the stationary seat, O-rings and stationary element) into the front of the seal plate until it seats squarely against the bore shoulder.

Slide the seal plate and stationary portion of the seal over the shaft until it is seated against the pedestal (20). **Be careful** not to damage the stationary element or roll or cut the lip of the oil seal (23) on the shaft keyway. Temporarily secure the seal plate to

the pedestal with three 1/2-inch by 2-inch long capscrews and nuts (not supplied).

Lubricate the seal sleeve O-ring with a **small** amount of light oil and install it in the groove in the I.D. of the sleeve.


Lubricate the seal sleeve with a **small** amount of light oil and slide the rotating subassembly (consisting of rotating element, bellows and retainer), onto the sleeve until the rotating element is **just flush** with the **turned** end of the sleeve.

Slide the sleeve and subassembled seal onto the shaft until the seal faces contact and the sleeve seats against the shaft shoulder.

Install the seal spring. Lubricate the seal as indicated in **LUBRICATION** after the impeller, remaining pump components, bottle oiler and piping are installed.

Impeller Installation

(Figure 6)

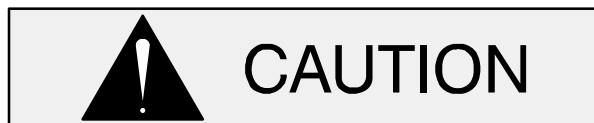

Proper wear ring replacement requires machining and dynamic balancing the impeller assembly after the wear ring is welded to the impeller. Failure to properly install the wear ring and machine and balance the impeller assembly can result in premature shaft, seal or bearing failure, or other damage to the pump.

Inspect the impeller, and replace it if cracked or badly worn. If the impeller wear ring was removed, chill the impeller by refrigeration and use an induction heater or oven to heat the new wear ring. Slide the wear ring onto the impeller until fully seated against the shoulder and allow it to cool.



The wear ring **must** seat squarely on the impeller; otherwise binding and/or excessive wear will occur. Use caution when handling hot parts to prevent burns.

Spot weld the wear ring to the impeller at three places, equally spaced at the vanes. After welding, machine the wear ring as shown in Figure 11.



The impeller assembly must be machined and balanced as shown in Figure 11. Otherwise, premature shaft, seal or bearing failure, or other damage to the pump may occur.

After machining, dynamically balance the impeller assembly per plane 1.05 oz./in. (11.7 g/cm).

Install the same thickness of impeller adjusting shims (42) as previously removed. Install the shaft key (33, Figure 7) and press the impeller assembly onto the shaft until fully seated.

A clearance of approximately .025 to .040 inch (0,63 to 1,04 mm) between the impeller and the seal plate is recommended for maximum pump efficiency. Measure this clearance, and add or remove impeller adjusting shims as required.

After the impeller clearance has been set, align the pin (9) in the impeller washer (8) with the hole in the impeller and install the washer. Apply “Never-Seez” or equivalent compound on the threads of the impeller capscrew (7). Immobilize the shaft and secure the the impeller by torquing the capscrew to 225 ft. lbs. (2700 in. lbs. or 31 m. kg.).

Pump Casing Installation

(Figure 6)

Install the casing gasket (6) over the pump casing studs (4 and 5). Remove the hardware temporarily securing the seal plate to the pedestal. Use a suitable hoist and sling to position the volute over the impeller and slide the studs through the seal plate and pedestal mounting holes.

(Figure 7)

Install the bottle oiler bracket (12) over the volute studs. Secure the bracket and volute casing with the hardware (13, 14, and 15). Reconnect the hose (48) to the connector (11) in the seal plate and secure it with the hose clamp (10).

Suction Head And Wear Ring Installation

(Figure 6)

If the wear ring (51) was removed, chill the wear ring by refrigeration and heat the suction head. Slide the wear ring into the suction head until fully seated and allow it to cool.



The wear ring **must** seat squarely in the suction head; otherwise binding and/or excessive wear will occur. Use caution when handling hot parts to prevent burns.

The wear ring is secured to the suction head with the spiral pins (50). Drill three evenly spaced 3/16-inch diameter x 3/4-inch deep holes through the wear ring and into the suction head. Tap the spiral pins into the holes until fully seated.

Install the suction head gasket (52). Position the suction head over the studs (53) and secure it with the hardware (14 and 15).

Turn the impeller shaft by hand and check for any scraping or binding and correct it before putting the pump into service.

Discharge Check Valve Assembly and Installation

(Figure 5)

The flapper and gasket are the only serviceable parts of the check valve. If the flapper requires replacement, remove the hardware securing the cover and gasket. Separate the valve cap and replace the flapper.

Install the valve cap gasket and secure the cap with the previously removed hardware.

Support the discharge check valve assembly (5) using a sling and a suitable lifting device. Secure the discharge check valve assembly and gasket (6) to the pump assembly (1) using the hardware (2, 3 and 4).

See Figure 1, reinstall the spool and gasket (16 and 19) and secure them to the check valve and support (30) with the hardware (20, 21 and 22).

Priming Chamber Assembly And Installation

(Figure 9)

Clean and inspect the components of the priming valve (1). Inspect the linkage and ensure the orifice button squarely engages the valve seat. Replace the orifice button if required (see **Priming Chamber Removal and Disassembly** for orifice button removal).

If the orifice button was removed, screw the new orifice button into the linkage bar until fully seated. Align the hole in the linkage bar with the holes in the bracket and reinstall the pivot pin. Secure the pivot pin with the previously removed “e-clip”.

Adjust the orifice button seating as necessary by screwing the orifice button into or out of the linkage bar. Proper adjustment is achieved when the orifice button fully seats against the orifice before the linkage bar on the float bottoms against the

threads on the orifice button. When adjustment is complete, install and tighten the lock washer and hex nut securing the orifice button.

Install the strainer (6) and priming valve gasket (4).

Lower the float into the priming chamber (5) and secure the priming valve with the previously removed hardware (1 and 2).

(Figure 8)

Install the baffle (7) and gasket (8) and use a sling and suitable lifting device to position the priming chamber assembly against the pump suction flange. Secure the priming chamber assembly with the hardware (4 and 5).

Reconnect both the suction piping and the air discharge tubing to the priming chamber assembly.

LUBRICATION

Seal Assembly

(Figure 7)

Fill the bottle oiler (54) and seal cavity with approximately 85 ounces (2,5 liters) of SAE No. 30 non-detergent oil. Check the oil level regularly and refill as required.

Bearings

(Figure 7)

The pedestal was fully lubricated when shipped from the factory. Check the oil level regularly through the sight gauges (18) and maintain it at the midpoint of the gauges. When lubrication is required, remove the vented plug (19) and add SAE No. 30 non-detergent oil through the opening. Clean and reinstall the vented plug. **Do not** over-lubricate. Over-lubrication can cause the bearings to over-heat, resulting in premature bearing failure.

NOTE

The white reflector in the sight gauge must be positioned horizontally to provide proper drainage.

Under normal conditions, drain the bearing housing once each year and refill with approximately 14 ounces (0,4 liter) of clean oil. Change the oil more frequently if the pump is operated continuously or installed in an environment with rapid temperature change.



Monitor the condition of the bearing lubricant regularly for evidence of rust or moisture condensation. This is especially important in areas where variable hot and cold temperatures are common.

For cold weather operation, consult the factory or a lubricant supplier for the recommended grade of oil.

Engine

Consult the literature supplied with the engine, or contact your local engine representative.

**For U.S. and International Warranty Information,
Please Visit www.grpumps.com/warranty
or call:
U.S.: 419-755-1280
International: +1-419-755-1352**

**For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870**