PUBLICATION NUMBER PL-03992-04 October 21, 2015

Rev. B - 05/7/25



## PUMP MODEL RD3A32—BAR

MANUAL PART 2 of 3

Use With: OM-03989

MR-03991

PARTS
LIST
WITH
PERFORMANCE CURVE

**GORMAN-RUPP PUMPS** 

## Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

#### **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

RD SERIES PUMP PL—03992

#### PERFORMANCE CURVE - SECTION A

### RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

#### WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied. For warranty information, please visit www.grpumps.com/warranty.

#### PERFORMANCE CURVE

The performance curve on the following page is based on 70°F (21°C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.



Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PAGE A - 1 PART LIST MANUAL

PL-03992 RD SERIES PUMP

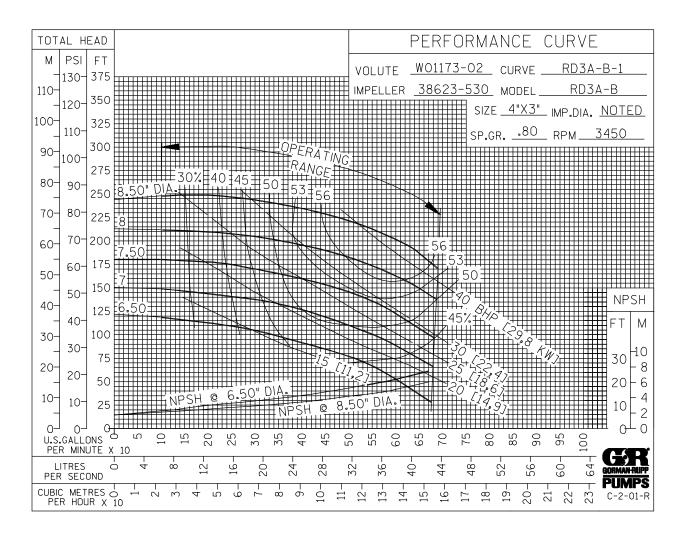

#### Performance Curve - Model RD3A32-BAR


PARTS LIST MANUAL PAGE A – 2

RD SERIES PUMP PL-03992

This Page Intentionally Blank

PAGE A - 3 PART LIST MANUAL

S/N 1629432 Up PUMP ISSUE 4

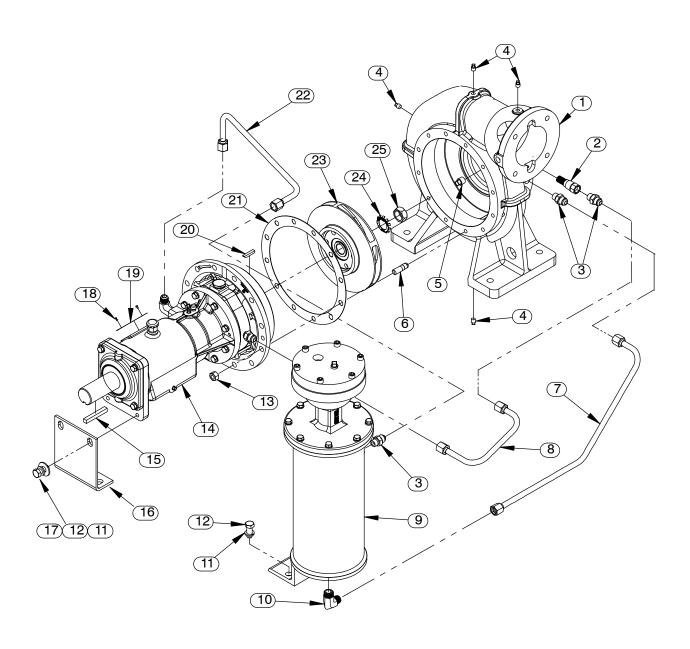

#### **GORMAN-RUPP PUMPS**

#### RD3A32-BAR

**S/N 1629432 Up PUMP ISSUE 4** 

#### PARTS LIST Pump Model RD3A32—BAR

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.


 ITEM NO.	PART NAME	PART NUMBER	QTY	ITEM PART NAME PART QTY NO. NUMBER	,
3 1 2 3 4 5 6 7 8 9 10 11 12 3 14 15 16 17	MALE ELBOW LOCK WASHER HEX HEAD CAP SCREW HEX NUT BEARING HOUSING ASSY	25812-011 J08 15991 B0805 15991 D08 15991 44143-105 N0611 15990	1 1 3 4 1 12 1 1 1 4 4 4 12 1 1	20 KEY K79329—23 15990 21 ** BODY GASKET R12531 20000 22 DISCHARGE TUBE ASSY 46335—097 23 ** IMPELLER 38623—530 13048 24 LOCK WASHER 23962—519 25 IMPELLER NUT K75776 15111 NOT SHOWN:     LUBRICATION DECAL 38816—081     DISCHARGE STICKER 6588BJ     SUCTION STICKER 6588AG     G-R DECAL GR—03     INSTRUCTION TAG 38817—011     BEARING TAG 6588ABB     ROTATION DECAL 2613M     CHECK VLV BODY GSKT 11589GA 18000     OPTIONAL:	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
18 19	DRIVE SCREW NAME PLATE	BM#04-03 17000 2613DZ 13990	2 1	COMPANION FLANGES (SUCT AND DISCHARGE) -COMPANION FLG KIT K33850	1

<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

- † ALL ROTO-PRIME™ IMPELLERS ARE TRIMMED.
- SEE ACCOMPANYING LITERATURE FOR INDIVIDUAL PARTS, MAINTENANCE AND REPAIR.
- IP INCLUDED WITH REPAIR 46474-351 1
  PUMP CASING ASSY

#### **GORMAN-RUPP PUMPS**

### **S/N 1629432 Up PUMP ISSUE 4**

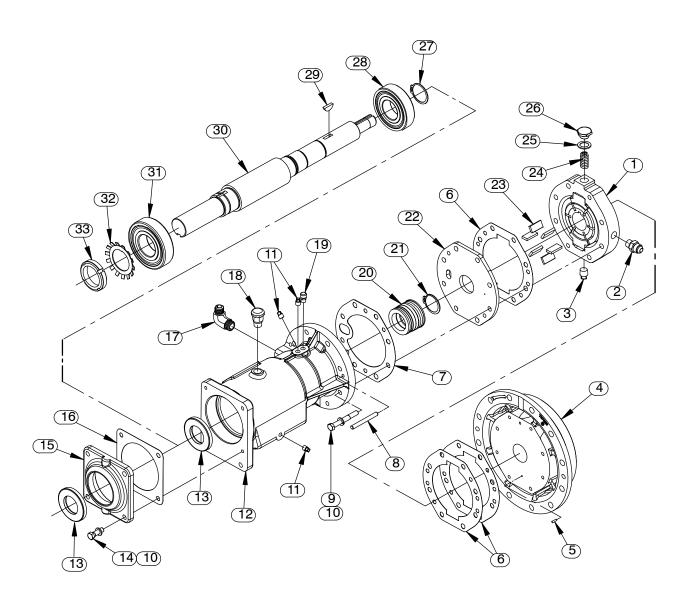

#### **GORMAN-RUPP PUMPS**

RD3A32-BAR

**S/N 1629432 Up PUMP ISSUE 4** 

#### PARTS LIST Bearing Housing Assembly


ITEM PART NAME NO.	PART NUMBER	QTY	ITEM PART NAME NO.	PART NUMBER	QTY
1 GROUP GRIND 2 CONNECTOR 3 PIPE PLUG 4 BODY COVER 5 * ROLL PIN † 6 * CENTER PLATE GASKET 7 * SPACER PLATE GASKET 8 DOWEL PIN 9 HEX HEAD CAP SCREW 10 LOCK WASHER 11 PIPE PLUG 12 BEARING HOUSING 13 * OIL SEAL 14 HEX HEAD CAP SCREW 15 BEARING HOUSING CAP 16 * BEARING CAP GASKET 17 MALE ELBOW 18 AIR VENT 19 AIR VENT 20 * MECH SEAL 1-5/8 21 RETAINING RING	LK05418 25812-214 P06 15079 T07826-04 10140 21154-666 N14145 19210 N14144 18000 21133-073 B0612 15991 J06 15991 P02 15079 W01172-03 11010 25227-240 B0605 15991 R12770-02 10010 N18938-01 18000 25812-011 S1703 S2162 25271-921 24124-243	1 1 1 1 3 1 2 8 12 3 1 2 4 1 1 1 1 1 1 1	22 SPACER PLATE 23 * PUMP BLADE 24 PRS REGULATING SPRIN 25 * GASKET 26 SPRING CAP 27 RETAINING RING 28 * BALL BEARING 29 * WOODRUFF KEY 30 * IMPELLER SHAFT 31 * BALL BEARING 32 BRG LOCKWASHER 33 BRG LOCKNUT OPTIONAL: SST IMPELLER SHAFT TEFLON SEAL ASSY OIL LUBE BEARING HOUSING ASSEMBLY —INBOARD BEARING —OUTBOARD BEARING —OUTBOARD BEARING —OIL CUP	N14129-02 11010 K79300-22 G K76301 38681-021 19060 K68064 15991 24124-245 23282-010 K61559 15990 T08467-02 15010 23282-011 23962-511 23962-511 23962-011 T08467-02 17080 25271-761 44143-110 \$1088 \$1077 26713-051	1 6 1 1 1 1 1 1 1 1 1 1 1

<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

• ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.

#### **GORMAN-RUPP PUMPS**

<sup>† 2</sup> GASKETS REQUIRED ON ONE FACE ONLY WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.

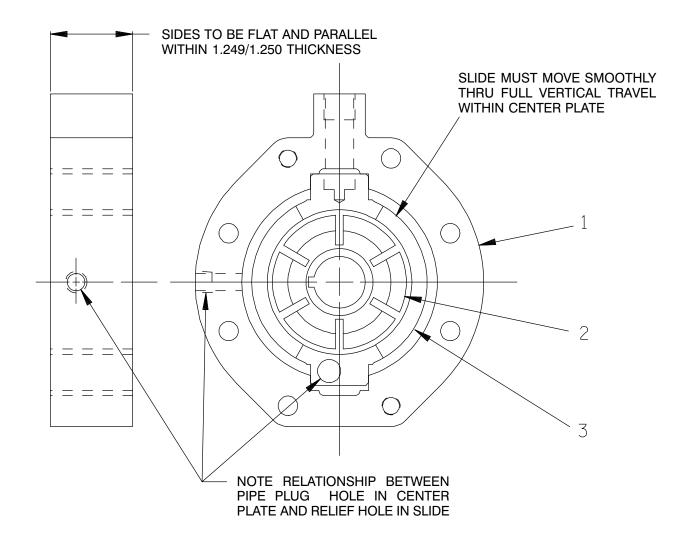

#### PARTS LIST LK05418 Group Grind

ITEM NO.	PART NAME	PART NUMBER	QTY
1	CENTER PLATE	NOT AVAILABLE	1
2	ROTOR	NOT AVAILABLE	1
3	SLIDE	NOT AVAILABLE	1

**NOTE:** THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

#### **GORMAN-RUPP PUMPS**

# For Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280

Canada: 519-631-2870

International: +1-419-755-1352