PUBLICATION NUMBER PL-03999-03 June 16, 1999 Rev. D 05-7-2025

Use With: OM-03989 MR-03991



### PUMP MODEL RS3A32-B

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

## Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

#### **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

PL-03999 RS SERIES PUMP

#### PERFORMANCE CURVE - SECTION A

### RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:	
Serial Number:	

#### WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.

#### PERFORMANCE CURVES

The performance curves on the following page are based on 70° F (21° C) clear water at sea level, corrected to 0.80 specific gravity, with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.




Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PART LIST MANUAL PAGE A – 1

RS SERIES PUMP PL—03999

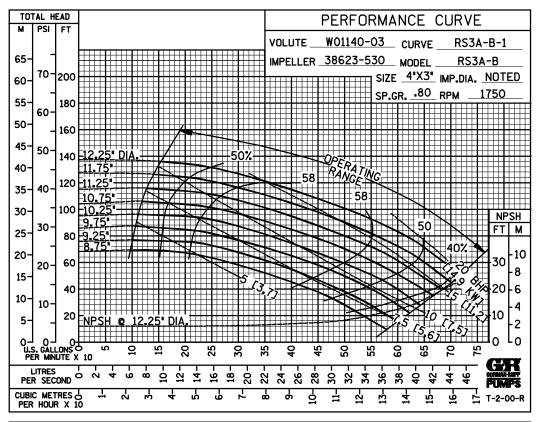

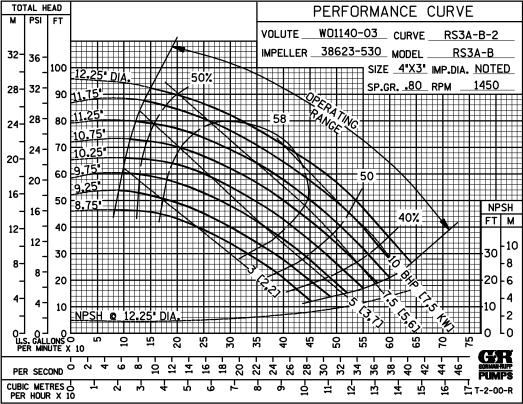

Performance Curve — Model RS3A32—B

PAGE A – 2 PARTS LIST MANUAL


PL-03999 RS SERIES PUMP

This Page Intentionally Blank

PART LIST MANUAL PAGE A – 3

B RS3A32-B

S/N 1193083 Up PUMP ISSUE 3

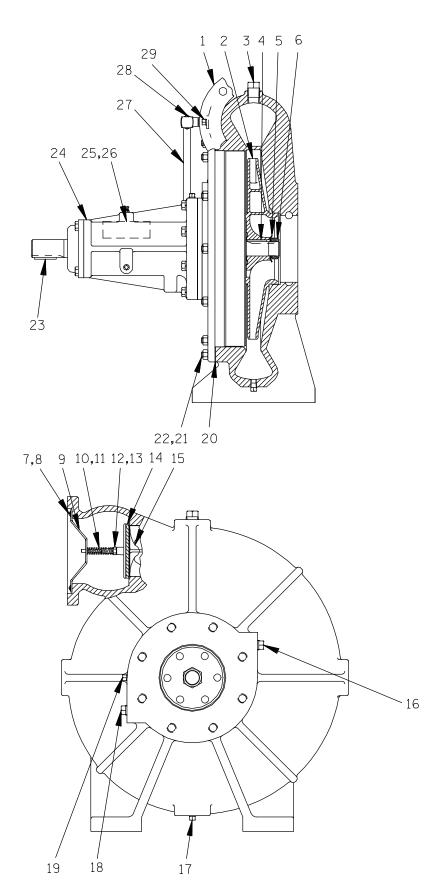

#### THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

RS3A32-B

**S/N 1193083 Up PUMP ISSUE 3** 

#### PARTS LIST Pump Model RS3A32-B

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.


ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM PART NAME PART MAT'L ( NO. NUMBER CODE	QTY
1 2 * 3 4 *	PIPE PLUG IMPELLER KEY	W01140-03 38623-530 P08 N0403	10140 13048 15079 15990	1 1 1	22 HEX NUT D06 15991 23 * SHAFT KEY N0406 15990 24 BRG HOUSING ASSY R12051—10 ——— 25 NAME PLATE 2613DZ 13990 26 DRIVE SCREW BM#04—03 17000	12 1 1 1 2
5 6 7 8	BRG LOCKWASHER IMPELLER NUT SCREW T-TYPE LOCKWASHER	23962-506 K75776 CM0401-1/2 AL04	15111 15991 17170	1 1 2 2	27 PRIMING TUBE ASSY 46335—060 ——— 28 MALE ELBOW 25812—011 ——— 29 PIPE PLUG P02 15079	1 1 1
9 10 11 12 13	CHECK VALVE GUIDE CHECK VALVE SPRING CHECK VALVE STEM HEX NUT T-TYPE LOCKWASHER	K74025 K74062 K74008 D04 AL04	15991  15991 15991 17170	1 1 1 1	NOT SHOWN:  * SUCT FLANGE GASKET N14147 19060  * DISCH FLANGE GASKET 11589GA 19060  SUCTION STICKER 6588AG	1 1 1
14 * 15 16 17 18	= === =	25152-335 38345-628 P06 P02 P06	13047 15079 15079 15079	1 1 1 1 1	LUBE DECAL 38816-081 INSTRUCTION TAG 38817-011 DISCHARGE STICKER 6588BJ G-R DECAL GR-03 ROTATION DECAL 2613M BEARING TAG6588ABB 1	1 1 1 1
19 20 * 21	PIPE PLUG PUMP CASING GASKET STUD	P02 N14146 C0606	15079 19060 15991	1 1 12	OPTIONAL: COMPANION FLG KIT K33850	1


<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

<sup>†</sup> ALL ROTO-PRIME® IMPELLERS ARE TRIMMED.

B RS3A32-B

S/N 1193083 Up PUMP ISSUE 3

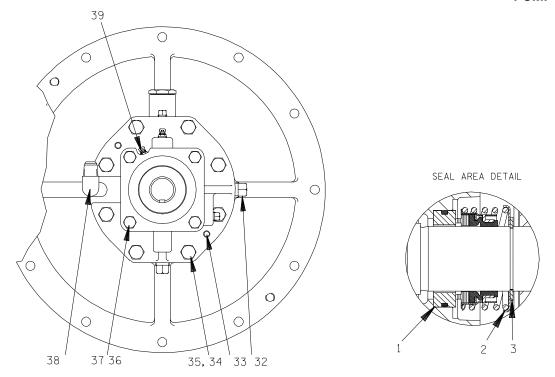

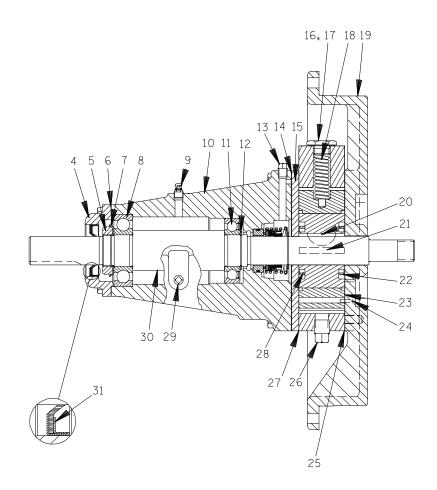

#### THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO


**S/N 1193083 Up PUMP ISSUE 3** 

#### PARTS LIST R12051-10 Bearing Housing Assembly

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	1	PART NAME	PART NUMBER	MAT'L CODE	QTY
1 *	OL/ (L/ (OOL) (IDL)	25271-192		1	27	*	CENTER PLATE GASKE	T N14145	19210	1
2	SPRING HOLDER	25273-266		1	28		ROTOR BLADE SPACER	K74031	15030	1
3	SEAL SNAP RING	S700		1	29		PIPE PLUG	P02	15079	1
4	BEARING CAP	N14130	10010	1	30	*	IMPELLER SHAFT	R10123	15010	1
5	BEARING LOCK NUT	S301		1	31	*	OIL SEAL	25227-230	)	1
6 <del>*</del>		K74033	18000	1	32		PIPE PLUG	P06	15079	1
7	TAB WASHER	S302		1	33		DOWEL PIN	21133-076	3	2
8 *		23282-008		1	34		HEX HD CAPSCREW	B0615	15991	8
9	AIR VENT	S2162		1	35		LOCKWASHER	J06	15991	8
10	BEARING HOUSING	T02990	11010	1	36		HEX HD CAPSCREW	B0504	15991	4
11 *	Di LEE DEI II III CO	23257-012		1	37		LOCKWASHER	J05	15991	4
12	BEARING RET RING	S248		1	38		MALE ELBOW	25812-011	1	1
13	PIPE PLUG	P02	15079	1	39		AIR VENT	S2162		1
14 *		N14144	18000	1						
15	SPACER PLATE	N14129	11010	1	NOT	SI	HOWN:			
16	PRESS REG SPRING CAP	K68064	15991	1			PRESS REG SPRING	K74120		1
17 <del>*</del>	SPRING CAP GASKET	K86067		1						
18 <del>*</del>	PRESS REG SPRING	K74119		1	OPTI	Ol	NAL:			
19	BODY COVER	T02985A-01	10140	1	**		PRES REG SPRING	K74120		1
20 *	ROTOR WOODRUFF KEY	K74041	15990	1			416 SST IMP SHAFT	R10769	17080	1
21 *	ROTOR BLADE	K79300-21		6			TEFLON SEAL ASSY	25271-743	3	1
22	ROTOR BLADE SPACER	K74031	15030	1		•	OIL LUBE BEARING	44143-102	2	1
23	GROUP GRIND	LK05293		1			HOUSING ASSEMBLY			
24 *	LOCATING PIN	21154-666		1			INBOARD BEARING	S310		1
25 †	CENTER PLATE GASKET	N14145	18010	2			OUTBOARD BEARIN	G 23275-008	3	1
26	PIPE PLUG	P06	15079	1			OIL CUP	26713-051	1	1

 $<sup>\</sup>frak*$  INDICATES PARTS RECOMMENDED FOR STOCK

- † 2 GASKETS REQUIRED WHEN ROTOR OR SLIDE IS THICKER THAN CENTER PLATE.
- ALL OTHER COMPONENTS SAME AS STANDARD BEARING HOUSING ASSEMBLY.
- \*\* USE IN PLACE OF K74119 (ITEM 18) WITH IMPELLERS 10 1/2 INCHES OR LARGER IN DIAMETER.

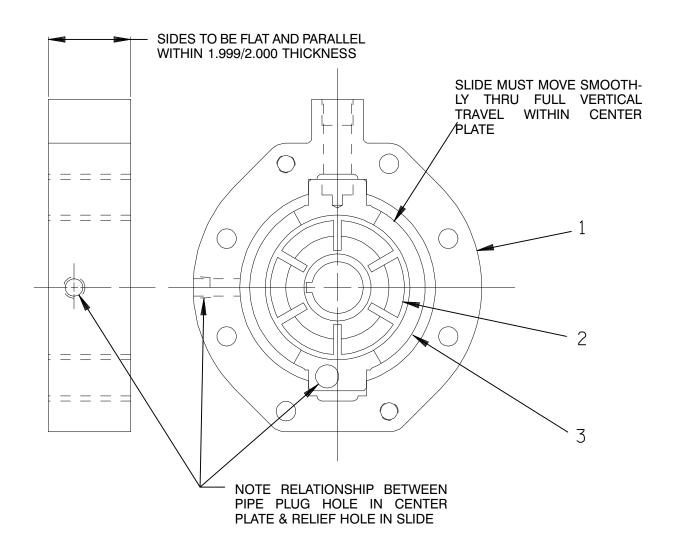

#### PARTS LIST LK05293 Group Grind

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	CENTER PLATE	NOT AVAILABLE		1
2	ROTOR	NOT AVAILABLE		1
3	SLIDE	NOT AVAILABLE		1

**NOTE:** THE GROUP GRIND MUST BE REPLACED AS A COMPLETE UNIT: INDIVIDUAL PIECE PARTS ARE NOT SOLD SEPARATELY.

#### THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

# For U.S. and International Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280 International: +1-419-755-1352

For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870