PUBLICATION NUMBER PL-04028-02 February 18, 1994 Rev. E 12-27-24



### PUMP MODEL 65A32-B

MANUAL PART 2 of 3

PARTS
LIST
WITH
PERFORMANCE CURVE

**GORMAN-RUPP PUMPS** 

www.grpumps.com

## Register your new Gorman-Rupp pump online at www.grpumps.com

Valid serial number and e-mail address required.

#### **RECORD YOUR PUMP MODEL AND SERIAL NUMBER**

Please record your spaces provided b needs this information	elow. Your	Gorman-Rupp	distributor
Pump Model:			
Serial Number:			

PL-04028 60 SERIES PUMP

#### PERFORMANCE CURVE - SECTION A

### RECORDING MODEL AND SERIAL NUMBERS

Please record the pump model and serial number in the spaces provided below and in the separate <u>Installation/Operation Manual</u> accompanying your pump. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model:		
Serial Number:		

#### WARRANTY INFORMATION

The pump warranty is provided as part of Gorman-Rupp's support program for customers who operate and maintain their equipment as described in this manual and other accompanying literature. Please note that should the equipment be abused or modified to change its performance beyond the original factory specifications, the warranty will become void and any claim will be denied.

#### PERFORMANCE CURVES

The performance curves on the following page are based on 70°F (21°C) clear water (or corrected to .80 specific gravity) at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.


If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.




Pump speed and operating condition points must be within the continuous performance range shown on the curve(s).

PARTS LIST MANUAL PAGE A – 1

60 SERIES PUMP PL—04028

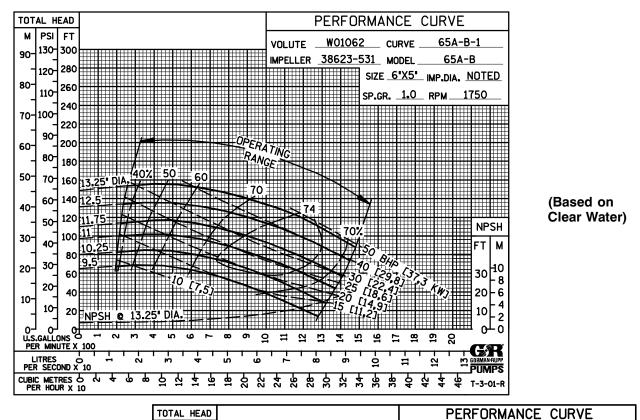

(Based on Petroleum Products)

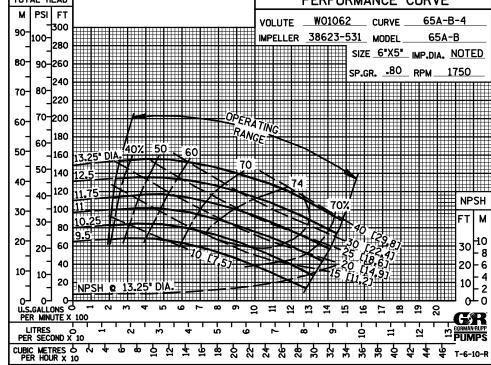

Performance Curves — Model 65A32—B

PAGE A – 2 PART LIST MANUAL


PL-04028 60 SERIES PUMP

**This Page Intentionally Blank** 

PARTS LIST MANUAL PAGE A – 3

#### 65A32-B

#### S/N 1061560 Up PUMP ISSUE 2

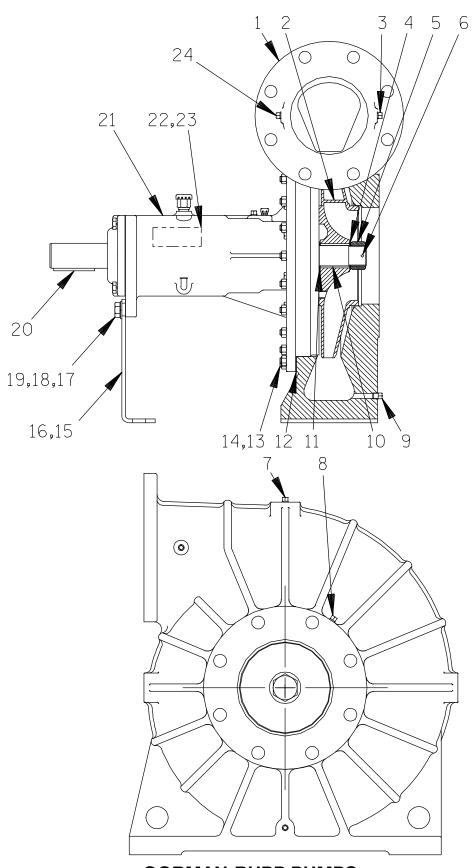

**GORMAN-RUPP PUMPS** 

www.grpumps.com

©1994 Gorman-Rupp Pumps

S/N 1061560 Up PUMP ISSUE 2

#### PARTS LIST Pump Model 65A32-B

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.


ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
<b>☞ 1</b>	PUMP CASING	SEE NOTE B	ELOW	1	18	LOCKWASHER	J08	15991	2
2 *	IMPELLER	38623-531	13048	1	19	FLAT WASHER	K08	15991	2
<b>F</b> 3	PIPE PLUG	P02	15079	1	20 🗦	* SHAFT KEY	N0611	15990	1
4	IMPELLER WASHER	K76643	15991	1	21	BRG HOUSING ASSY	R12948-02	2	1
5	IMPELLER NUT	K88233	15111	1	22	NAME PLATE	2613ED	13990	1
6	SPIRAL PIN	21137-079		1	23	DRIVE SCREW	BM#04-03	15990	2
<b>☞</b> 7	PIPE PLUG	P02	15079	1	<b>⊯24</b>	PIPE PLUG	P02	15079	1
₽ 8	PIPE PLUG	P02	15079	1					
<b>⊯</b> 9	PIPE PLUG	P02	15079	1	NOT:	SHOWN:			
10 *	IMPELLER KEY	K79330	16120	2	>	* DISCH FLANGE GASH	KET 1678G	19060	1
11	IMPELLER WASHER	K76643	15991	1	>	* SUCT FLANGE GASK	ET 1679G	19370	1
12 *	PUMP CASING GASKET	N15237-21	19060	1		DISCHARGE STICKER	R 6588BJ		1
<b>⊯13</b>	STUD	C0606-1/2	15991	24		ROTATION DECAL	2613M		1
14	HEX NUT	D06	15991	24		SUCTION STICKER	6588AG		1
15	BRG HSG SUPPORT	R12852-02	15990	1		INSTRUCTION TAG	38817-011		1
16	G-R DECAL	GR-03		1		BEARING LUBE DECA	AL 38816-074		1
17	HEX HD CAPSCREW	B0805	15991	2					

<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

INCLUDED WITH REPAIR 46474-336 --- 1
PUMP CASING ASSY

#### 65A32-B

#### S/N 1061560 Up PUMP ISSUE 2

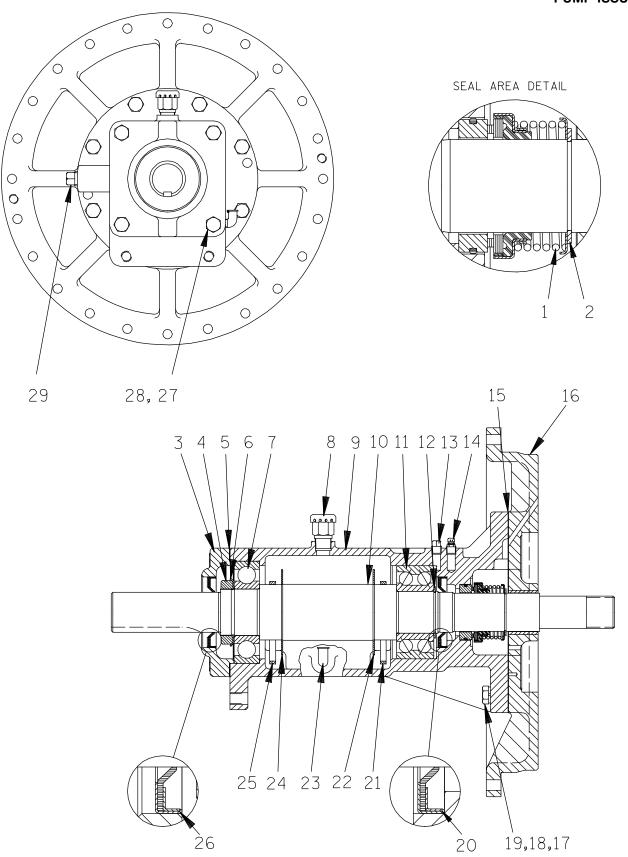

#### **GORMAN-RUPP PUMPS**

www.grpumps.com

3 of 4

S/N 1061560 Up PUMP ISSUE 2

PARTS LIST R12948-02 Bearing Housing Assembly

ITEM NO.		PART NAME	PART NUMBER	MAT'L CODE	QTY
1	*	SEAL ASSEMBLY	25271-921		1
2		RETAINING RING	24124-243		1
3		BEARING CAP	R12770-02	10010	1
4		BEARING LOCK NUT	23962-011		1
5	*	BEARING CAP GASKET	N18938-01	18000	1
6		BRG LOCKWASHER	23962-511		1
7	*	OUTBOARD BEARING	S1077		1
8		AIR VENT	S1703		1
9		BEARING HOUSING	W01172-04	11010	1
10	*	IMPELLER SHAFT	T08656-02	15010	1
11	*	INBOARD BEARING	23421-410		1
12		BEARING RET RING	24124-245		1
13		PIPE PLUG	P02	15079	1
14		AIR VENT FITTING	S2162		1
15	*	BODY COVER GASKET	R12923	18000	1
16		BODY COVER	T03712-20	10140	1
17		HEX HD CAPSCREW	21632-599		8
18		LOCKWASHER	J06	15991	8
19		DOWEL PIN	21133-108		2
20	*	OIL SEAL	25227-240		1
21		OIL RING	K86483	15030	1
22		OIL RING STOP	K76632-01		1
23		OILER	26713-054		1
24		OIL RING STOP	K76632-01		1
25		OIL RING	K86483	15030	1
26	*	OIL SEAL	25227-240		1
27		HEX HD CAPSCREW	21632-597		4
28		LOCKWASHER	J06	15991	4
29		PIPE PLUG	P06	15079	1
OPTIONAL:					
		TEFLON SEAL	25271-761		1

<sup>\*</sup> INDICATES PARTS RECOMMENDED FOR STOCK

#### **GORMAN-RUPP PUMPS**

# For U.S. and International Warranty Information, Please Visit www.grpumps.com/warranty or call:

U.S.: 419-755-1280 International: +1-419-755-1352

For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870