

**INSTALLATION, OPERATION,
AND MAINTENANCE MANUAL**
WITH PARTS LIST



ACCESSORIES

MODEL
GRP33-06A, GRP33-06B and GRP33-08 AIR RELEASE VALVES and GRP52 INSTALLATION KITS

GORMAN-RUPP PUMPS

www.grpumps.com

TABLE OF CONTENTS

INTRODUCTION	PAGE I – 1
WARNINGS – SECTION A	PAGE A – 1
INSTALLATION – SECTION B	PAGE B – 1
PREINSTALLATION INSPECTION	PAGE B – 1
AIR RELEASE VALVE INSTALLATION	PAGE B – 1
Air Release Valve Venting	PAGE B – 1
OPERATION – SECTION C	PAGE C – 1
TROUBLESHOOTING – SECTION D	PAGE D – 1
PUMP MAINTENANCE AND REPAIR – SECTION E	PAGE E – 1
PARTS LISTS:	
GRP33–06A Air Release Valve	PAGE E – 3
GRP33–06B Air Release Valve	PAGE E – 5
GRP33–08 Air Release Valve	PAGE E – 7
GRP52–01A Installation Kit	PAGE E – 8
GRP52–03A Installation Kit	PAGE E – 9
GRP52–04A Installation Kit	PAGE E – 10
GRP52–05A and GRP52–05B Installation Kit	PAGE E – 11
GRP 33–06A & GRP 33–06B AIR RELEASE VALVE DISASSEMBLY AND REASSEMBLY	PAGE E – 12
GRP 33–08 AIR RELEASE VALVE DISASSEMBLY AND REASSEMBLY	PAGE E – 13

INTRODUCTION

This manual contains installation, operation, and maintenance instructions for the Gorman-Rupp GRP33-06A, GRP33-06B and GRP33-08 Air Release Valves and GRP52 Air Release Valve Installation Kits.

The Air Release Valves are designed to work in conjunction with the integral priming pump and priming tubes installed between the valve, priming pump and the pump suction. Air or vapor expelled by the priming pump during initial priming or re-priming is directed through the Air Release Valve, thereby permitting the priming pump to prime the centrifugal pump against relatively high discharge heads.

If there are any questions regarding the pump or Air Release Valve application which are not covered in this manual or in other literature accompanying this unit, please contact your Gorman-Rupp distributor, or The Gorman-Rupp Company:

The Gorman-Rupp Company
P.O. Box 1217

Mansfield, Ohio 44901-1217
Phone: (419) 755-1011

or:

Gorman-Rupp of Canada Limited
70 Burwell Road

St. Thomas, Ontario N5P 3R7
Phone: (519) 631-2870

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:



DANGER!

Immediate hazards which WILL result in severe personal injury or death. These instructions describe the procedure required and the injury which will result from failure to follow the procedure.



WARNING!

Hazards or unsafe practices which COULD result in severe personal injury or death. These instructions describe the procedure required and the injury which could result from failure to follow the procedure.



CAUTION

Hazards or unsafe practices which COULD result in minor personal injury or product or property damage. These instructions describe the requirements and the possible damage which could result from failure to follow the procedure.

NOTE

Instructions to aid in installation, operation, and maintenance, or which clarify a procedure.

SAFETY - SECTION A

This information applies to Gorman-Rupp GRP33-06A, GRP33-06B and GRP33-08 Air Release Valves and corresponding installation kits. Refer to the manual accompanying the pump and power source before attempting to begin operation.



If the pump is installed within a closed building such as a pump house, route the Air Release Valve vent line to the outside of the building. The complete installation must be in accordance with national and local codes.



Before operating or servicing the Air Release Valve or pump, be certain prop-

er safety practices are followed. Provide adequate ventilation, prohibit smoking, wear static-resistant clothing and shoes. Clean up all fuel spills immediately after occurrence.



Before attempting to open or service the Air Release Valve or pump:

1. Familiarize yourself with this manual.
2. Disconnect or lock out the power source to ensure that the pump will remain inoperative.
3. Allow the pump and liquid to cool if overheated.
4. Check the temperature before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.

INSTALLATION – SECTION B

Review all safety information in Section A.

Since pump installations are seldom identical, this section offers only general recommendations and practices required to inspect and install the GRP33-06A, GRP33-06B and GRP33-08 Air Release Valves. Refer to the literature accompanying the pump, or contact the factory for specific pump installation instructions. Refer to **MAINTENANCE AND REPAIR**, Section E in this manual for disassembly and reassembly of the Air Release Valves and specific installation instructions for each of the Air Release Valve Installation Kits.

The Air Release Valves will **not** serve as throttling valves or check valves in the system piping. If the application involves static discharge head or suction pressure, a system check valve **must** be installed to prevent siphoning or loss of prime through the pump.

The integral Roto-Prime® priming pump and Air Release Valve work in conjunction with three tube assemblies. During operation, one tube draws vapor from the suction side of the centrifugal pump to the suction port of the priming pump. Another tube discharges the vapor into the air release. The third tube returns any accumulated liquid in the bottom of the cylindrical air release chamber to the suction side of the centrifugal pump. See **OPERATION**, Section C for further details.

NOTE

*Since the “RS” model Roto-Prime® pumps require internal changes to facilitate proper installation and function of the Air Release Valve, it is recommended that the valve be ordered as a **factory-installed** option only. The valve may be easily added to “RD” model pumps with no internal modifications required.*

PREINSTALLATION INSPECTION

Before installation, inspect the Air Release Valve and all piping and fittings for damage which may have occurred during shipment. Check as follows:

- a. Check the Air Release Valve assembly for cracks, dents, damaged threads and other obvious damage.
- b. Check for proper quantities of tubing, fittings, and mounting hardware supplied with the Air Release Valve. Check all components for shipping damage.

AIR RELEASE VALVE INSTALLATION

Remove the pump casing and priming pump drain plugs and drain the pump. Clean and reinstall the drain plugs.

Refer to the appropriate Air Release Valve Kit installation drawing in **MAINTENANCE AND REPAIR**, Section E, and follow the instructions provided.

Before starting the pump, vent the Air Release Valve as described below to provide safe operation.

Air Release Valve Venting

For normal venting of the Air Release Valve, remove the plastic shipping plug in the head of the valve. It is suggested that a length of pipe or tubing be installed in the threaded opening so that hazardous vapors can be carried away from the immediate vicinity of the pump.

NOTE

*When two pumps equipped with Air Release Valves are installed in parallel, a check valve **must** be installed in the venting lines.*



If the pump is installed in a closed building such as a pump house, route the Air Release Valve vent line to the outside of the building. The complete installation must be in accordance with National and local codes.

OPERATION – SECTION C

Review all safety information in Section A.

When properly installed, the Air Release Valve allows the integral Roto-Prime® priming pump to

overcome relatively high static discharge heads or back pressure during the priming cycle. Figure 1 shows a schematic configuration of the valve and is keyed to the following description of operation.

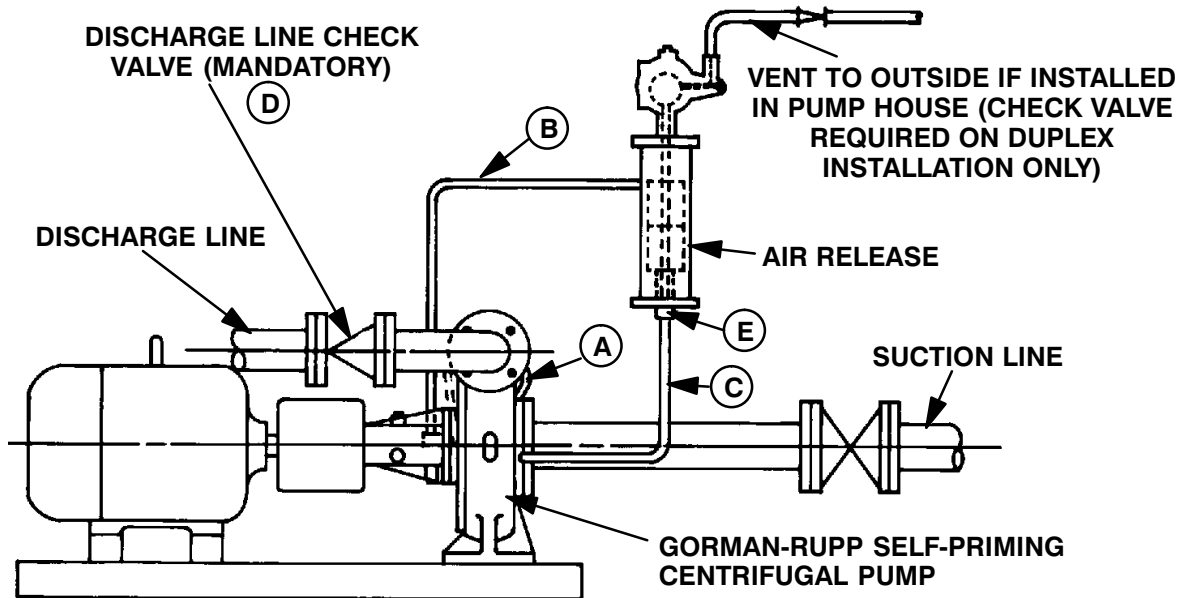


Figure 1. Gorman-Rupp Air Release Valve Connected to Roto-Prime® Pump

The Air Release Valve is designed with an air valve in the head of the assembly and a sump valve in the bases. These valves are controlled by a common rod that is moved vertically by an attached float.

When the pump is started, air is drawn from the suction line into the priming pump, and directed through the discharge tube "B" to the Air Release Valve. This air and vapor is then vented to atmosphere through the valve head.

With the float down, sump valve "E" is closed; air cannot re-enter the suction piping through the return tube assembly "C".

As product fills the pump casing, the impeller develops pressure, opening the check valve "D" in the discharge piping. The priming pump delivers product and fills the float chamber, causing the

float to rise, which opens the sump valve "E" and closes the air valve.

The product recirculates through the return tube assembly "C" to the pump suction. The liquid pressure equalizes the priming pump spring pressure, and the priming pump slides into neutral. At this point, the pump is fully primed.

In the neutral position, the priming pump circulates a small amount of liquid through the discharge tube to the float chamber and back to the pump suction through the return tube.

If air or vapor enters the suction piping during the pumping operation, the discharge line check valve closes again, and the priming pump again evacuates the air through the Air Release Valve.

TROUBLESHOOTING – SECTION D

Review all safety information in Section A.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
VALVE FAILS TO RELEASE AIR	<p>Integral priming pump malfunctioning.</p> <p>Priming tube improperly connected to pump or valve.</p> <p>Check valve at pump discharge port not installed or seating improperly.</p> <p>Small in-line check valve (used in standard Roto-Prime® configuration) not removed prior to installation of Air Release Valve priming line.</p> <p>Valve floats sticking or out of adjustment.</p> <p>Priming lines pinched or broken.</p>	<p>Refer to Operator's Manual accompanying the centrifugal pump for repair instruction.</p> <p>Check installation diagram (see Section B). Correct piping.</p> <p>Install check valve or inspect for free movement and proper seating.</p> <p>Remove in-line check valve.</p> <p>Check the valve floats for free movement. Adjust valve head at top of cylinder (see Section E, Figure 1 for dimensions).</p> <p>Straighten or replace line(s).</p>
PRODUCT ESCAPING FROM VENT LINE	<p>Priming tube improperly connected to pump or valve.</p> <p>Check valve at pump discharge port not installed or seating improperly.</p> <p>Valve floats sticking or out of adjustment.</p> <p>Valve seat contaminated or worn.</p>	<p>Check installation diagram (see Section B). Correct piping.</p> <p>Install check valve or inspect for free movement and proper seating.</p> <p>Check the valve floats for free movement. Adjust valve head at top of cylinder (GRP33-06A and GRP33-06B Valves only, see Section E, Figure 1 for dimensions).</p> <p>Clean needle valve and seat. Replace worn parts.</p>
PRODUCT LEAKS FROM VALVE OR PIPING	<p>Priming lines pinched or broken.</p> <p>Gaskets damaged, pipe fittings loose.</p>	<p>Straighten or replace line(s).</p> <p>Replace damaged parts, tighten fittings.</p>

MAINTENANCE AND REPAIR - SECTION E

MAINTENANCE AND REPAIR OF THE AIR RELEASE VALVE PARTS WILL MAINTAIN PEAK OPERATING PERFORMANCE.

The table below lists the Installation Kit and corresponding Air Release Valve designed for your pump model. Each kit includes the Air Release Valve, priming tubes, pipe fittings and mounting hardware.

GRP33-06A and GRP33-06B Air Release Valves are designed for installations where ethanol is not present in the liquid being pumped. The optional GRP33-08 Air Release Valve is designed for applications where the liquid being pumped contains a volume of ethanol greater than 85%.

Repair parts for the Air Release Valves are identi-

fied in Figures 1 through 3 and the accompanying parts lists in this section.

To identify priming tubes, pipe fittings and mounting hardware used with "RD" model pumps, find the Installation Kit listed below and refer to the appropriate drawings and parts lists in this section (see Figures 4 through 7). If the Air Release Valve was purchased as standard equipment ("RS" model pumps), refer to the manual shipped with the pump to identify priming tubes, fittings and mounting hardware. The optional GRP33-08 Air Release Valve utilizes the same priming tubes, pipe fittings and mounting hardware used with GRP33-06 Air Release Valve applications.

Air Release Valve Installation Kit Cross Reference

PUMP MODEL	INSTALLATION KIT	AIR RELEASE VALVE	INSTALLATION KIT DRAWING
RD2A31-B	GRP52-01A	GRP33-06A	SEE FIGURE 4
RD2A31-BAR			
RD3A31-B	GRP52-03A	GRP33-06A	SEE FIGURE 5
RD2A31-BAR			
RD3A32-B	GRP52-04A	GRP33-06B	SEE FIGURE 6
RD3A32-BAR	GRP52-04A	GRP33-06B	SEE FIGURE 6
RD4A31-B	GRP52-05A	GRP33-06A	SEE FIGURE 7
RD4A31-BAR	GRP52-05A	GRP33-06A	SEE FIGURE 7
RD4A32-B	GRP52-05B	GRP33-06B	SEE FIGURE 7
RD4A32-BAR	CONSULT FACTORY	GRP33-06B	CONSULT FACTORY
RS2A31-B			
RS2A31-BAR	GRP52-06A	GRP33-06A	SEE PUMP MANUAL
RS2A32-BAR	CONSULT FACTORY	GRP33-06B	CONSULT FACTORY
RS3A31-B			
RS3A31-BAR	GRP52-07A	GRP33-06A	SEE PUMP MANUAL
RS3A32-B			
RS3A32-BAR	GRP52-08A	GRP33-06B	SEE PUMP MANUAL
RS5A31-BAR	GRP52-09A	GRP33-06A	SEE PUMP MANUAL
RS5A32-BAR	GRP52-10A	GRP33-06B	SEE PUMP MANUAL
OPTIONAL: >E85 ETHANOL SERVICE		GRP33-08	SEE PUMP MANUAL

SECTION DRAWING

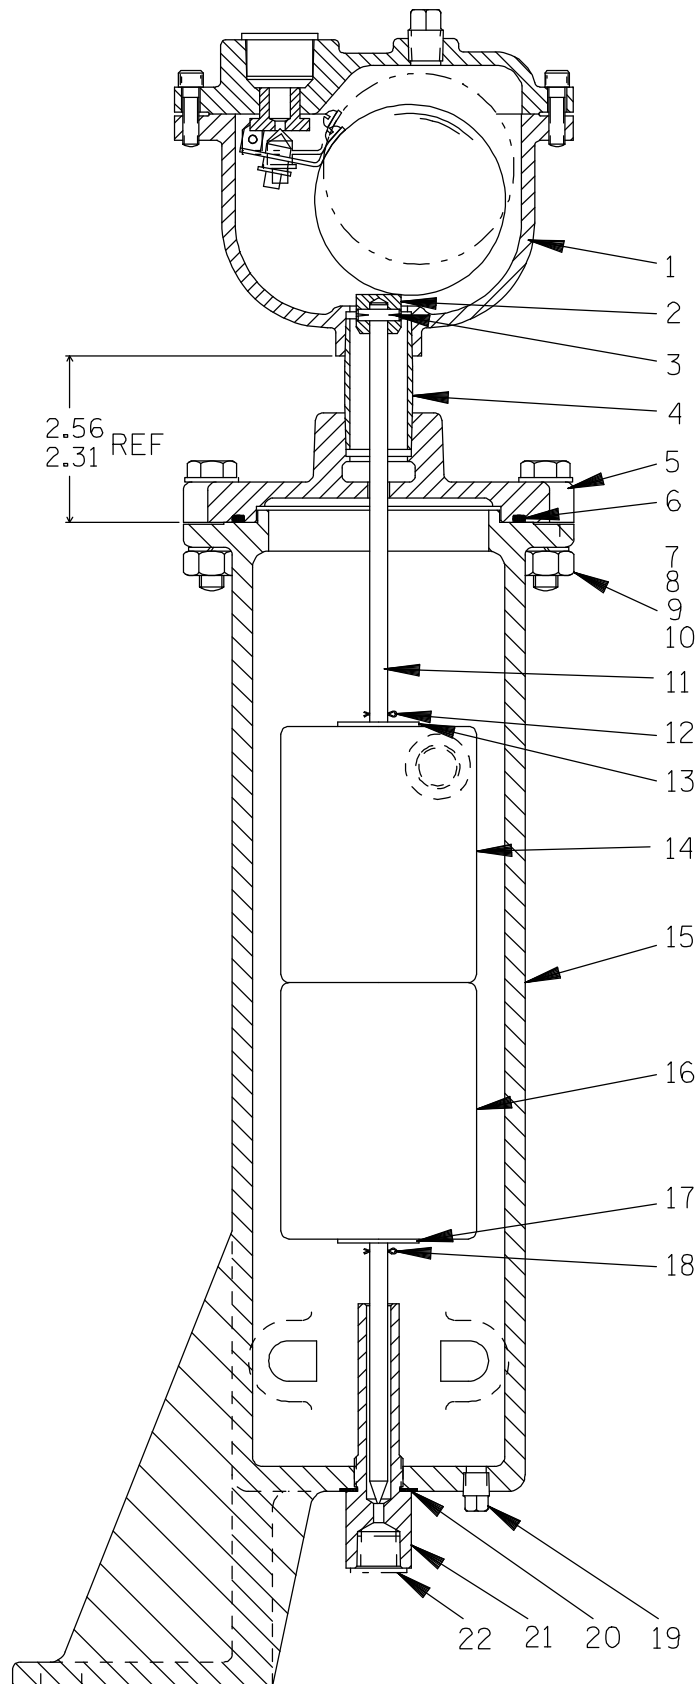


Figure 1. GRP33-06A Air Release Valve

PARTS LIST
GRP33-06A Air Release Valve

ITEM NO.	PART NAME	PART NUMBER	QTY
1	AIR RELEASE VALVE	26664-004	1
2	* PLUNGER PAD	31115-008 13150	1
3	DRIVE PIN	21144-058	1
4	HEAVY PIPE NIPPLE	THA1208 15079	1
5	AIR RELEASE ADAPTOR	38354-033 11000	1
6	* O-RING	25152-243	1
7	HEX HD CAPSCREW	B0607 15991	4
8	FLAT WASHER	K06 15991	4
9	LOCKWASHER	J06 15991	4
10	HEX NUT	D06 15991	4
11	FLOAT ROD	31361-008 17000	1
12	COTTER PIN	21126-712	1
13	FLAT WASHER	KB06 17000	1
14	* FLOAT	K81577	1
15	FLOAT CHAMBER	38344-005 11000	1
16	* FLOAT	K81577	1
17	FLAT WASHER	KB06 17000	1
18	COTTER PIN	21126-712	1
19	PIPE PLUG	P02 15079	1
20	* PRESSURE REGULATING GASKET	K86067	1
21	VALVE SEAT	N16727-01 17010	1
22	PLASTIC CLOSURE	25141-039	2

* INDICATES PARTS RECOMMENDED FOR STOCK

SECTION DRAWING

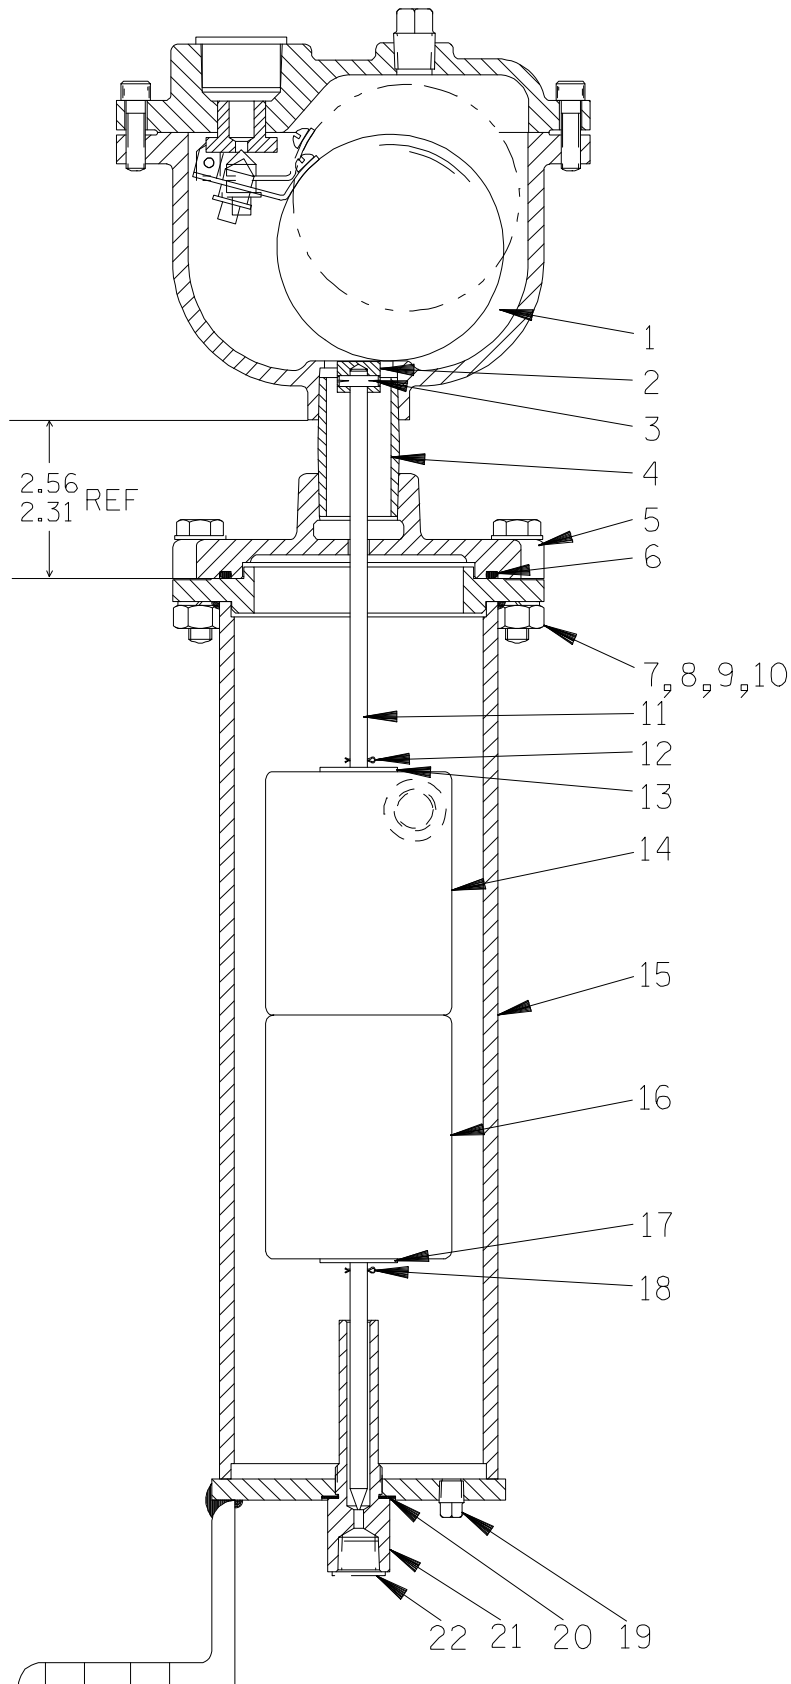


Figure 2. GRP33-06B Air Release Valve

PARTS LIST
GRP33-06B Air Release Valve

ITEM NO.	PART NAME	PART NUMBER	QTY
1	AIR RELEASE VALVE	26664-005	1
2	* PLUNGER PAD	31115-008 13150	1
3	DRIVE PIN	21144-058	1
4	HEAVY PIPE NIPPLE	THA1609 15079	1
5	AIR RELEASE ADAPTOR	38354-040 10140	1
6	* O-RING	25152-243	1
7	HEX HD CAPSCREW	B0607 15991	4
8	FLAT WASHER	K06 15991	4
9	LOCKWASHER	J06 15991	4
10	HEX NUT	D06 15991	4
11	FLOAT ROD	31361-008 17000	1
12	COTTER PIN	21126-712	1
13	FLAT WASHER	KB06 17000	1
14	* FLOAT	K81577	1
15	FLOAT CHAMBER	T06327	1
16	* FLOAT	K81577	1
17	FLAT WASHER	KB06 17000	1
18	COTTER PIN	21126-712	1
19	PIPE PLUG	P02 15079	1
20	* PRESSURE REGULATING GASKET	K86067	1
21	VALVE SEAT	N16727-01 17010	1
22	PLASTIC CLOSURE	25141-039	2

* INDICATES PARTS RECOMMENDED FOR STOCK

SECTION DRAWING

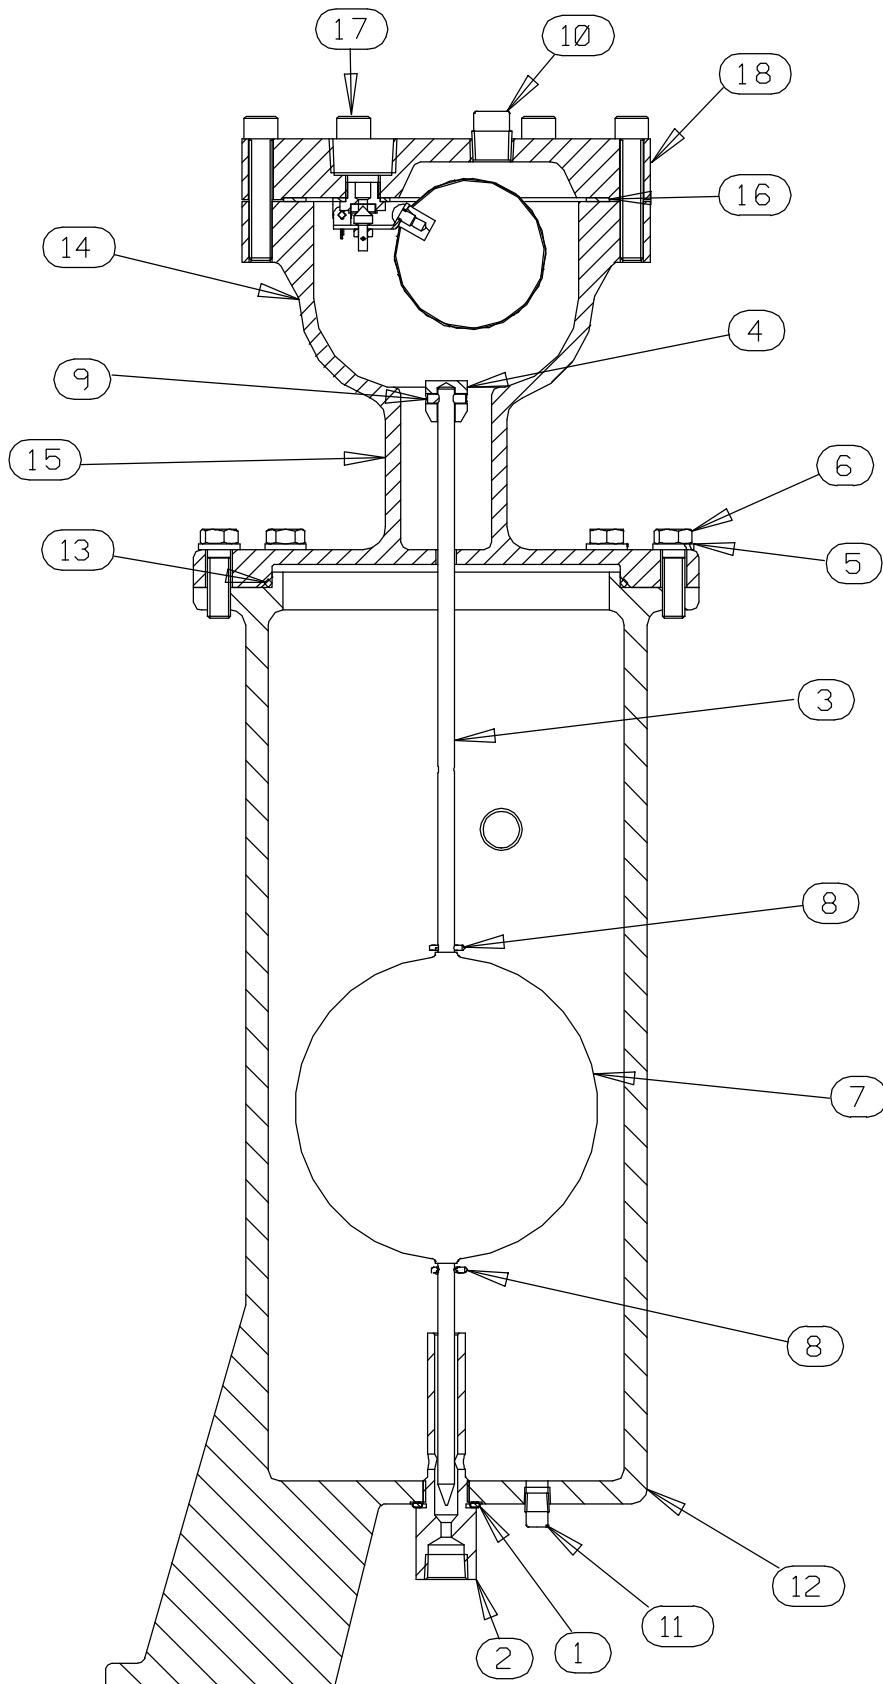



Figure 3. GRP33-08 Air Release Valve

PARTS LIST
GRP33-08 Air Release Valve

ITEM NO.	PART NAME	PART NUMBER	QTY
1	* RING GASKET	38681-021 19060	1
2	VALVE SEAT	N16727-01 17010	1
3	FLOAT ROD	31361-017 17000	1
4	PLUNGER PAD	31115-008 13150	1
5	LOCK WASHER	J06 15991	8
6	HEX HEAD CAP SCREW	B0605 15991	8
7	AIR ELIMINATOR FLOAT	38349-418 17000	1
8	COTTER PIN	21126-712	2
9	DRIVE PIN	21144-058	1
10	PIPE PLUG	P06 15079	1
11	PIPE PLUG	P02 15079	1
12	FLOAT CHAMBER	38344-008 11010	1
13	* O-RING	25152-256	1
14	AIR RELEASE VALVE ASSEMBLY	46431-822	1
15	-AIR RELEASE ADAPTOR	38344-009 11010	1
16	* -GASKET	38681-827 18000	1
17	-SOCKET HD CAP SCREW	BD0608 15991	6
18	-CAP ASSEMBLY	41888-257	1
	* --RUBBER SEAT	31131-101 19060	1

* INDICATES PARTS RECOMMENDED FOR STOCK

Figure 4. GRP52-01A Air Release Valve Kit

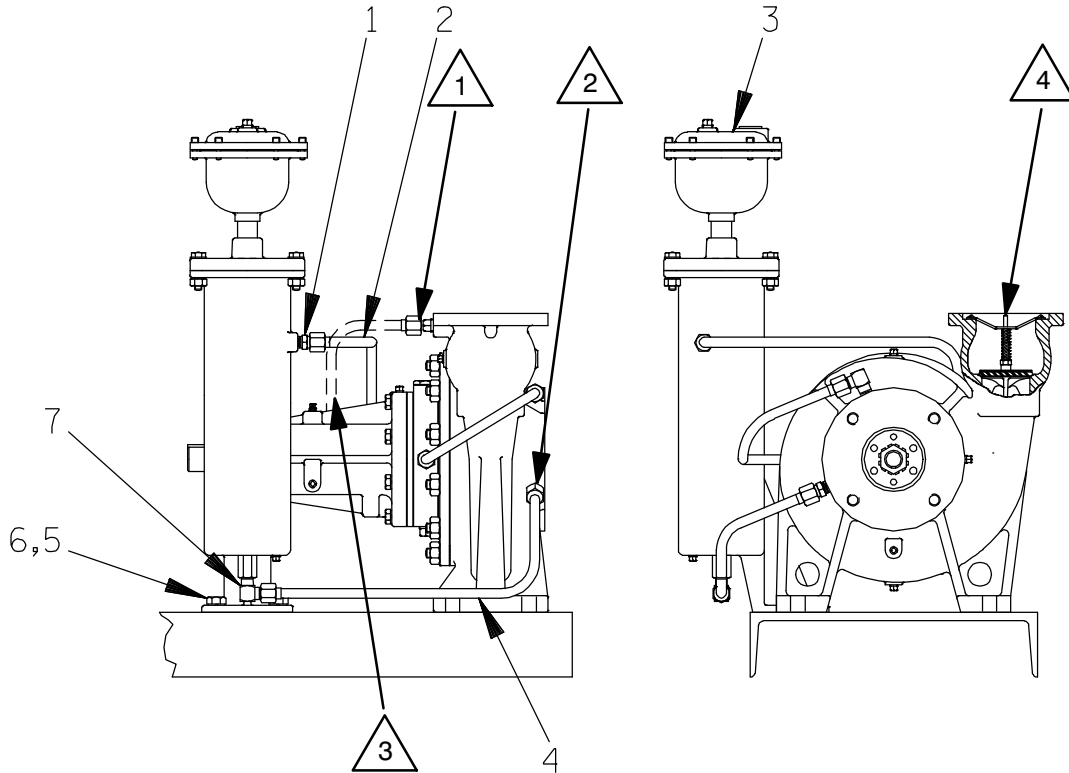

GRP52-01A Installation Instructions



Disconnect the priming pump discharge tubing from the pump discharge and bearing housing assembly.



Remove the connector from the discharge port, and the 3/8 NPT pipe plug from the suction port. Install the pipe plug in the discharge port and the connector in the suction port.



Remove the elbow, check valve, and pipe nipple from the bearing housing assembly.

Install the elbow back in the bearing housing assembly.



Remove the discharge check valve and hardware from the discharge port.


Install the elbow supplied with the kit into the base of the Air Release Valve. Secure the valve to the base with the hardware included in the kit.

Plumb the Air Release Valve to the pump as shown using the fittings and pre-formed tubing included in the kit.

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	MALE CONNECTOR	25812-214	1
2	DISCHARGE TUBE	46335-057	1
3	AIR RELEASE VALVE (SEE FIGURE 1)	GRP33-06A	1
4	RETURN TUBE	46335-083	1
5	HEX HD CAPSCREW	B0805 15991	2
6	LOCKWASHER	J08 15991	2
7	MALE ELBOW	25812-011	1

Figure 5. GRP52-03A Air Release Valve Kit

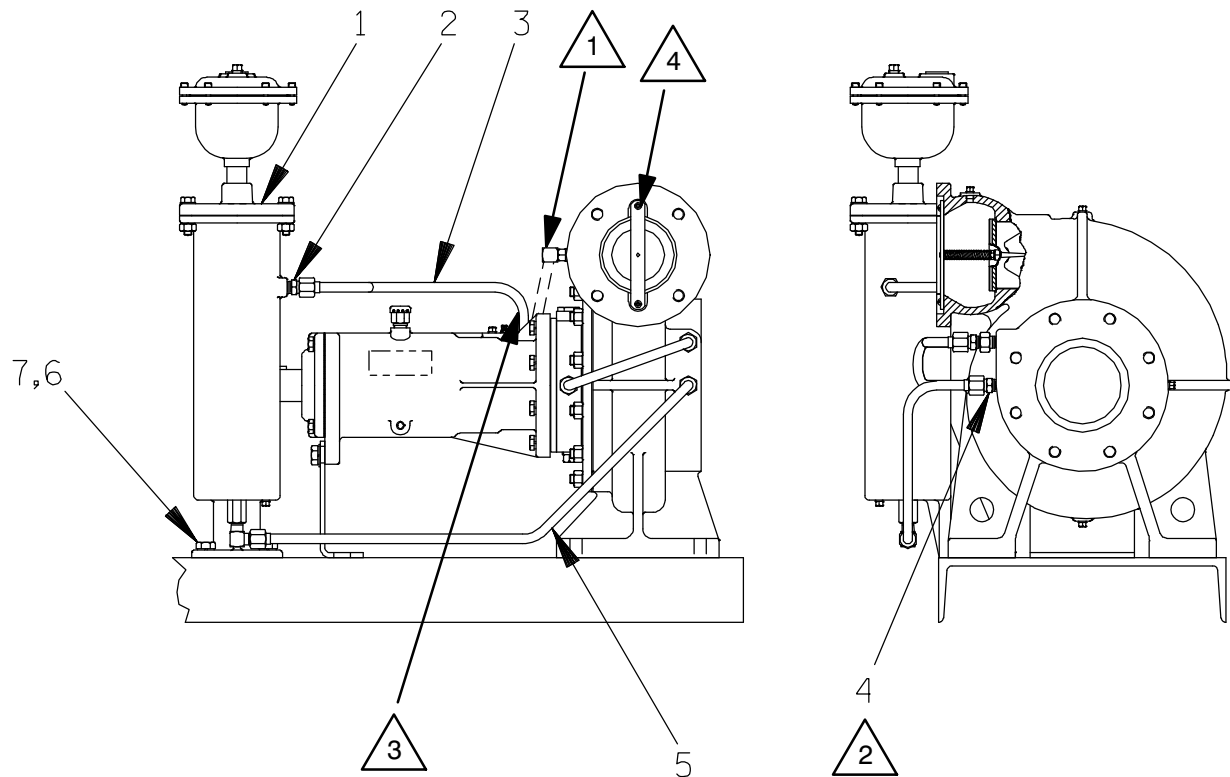

GRP52-03A Installation Instructions


- 1** Disconnect the priming pump discharge tubing from the pump discharge and bearing housing assembly.
- 2** Remove the elbow from the discharge port, and the 3/8 NPT pipe plug from the suction port. Install the pipe plug in the discharge port and the elbow in the base of the Air Release Valve.
- 3** Remove the elbow, check valve, and pipe nipple from the bearing housing assembly. Install the elbow back in the bearing housing assembly.
- 4** Remove the discharge check valve and hardware from the discharge port.

Secure the valve to the base, and plumb the valve to the pump as shown using the fittings and pre-formed tubing included in the kit.

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	AIR RELEASE VALVE (SEE FIGURE 1)	GRP33-06A	1
2	MALE CONNECTOR	25812-214	1
3	DISCHARGE TUBE	46335-091	1
4	MALE CONNECTOR	25812-214	1
5	RETURN TUBE	46335-086	1
6	HEX HD CAPSCREW	B0805 15991	2
7	LOCKWASHER	J08 15991	2

Figure 6. GRP52-04A Air Release Valve Kit

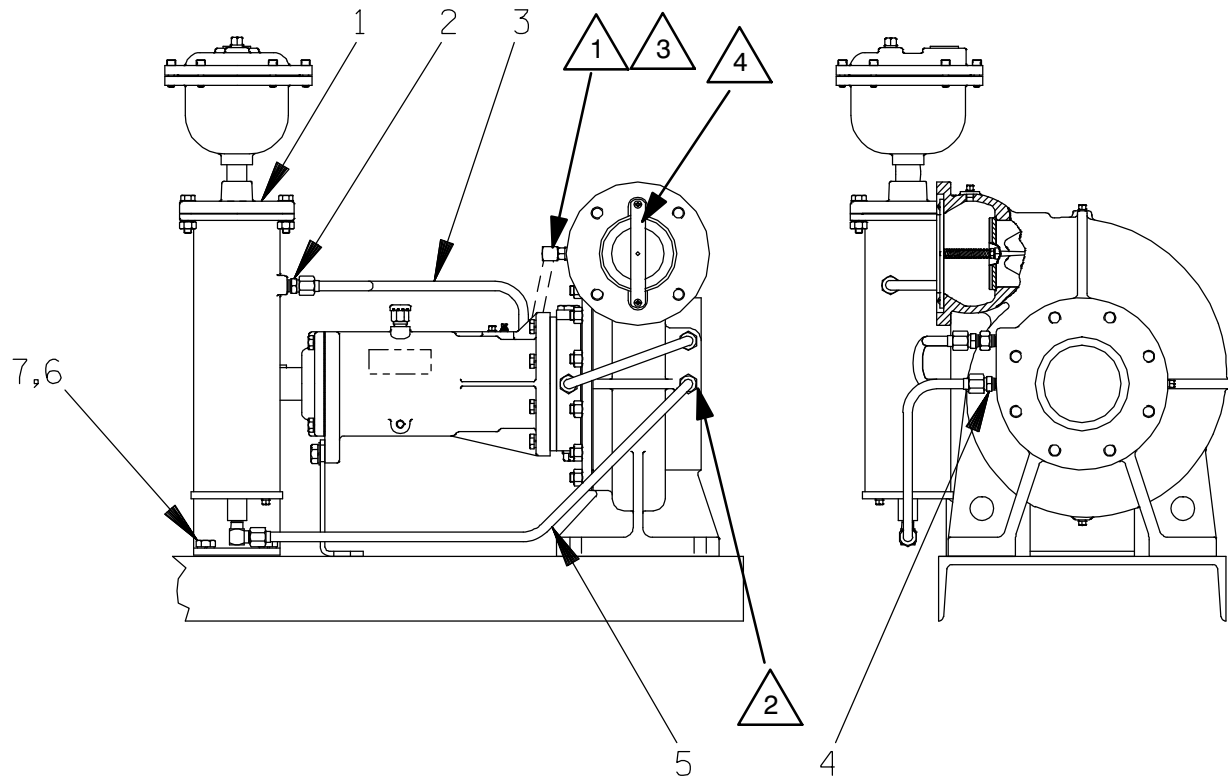


GRP52-04A Installation Instructions

- 1** Disconnect the priming pump discharge tubing from the pump discharge and bearing housing assembly.
- 2** Remove the elbow from the discharge port, and the 3/8 NPT pipe plug from the suction port. Install the pipe plug in the discharge port and the elbow in the base of the Air Release Valve.
- 3** Remove the elbow, check valve, and pipe nipple from the bearing housing assembly. Install the elbow back in the bearing housing assembly.
- 4** Remove the discharge check valve and hardware from the discharge port.

Secure the valve to the base, and plumb the valve to the pump as shown using the fittings and pre-formed tubing included in the kit.

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	AIR RELEASE VALVE (SEE FIGURE 2)	GRP33-06B	1
2	MALE CONNECTOR	25812-214	1
3	DISCHARGE TUBE	46335-091	1
4	MALE CONNECTOR	25812-214	1
5	RETURN TUBE	46335-090	1
6	HEX HD CAPSCREW	B0805 15991	2
7	LOCKWASHER	J08 15991	2

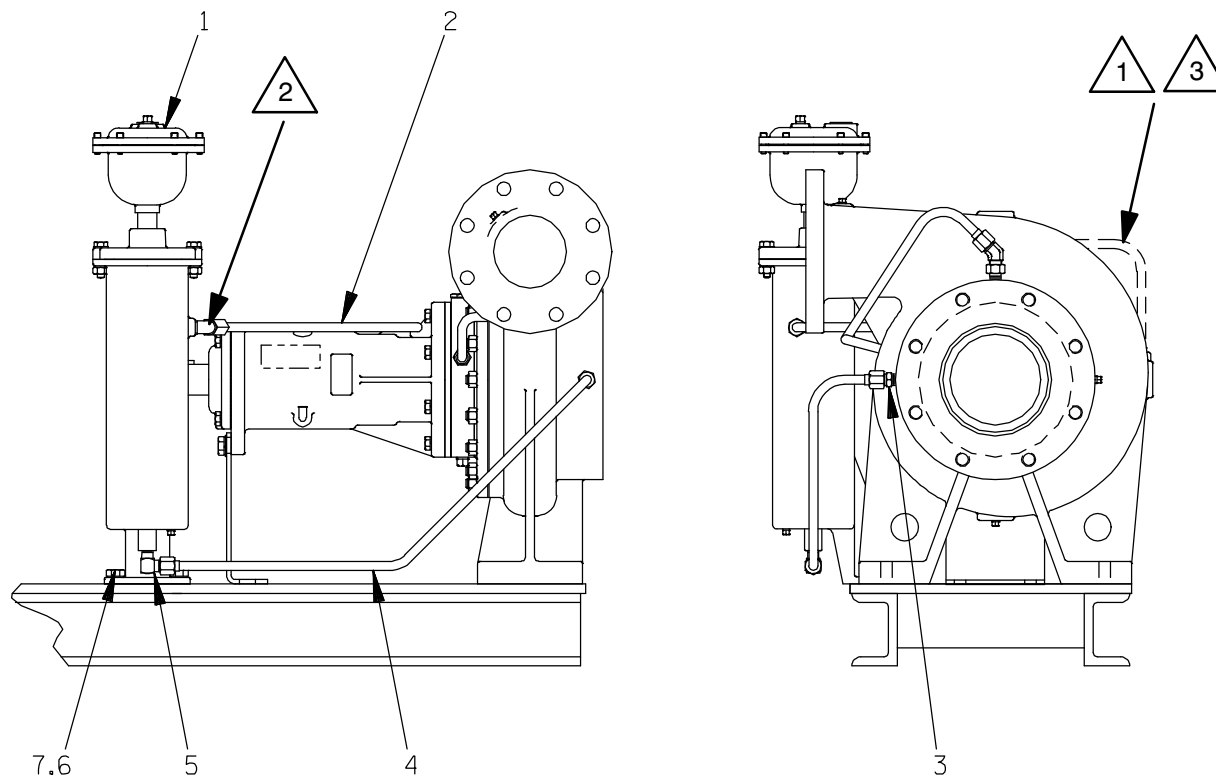Figure 7. GRP52-05A and GRP52-05B Air Release Valve Kits**GRP52-05A and GRP52-05B Installation Instructions**

Disconnect the priming pump discharge tubing from the pump discharge and bearing housing assembly.



Remove the elbow from the discharge port, and the 3/8 NPT pipe plug from the suction port. Install the pipe plug in the discharge port and the elbow in the base of the Air Release Valve.



Remove the elbow, check valve, and pipe nipple from the bearing housing assembly. Install the elbow back in the bearing housing assembly.

Install the elbow supplied with the kit into the base of the Air Release Valve. Secure the valve to the base, and plumb the valve to the pump as shown using the fittings and pre-formed tubing included in the kit.

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	GRP52-05A AIR RELEASE VLV (SEE FIG. 1)	GRP33-06A	1
	GRP52-05B AIR RELEASE VLV (SEE FIG. 2)	GRP33-06B	1
2	DISCHARGE TUBE	46335-067	1
3	MALE CONNECTOR	25812-214	1
4	RETURN TUBE ASSEMBLY	46335-081	1
5	MALE ELBOW	25812-011	1
6	HEX HD CAPSCREW	B0805 15991	2
7	LOCKWASHER	J08 15991	2

GRP 33-06A AND GRP33-06B AIR RELEASE VALVE DISASSEMBLY AND REASSEMBLY

Review all safety information in Section A.

The GRP33-06A and GRP33-06B Air Release Valves require little service due to their rugged, minimum maintenance design. However, if it becomes necessary to inspect or replace parts, follow these instructions, which are keyed to the sectional views (see Figures 1 and 2) and the accompanying parts lists.

Before attempting to service the Air Release Valve, disconnect or lock out the power supply to the pump to prevent accidental start-up. Close all valves in the suction and discharge piping and drain the pump casing and group grind. Refer to the literature accompanying the pump for maintenance and repair of the pump and group grind.



Before operating or servicing the Air Release Valve or pump, be certain proper safety practices are followed. Provide adequate ventilation, prohibit smoking, wear static-resistant clothing and shoes. Clean up all fuel spills immediately after occurrence.



Before attempting to open or service the Air Release Valve or pump:

- 1. Familiarize yourself with this manual.**
- 2. Disconnect or lock out the power source to ensure that the pump will remain inoperative.**
- 3. Allow the pump and liquid to cool if overheated.**
- 4. Check the temperature before opening any covers, plates, or plugs.**
- 5. Close the suction and discharge valves.**

Air Release Valve Disassembly

Remove the drain plug (19) and drain the float chamber. Clean and reinstall the drain plug after draining, using “Loctite 567 PST” or equivalent on the drain plug threads.

Disconnect the return tubing from the sump valve (21).

To remove the sump valve, turn the valve clockwise and pull until it comes out of the base of the float chamber. Remove the gasket (20).

Disconnect the vent tubing from the air release valve assembly (1). To remove the air release valve assembly, unscrew the assembly from the pipe nipple (4).

NOTE

The air release valve assembly must be replaced as a complete unit. Individual parts are not sold separately.

To remove the plunger pad (2), tap out the pin (3) and remove the pad from the float rod (11).

To remove the rod and floats (14 and 16), disengage the hardware (7, 8, 9 and 10) and separate the air release adaptor (5) from the float chamber (15). Remove the O-ring (6).

Slide the assembled rod and floats out of the float chamber. To remove the floats from the rod, remove one of the cotter pins (12 and 18), and slide the floats and flat washers (13 and 17) off the rod.

Air Release Valve Reassembly

Slide the floats (14 and 16) and washers (13 and 17) onto the rod as shown in Figures 1 and 2, and secure with the cotter pins (12 and 18). Slide the assembled rod and floats into the float chamber. Install the O-ring (6), and secure the air release adaptor (5) to the float chamber with the hardware (7, 8, 9 and 10).

Install the plunger pad (2) on the float rod and secure with the pin (3). Screw the air release valve (1) onto the pipe nipple (4) until the dimension shown in Figures 1 and 2 is achieved. This dimension establishes the correct float rod adjustment, and is critical to proper junction of the release valve. Connect the vent tubing to the air release valve.

Replace the gasket (20) and install the valve seat (21) into the float chamber. Connect the return tubing to the sump valve.

GRP33-08 AIR RELEASE VALVE DISASSEMBLY AND REASSEMBLY

Review all safety information in Section A.

The GRP33-08 Air Release Valve requires little service due to its rugged, minimum maintenance design. However, if it becomes necessary to inspect or replace parts, follow these instructions, which are keyed to the sectional view (see Figure 3) and the accompanying parts list.

Before attempting to service the Air Release Valve, disconnect or lock out the power supply to the pump to prevent accidental start-up. Close all valves in the suction and discharge piping and drain the pump casing and group grind. Refer to the literature accompanying the pump for maintenance and repair of the pump and group grind.



Before operating or servicing the Air Release Valve or pump, be certain proper safety practices are followed. Provide adequate ventilation, prohibit smoking, wear static-resistant clothing and shoes. Clean up all fuel spills immediately after occurrence.



Before attempting to open or service the Air Release Valve or pump:

1. Familiarize yourself with this manual.
2. Disconnect or lock out the power source to ensure that the pump will remain inoperative.
3. Allow the pump and liquid to cool if overheated.
4. Check the temperature before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.

Air Release Valve Disassembly

Remove the drain plug (11) and drain the float chamber. Clean and reinstall the drain plug after

draining, using “Loctite 567 PST” or equivalent on the drain plug threads.

Disconnect the return tubing from the sump valve (2).

To remove the sump valve, turn the valve clockwise and pull until it comes out of the base of the float chamber. Remove the gasket (1).

Disconnect the vent tubing from the air release valve assembly (14). To remove the air release valve assembly, disengage the hardware (5 and 6) and pry the valve assembly off of the float chamber. Remove the O-ring (13).

Move the air release valve assembly to a clean work station before further disassembly.

The only serviceable part of the air release valve assembly (14) is the rubber valve seat (not shown). If the rubber seat requires replacement, remove the socket head capscrews (17) and separate the cap assembly (18) from the rest of the air release valve assembly. Remove the gasket (16).

Use a pair of needle nose pliers to pull the rubber valve seat out of its metal seat.

To remove the plunger pad (4), tap out the pin (9) and remove the pad from the float rod (3).

To remove the rod and float (3 and 7), disengage the hardware (5 and 6) and separate the air release adaptor (15) from the float chamber (12). Remove the O-ring (13).

Slide the assembled rod and float out of the float chamber. To remove the float from the rod, remove one of the cotter pins (8) and slide the float off the rod.

Air Release Valve Reassembly

Slide the float (7) onto the rod as shown in Figure 3, and secure with the cotter pins (8). Slide the assembled rod and float into the float chamber (12). Install the O-ring (13) and secure the air release adaptor (15) to the float chamber with the hardware (5 and 6).

Install the plunger pad (4) on the float rod and secure with the pin (9). The ends of the pin must not protrude beyond the O.D. Of the plunger pad on either side.

Replace the gasket (1) and install the valve seat (2) into the float chamber. Connect the return tubing to the sump valve.

**For Warranty Information, Please Visit
www.grpumps.com/warranty
or call:
U.S.: 419-755-1280
Canada: 519-631-2870
International: +1-419-755-1352**

GORMAN-RUPP PUMPS