

**INSTALLATION, OPERATION,
AND MAINTENANCE MANUAL**
WITH PARTS LIST



PA SERIES PUMP

MODEL
PA6C60-4045T-ESP

GORMAN-RUPP PUMPS

www.grpumps.com

Register your new
Gorman-Rupp pump online at
www.grpumps.com

Valid serial number and e-mail address required.



The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

RECORD YOUR PUMP MODEL AND SERIAL NUMBER

Please record your pump model and serial number in the spaces provided below. Your Gorman-Rupp distributor needs this information when you require parts or service.

Pump Model: _____

Serial Number: _____

TABLE OF CONTENTS

INTRODUCTION	PAGE I – 1
SAFETY - SECTION A	PAGE A – 1
INSTALLATION – SECTION B	PAGE B – 1
Pump Dimensions	PAGE B – 1
PREINSTALLATION INSPECTION	PAGE B – 1
Battery Installation	PAGE B – 2
POSITIONING PUMP	PAGE B – 2
Lifting	PAGE B – 2
Mounting	PAGE B – 2
SUCTION AND DISCHARGE PIPING	PAGE B – 3
Materials	PAGE B – 3
Line Configuration	PAGE B – 3
Connections to Pump	PAGE B – 3
Gauges	PAGE B – 3
SUCTION LINES	PAGE B – 3
Fittings	PAGE B – 3
Strainers	PAGE B – 3
Sealing	PAGE B – 4
Suction Line Positioning	PAGE B – 4
DISCHARGE LINES	PAGE B – 5
Siphoning	PAGE B – 5
Valves	PAGE B – 5
ALIGNMENT	PAGE B – 5
AUTO-START	PAGE B – 5
Float Switch Installation	PAGE B – 6
OPERATION – SECTION C	PAGE C – 1
OPERATION	PAGE C – 1
PRIMING	PAGE C – 1
STARTING	PAGE C – 1
OPERATION	PAGE C – 1
Leakage	PAGE C – 1
Pump Vacuum Check	PAGE C – 1
Liquid Temperature And Overheating	PAGE C – 2
Strainer Check	PAGE C – 2
STOPPING	PAGE C – 2
BEARING TEMPERATURE CHECK	PAGE C – 2
Cold Weather Preservation	PAGE C – 3
TROUBLESHOOTING – SECTION D	PAGE D – 1

TABLE OF CONTENTS
(continued)

PREVENTIVE MAINTENANCE	PAGE D – 3
PUMP MAINTENANCE AND REPAIR - SECTION E	PAGE E – 1
STANDARD PERFORMANCE CURVE	PAGE E – 1
PARTS LIST:	
Pump Model	PAGE E – 3
Pump Assembly	PAGE E – 5
Pump End Assembly	PAGE E – 7
Repair Rotating Assembly	PAGE E – 9
Priming Chamber Assembly	PAGE E – 10
Drive Assembly	PAGE E – 11
PUMP AND SEAL DISASSEMBLY AND REASSEMBLY	PAGE E – 12
Priming Chamber Removal And Disassembly	PAGE E – 12
Discharge Check Valve Removal and Disassembly	PAGE E – 13
Draining Oil From Seal Cavity	PAGE E – 13
Separating Pump And Drive Assembly From Engine	PAGE E – 13
Impeller Loosening	PAGE E – 13
Pump Casing And Wear Plate Removal	PAGE E – 14
Impeller Removal	PAGE E – 14
Seal Removal	PAGE E – 14
Shaft and Bearing Removal and Disassembly	PAGE E – 15
Shaft and Bearing Reassembly and Installation	PAGE E – 15
Securing Intermediate And Drive Assembly To Engine	PAGE E – 16
Seal Reassembly and Installation	PAGE E – 17
Impeller Installation And Adjustment	PAGE E – 20
Pump Casing And Wear Plate Installation	PAGE E – 20
Discharge Check Valve Reassembly And Installation	PAGE E – 20
Priming Chamber Assembly And Installation	PAGE E – 21
LUBRICATION	PAGE E – 21
Seal Assembly	PAGE E – 21
Bearings	PAGE E – 21
Engine	PAGE E – 21

INTRODUCTION

Thank You for purchasing a Gorman-Rupp pump. **Read this manual** carefully to learn how to safely install and operate your pump. Failure to do so could result in personal injury or damage to the pump.

Because pump installations are seldom identical, this manual cannot possibly provide detailed instructions and precautions for every aspect of each specific application. Therefore, it is the responsibility of the owner/installer of the pump to ensure that applications not addressed in this manual are performed **only** after establishing that neither operator safety nor pump integrity are compromised by the installation. Pumps and related equipment **must** be installed and operated according to all national, local and industry standards.

If there are any questions regarding the pump or its application which are not covered in this manual or in other literature accompanying this unit, please contact your Gorman-Rupp distributor, or The Gorman-Rupp Company:

The Gorman-Rupp Company
P.O. Box 1217
Mansfield, Ohio 44901—1217
Phone: (419) 755—1011
 or:
Gorman-Rupp of Canada Limited
70 Burwell Road
St. Thomas, Ontario N5P 3R7
Phone: (519) 631—2870

For information or technical assistance on the power source, contact the power source manufacturer's local dealer or representative.

HAZARD AND INSTRUCTION DEFINITIONS

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:



Immediate hazards which WILL result in severe personal injury or death. These instructions describe the procedure required and the injury which will result from failure to follow the procedure.



Hazards or unsafe practices which COULD result in severe personal injury or death. These instructions describe the procedure required and the injury which could result from failure to follow the procedure.



Hazards or unsafe practices which COULD result in minor personal injury or product or property damage. These instructions describe the requirements and the possible damage which could result from failure to follow the procedure.

NOTE

Instructions to aid in installation, operation, and maintenance or which clarify a procedure.

SAFETY - SECTION A

This information applies to Prime Aire® Series pumps. Refer to the manual accompanying the engine before attempting to begin operation.

Because pump installations are seldom identical, this manual cannot possibly provide detailed instructions and precautions for each specific application. Therefore, it is the owner/installer's responsibility to ensure that applications not addressed in this manual are performed only after establishing that neither operator safety nor pump integrity are compromised by the installation.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine and disconnect the positive battery cable to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure the pump is cool before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



This pump may be equipped with an automatic starting system, and therefore subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect the positive battery

cable before performing any maintenance. Failure to do so may result in serious personal injury.



Do not attempt to disengage any part of an overheated pump unit. Vapor pressure within the pump casing can eject these parts with great force when they are disengaged. Allow the pump to completely cool before servicing it.



This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids. Do not attempt to pump volatile, corrosive, or flammable liquids which may damage the pump or endanger personnel as a result of pump failure.



Death or serious personal injury and damage to the pump or components can occur if proper lifting procedures are not observed. Make certain that hoists, chains, slings or cables are in good working condition and of sufficient capacity and that they are positioned so that loads will be balanced and the pump or components will not be damaged when lifting. Suction and discharge hoses and piping must be removed from the pump before lifting. Lift the pump or component only as high as necessary and keep personnel away from suspended objects.



After the pump has been installed, make

certain that the pump and all piping or hose connections are tight, properly supported and secure before operation.



Do not operate the pump against a closed discharge valve. If operated against a closed discharge valve, pump components will deteriorate, and the liquid could come to a boil, build pressure, and cause the pump casing to rupture or explode. Momentary closure of a discharge valve is acceptable only when required for startup or shutdown procedures.




Do not remove plates, covers, gauges, pipe plugs, or fittings from an overheated pump. Vapor pressure within the pump can cause parts being disengaged to be ejected with great force. Allow the pump to cool completely before servicing.



This pump may be used to handle materials which could cause illness through direct exposure or emitted fumes. Wear adequate protective clothing when working on the pump or piping.



Do not operate the pump without guards in place over the rotating parts. Exposed rotating parts can catch clothing, fingers or tools, causing severe injury to personnel.



Make sure the pump is level. Lower jack stands and chock the wheels, if so equipped. Use caution when positioning the skid-mounted unit to prevent damage to the fuel tank.



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.



Fuel used by internal combustion engines presents an extreme explosion and fire hazard. Make certain that all fuel lines are securely connected and free of leaks. Never refuel a hot or running engine. Avoid overfilling the fuel tank. Always use the correct type of fuel.

INSTALLATION – SECTION B

Review all SAFETY information in Section A.

Since pump installations are seldom identical, this section offers only general recommendations and practices required to inspect, position, and arrange the pump and piping.

Most of the information pertains to a standard **static lift** application where the pump is positioned above the free level of liquid to be pumped.

If installed in a **flooded suction application** where the liquid is supplied to the pump under pressure, some of the information such as mounting, line

configuration, and priming must be tailored to the specific application. Since the pressure supplied to the pump is critical to performance and safety, **be sure** to limit the incoming pressure to 50% of the maximum permissible operating pressure as shown on the pump performance curve.

For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

Pump Dimensions

See Figure 1 for the approximate physical dimensions of this pump.

OUTLINE DRAWING

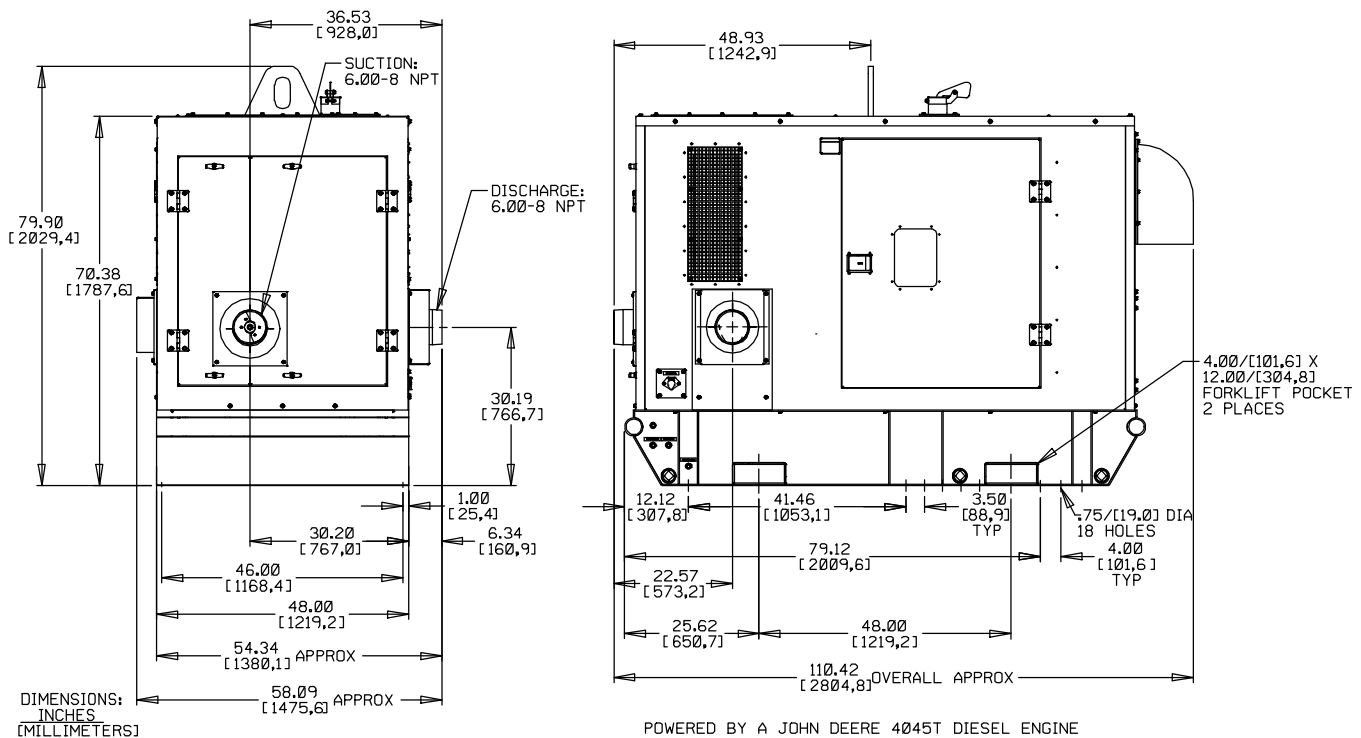



Figure 1. Pump Model PA6C60-4045T-ESP

PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before shipment from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- a. Inspect the pump for cracks, dents, damaged threads, and other obvious damage.
- b. Check for and tighten loose attaching hardware. Since gaskets tend to shrink after drying, check for loose hardware at mating surfaces.

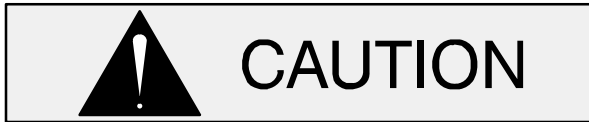- c. Carefully read all tags, decals, and markings on the pump assembly, and perform all duties indicated. Note that the pump shaft rotates in the required direction.



Only operate this pump in the direction indicated by the arrow on the pump body and on the accompanying decal. Otherwise, the impeller could become loosened from the shaft and seriously damage the pump.

- d. Check levels and lubricate as necessary. Refer to **LUBRICATION** in the **Maintenance and Repair Manual** and perform duties as instructed.
- e. If the pump has been stored for more than 12 months, some of the components or lubricants may have exceeded their maximum shelf life. These **must be inspected or replaced** to ensure maximum pump service.

If the maximum shelf life has been exceeded, or if anything appears to be abnormal, contact your Gorman-Rupp distributor or the factory to determine the repair or updating policy. **Do not** put the pump into service until appropriate action has been taken.

Battery Installation

Unless otherwise specified on the pump order, the engine battery is **not** included with engine driven units.

Refer to the information accompanying the battery and/or electrolyte solution for activation and charging instructions.

Before installing the battery, clean the positive and negative cable connectors, and the battery terminals. Secure the battery by tightening the holddown brackets. The terminals and clamps may be coated with petroleum jelly to retard corrosion. Connect and tighten the positive cable first, then the negative cable.

POSITIONING PUMP



Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. Attach lifting equipment to the lifting device fitted to the pump. If chains or cable are wrapped around the pump to lift it, make certain that they are positioned so as not to damage the pump, and so that the load will be balanced. The bail is intended for use in lifting the pump assembly only. Suction and discharge hoses and piping must be removed from the pump before lifting.

Lifting

Pump unit weights will vary depending on the mounting and drive provided. Check the shipping tag on the unit packaging for the actual weight, and use lifting equipment with appropriate capacity. Drain the pump and remove all customer-installed equipment such as suction and discharge hoses or piping before attempting to lift existing, installed units.



The pump assembly can be seriously damaged if the chains or cables used to lift and move the unit are improperly wrapped around the pump.

Mounting

Locate the pump in an accessible place as close as practical to the liquid being pumped. Level mounting is essential for proper operation. The pump may have to be supported or shimmed to provide for level operation and eliminate vibration.

For engine driven units, the pump **must** be positioned as level as possible to ensure sufficient lubrication and fuel supply to the engine.

If the pump has been mounted on a moveable base, make certain the base is stationary by setting

the brake and blocking the wheels before attempting to operate the pump.



If the pump has been mounted on a movable base, do not attempt to operate the pump unless the unit is level. Be sure the leveling stands are positioned on a solid surface, and the wheels are chocked.

SUCTION AND DISCHARGE PIPING

Pump performance is adversely effected by increased suction lift, discharge elevation, and friction losses. See the performance curve and operating range shown on Page E-1 to be sure your overall application allows pump to operate within the safe operation range.

Materials

Either pipe or hose may be used for suction and discharge lines; however, the materials must be compatible with the liquid being pumped. If hose is used in suction lines, it must be the rigid-wall, reinforced type to prevent collapse under suction. Using piping couplings in suction lines is not recommended.

Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

Connections to Pump

Before tightening a connecting flange, align it exactly with the pump port. Never pull a pipe line into place by tightening the flange bolts and/or couplings.

Lines near the pump must be independently supported to avoid strain on the pump which could cause excessive vibration, decreased bearing life, and increased shaft and seal wear. If hose-type

lines are used, they should have adequate support to secure them when filled with liquid and under pressure.

Gauges

The pump is drilled and tapped for installing discharge pressure and vacuum suction gauges. It is recommended that gauges be installed to monitor pump performance. Seal the gauge threads with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem horizontal to avoid air pockets.

Strainers

Be certain to use the strainer furnished with the pump; any spherical solids which pass through the strainer will also pass through the pump itself.

If a strainer not furnished with the pump is installed by the pump user, make certain that the total area of the openings in the strainer is at least three or four times the cross section of the suction line, and that the openings will not permit passage of solids larger than the solids handling capability of the pump.

This pump is designed to handle up to 3 inch (76,2 mm) diameter spherical solids.

Sealing

Since even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift, all connections in the suction line should be sealed with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

Suction Lines In Sumps

If a single suction line is installed in a sump, it should be positioned away from the wall of the sump at a distance equal to 1 1/2 times the diameter of the suction line.

If there is a liquid flow from an open pipe into the sump, the flow should be kept away from the suction inlet because the inflow will carry air down into the sump, and air entering the suction line will reduce pump efficiency.

If it is necessary to position inflow close to the suction inlet, install a baffle between the inflow and the suction inlet at a distance 1-1/2 times the diameter of the suction pipe. The baffle will allow entrained

air to escape from the liquid before it is drawn into the suction inlet.

If two suction lines are installed in a single sump, the flow paths may interact, reducing the efficiency of one or both pumps. To avoid this, position the suction inlets so that they are separated by a distance equal to at least 3 times the diameter of the suction pipe.

Suction Line Positioning

The depth of submergence of the suction line is critical to **efficient** pump operation. Figure 2 shows recommended minimum submergence vs. velocity.

Although not recommended, the vacuum assisted priming feature allows the pump to be operated temporarily in a "slurping" application with varying water levels.

NOTE

The pipe submergence required may be reduced by installing a standard pipe increaser fitting at the end of the suction line. The larger opening size will reduce the inlet velocity. Calculate the required submergence using the following formula based on the increased opening size (area or diameter).

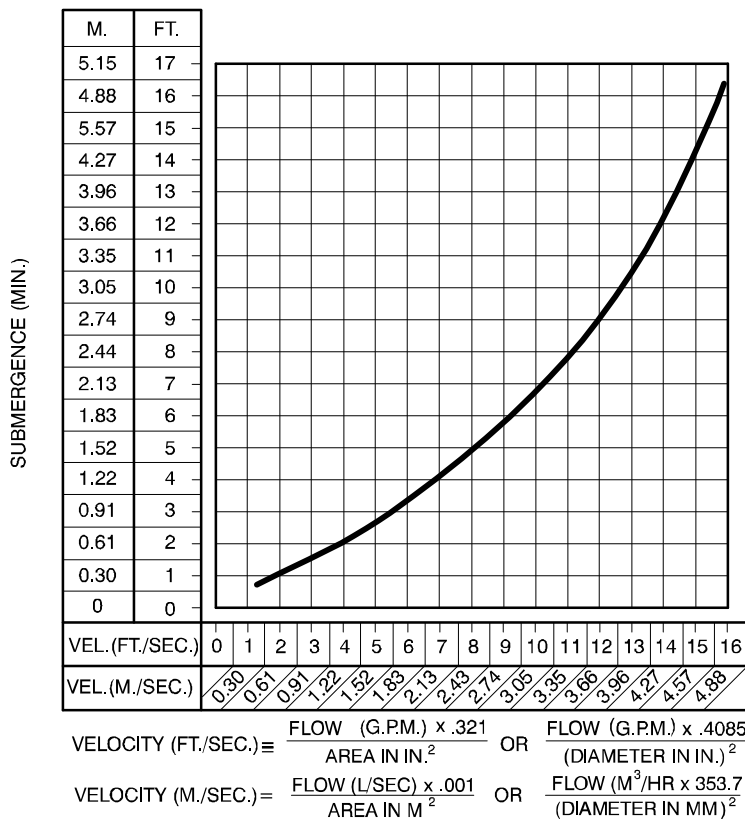


Figure 2. Recommended Minimum Suction Line Submergence vs. Velocity

DISCHARGE LINES

Siphoning

Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action causing damage to the pump could result.

Valves

This pump is designed with a check valve in the discharge line.

If a throttling valve is desired in the discharge line, use a valve as large as the largest pipe to minimize friction losses. Never install a throttling valve in a suction line.

With high discharge heads, it is recommended that a throttling valve be installed in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.



If the application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

ALIGNMENT

The alignment of the pump, air compressor and engine is critical for trouble-free mechanical operation. See Section E, **Securing Intermediate And Drive Assembly To Engine** in **MAINTENANCE AND REPAIR**, for details.

AUTO-START

The standard pump is equipped with an auto-start control system which allows the pump to start and stop as the liquid level in the wet well or sump rises and falls.

Refer to the information which follows for installation details for the liquid level sensing system provided with your pump.

Float Switch Installation

The Float Switch autostart system employs either a single or double float switch, where a bulb raises or lowers (floats) with the liquid level, thus activating an enclosed miniature switch. The floats are equipped with a socket type connector that plugs into a matching receptacle on the auto-start control box.

Standard floats are equipped with 50 feet (15,2 m) of cable.

When installing the floats, note the following:

- a. **Be sure** to provide sufficient room in the wet well or sump so that floats do not get obstructed or drawn into the suction line. If a flexible suction hose is used, it may be extended to lay along the bottom of the wet well or sump and the float can be attached to the hose above the point where it bends along the bottom. Direct the suction line toward the flow, and the float(s) away from the flow. If a stand-

pipe is available, attach the float switch cable to the standpipe in the sump at the approximate desired liquid level.

- b. In a single float system, the cable can be tethered to the suction line or standpipe approximately 6 inches (152 mm) above the float. This setting allows approximately 9 inches (229 mm) of liquid rise between pump start/stop. The start/stop interval may be increased by extending the float end of the cable. The liquid level in the sump will increase approximately 8 inches (203 mm) between start/stop intervals for every 6 inches (152 mm) of cable increase.
- c. If a double float switch system is used, position the "Start" float at the desired high water level in the sump, and the "Stop" float at the desired low water level in the pump.
- d. Refer to Figure 3 for additional float switch data.

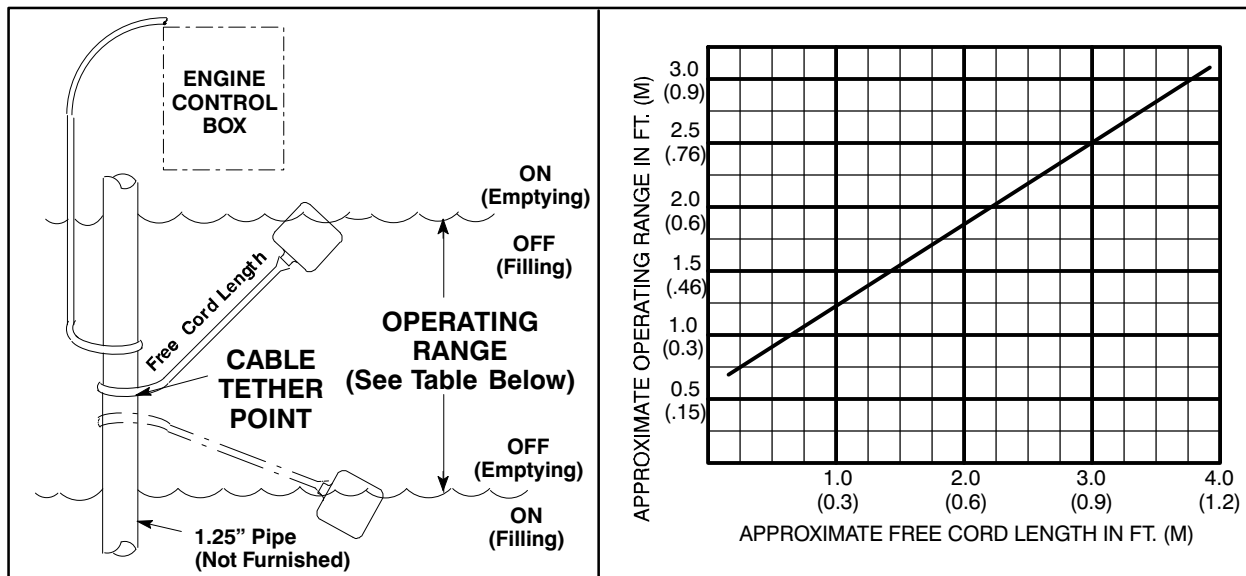


Figure 3. Float Switch Data

OPERATION – SECTION C

Review all **SAFETY** information in Section A.

Follow the instructions on all tags, labels and decals attached to the pump.



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.

OPERATION



This pump is designed to handle most non-volatile, non-flammable liquids containing specified entrained solids and corrosives. Do not attempt to pump volatile, corrosive, or flammable liquids which may damage the pump or endanger personnel as a result of pump failure.



Pump speed and operating condition points must be within the continuous performance range shown on the performance curve in Section E on page E-1.

PRIMING

Install the pump and piping as described in **INSTALLATION**. Make sure that the piping connections are tight, and that the pump is securely mounted. Check that the pump is properly lubri-

cated (see **LUBRICATION** in **MAINTENANCE AND REPAIR**).

The pump will begin to prime upon startup. The air in the suction line will be discharged from the educator discharge line. Complete priming is indicated by a positive discharge pressure reading.

If full priming is not achieved, the discharge check valve may be malfunctioning. If this occurs, shut down the pump and consult **Maintenance and Repair**, Section E for further details.

STARTING

Check the fuel level and oil levels in the engine, air compressor, pump bearings and seal housing.

Make sure the pump is level. Lower the jack stands and chock the wheels, if so equipped.



Make sure the pump is level. Lower jack stands and chock the wheels, if so equipped. Use caution when positioning the skid-mounted unit to prevent damage to the fuel tank.



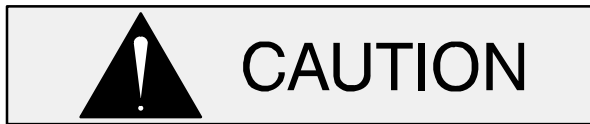
This pump is equipped with automatic liquid level controls, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect the positive battery cable before performing any maintenance. Failure to do so may result in serious personal injury.

Consult the engine operations manual before attempting to start the unit.

Manual Starting

On initial start-up, set the engine speed at in the half-throttle position. Turn the keyswitch to 'MANU-

AL'. After the engine starts and the unit is fully primed, adjust the engine RPM until the desired flow rate is achieved.



Pump speed and operating condition points must be within the continuous performance range shown on the curve on Page E-1.

Automatic Starting

With the float system installed, follow the procedures outlined for manual starting and throttle adjustment. Switch the keyswitch to 'OFF' until the water level rises above the on point for the float system, then turn the keyswitch to the 'AUTO' setting. The unit will run until the float signals the control that the water in the wet well is at the float off point, at which time the unit will shut down automatically. When the float signals the control that the water in the wet well is at the float on point, the unit will restart automatically, repeating the cycle.

Priming

The pump will begin to prime upon startup. The air in the suction line will be discharged from the educator discharge line. Complete priming is indicated by a positive discharge pressure reading.

If full priming is not achieved, the discharge check valve may be malfunctioning. If this occurs, shut down the pump and consult the separate **Maintenance and Repair** manual for further details.

Routine Operation



Do not operate an internal combustion engine in an explosive atmosphere. When operating an internal combustion engine in an enclosed area, make sure exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless and odorless.

Adjust the engine speed to achieve the desired output. Do not exceed the factory set engine speed and system operating pressure. Do not operate below the recommended operating speed (if applicable).



Never tamper with the governor to gain more power. The governor establishes safe operating limits that should not be exceeded. Refer to the Performance Curve in Maintenance and Repair, Section E for the maximum continuous operating speed for this pump.

Operation In Extreme Heat

The safety shutdown system will automatically stop the unit if engine operating temperature exceeds design limits. If engine over-temperature shutdown occurs, allow the unit to cool before re-starting.

If engine overheating continues, check the engine lubricant level and viscosity. Consult the engine operation manual for the recommended lubricant for operation in extreme heat.

If the unit is being operated in the **automatic** mode, adjust the float(s) to allow shorter run and longer cooling periods, if possible.



This pump is equipped with automatic liquid level controls, and is subject to automatic restart. Keep hands and clothing away from the unit to prevent injury during automatic operation. Disconnect the battery before performing any maintenance. Failure to do so may result in serious personal injury.

OPERATIONAL CHECKS

Leakage

Once the pump is fully primed, no leakage should be visible at pump mating surfaces, or at pump

connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

Pump Vacuum Check

Read the vacuum gauge with the pump primed and at operation speed. Shut off the pump. The vacuum gauge reading will immediately drop proportionate to static suction lift, and should then stabilize. If the vacuum reading falls off rapidly after stabilization, an air leak exists. Before checking for the source of the leak, check the point of installation of the vacuum gauge.

Liquid Temperature And Overheating

The **maximum** liquid temperature for this pump is 160° F (71 °C). Do not apply it at a higher operating temperature.

Overheating can occur if operated with the valves in the suction or discharge lines closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump immediately and allow it to completely cool before servicing it. **Approach any over-heated pump cautiously.**



Allow an over-heated pump to completely cool before servicing. Do not remove plates, covers, gauges, or fittings from an overheated pump. Liquid within the pump can reach boiling temperatures, and vapor pressure within the pump can cause parts being disengaged to be ejected with great force. After the pump cools, drain the liquid from the pump by removing the casing drain plug. Use caution when removing the plug to prevent injury to personnel from hot liquid.

Strainer Check

Check the strainer regularly, and clean it as necessary. The strainer should also be checked if pump flow rate begins to drop. Monitor and record the vacuum suction gauge readings regularly to detect strainer blockage.

Never introduce air or steam pressure into the pump casing or piping to remove a blockage. This could result in personal injury or damage to the equipment. If backflushing is absolutely necessary, **liquid pressure** must be limited to 50% of the maximum permissible operating pressure shown on the pump performance curve.

STOPPING

Manual Stopping

Never halt the flow of liquid suddenly. If the liquid being pumped is stopped abruptly, damaging shock waves can be transmitted to the pump and piping system. Close all connecting valves slowly.

Reduce the throttle speed slowly and allow the engine to idle briefly before stopping.

In the manual mode, reduce the throttle speed slowly, and allow the engine to idle briefly before switching the HAND-OFF-AUTO switch to 'OFF'.



If the application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

After stopping the pump, switch off the engine ignition and remove the key to ensure that the pump will remain inoperative.

Automatic Stopping

In the automatic mode, the pump will stop when the liquid in the wet well or sump lowers and activates the "Off" float switch(s). The pump will restart automatically when the liquid rises and activates the "On" float switch(s).

Safety Shutdown System

The unit is equipped with a safety system to automatically shut down the engine under certain conditions. The engine will automatically shut down:

1. If the engine exceeds its safe operating temperature.
2. If the engine oil pressure drops below design limits.
3. If the engine fails to start within a pre-set period of time.
4. If the engine speed exceeds the safe operating range.
5. If the engine fan belt breaks.

Lights on the control panel will indicate which of the safety features has caused the engine to shut down.

Should any of the safety features cause the engine to shut down, **the cause must be determined and corrected** before putting the unit back into service. The engine **will not restart** until the key switch has been returned to the 'OFF' position for at least 10 seconds.

All safety shutdown features are pre-set at the factory for optimum performance and safety; **do not** attempt to adjust these settings.



Never disconnect any of the safety shutdown features; this will void the warranty and could result in serious damage to the unit and/or injury to personnel. Safety shutdown features are pre-set at the factory; do not attempt to adjust any of the settings. Determine the cause of shutdown before putting the unit back into service. Consult the factory for additional information.

PERIODIC CHECKS

Seal Cavity And Bearing Lubrication

Both the seal and bearing cavities were fully lubricated at the factory. Check the lubrication levels before startup, and regularly thereafter as indicated in Section E, **Maintenance and Repair**. When lubrication is required, use **only** SAE No. 30 non-detergent oil.

Bearing Temperature Check

Bearings normally run at higher than ambient temperatures because of heat generated by friction. Temperatures up to 160°F (71°C) are considered normal for bearings, and they can operate safely to at least 180°F (82°C).

Checking bearing temperatures by hand is inaccurate. Bearing temperatures can be measured accurately by placing a contact-type thermometer against the housing. Record this temperature for future reference.

A sudden increase in bearing temperatures is a warning that the bearings are at the point of failing to operate properly. Make certain that the bearing lubricant is of the proper viscosity and at the correct level (see **LUBRICATION** in Section E, **Maintenance and Repair**). Bearing overheating can also be caused by shaft misalignment and/or excessive vibration.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.

Air Compressor

The air compressor was lubricated for test at the factory. However, **always** check the lubrication level before startup.

Additional Checks

See Page D—4 and perform all recommended preventive maintenance checks applicable to your particular unit.

Consult the manual accompanying the engine and perform any and all routine checks recommended by the engine manufacturer.

COLD WEATHER PRESERVATION

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts. If the pump will be idle for more than a

few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump from completely draining, insert a rod or stiff wire in the drain port, and agitate the liquid during the draining process. Clean out any remaining solids by flushing with a hose.

TROUBLESHOOTING – SECTION D

Review all SAFETY information in Section A.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine, disconnect the positive battery cable and take precautions to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure pump is cool before opening any covers, plates, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP FAILS TO PRIME	Discharge check valve contaminated, damaged, or unable to seat. Air compressor head 180° out. Air leak in suction line. Lining of suction hose collapsed. Leaking or worn seal or pump gasket. Suction lift or discharge head too high. Air compressor damaged or belts broken. Strainer clogged.	Clean or replace check valve. Consult factory. Correct leak. Replace suction hose. Check pump vacuum. Replace leaking or worn seal or gasket. Check piping installation and install bypass line if needed. See INSTALLATION . Check and repair/replace. Check strainer and clean if necessary.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Eductor clogged. Air leak in suction line. Lining of suction hose collapsed. Leaking or worn seal or pump gasket.	Check and clean eductor. Correct leak. Replace suction hose. Check pump vacuum. Replace leaking or worn seal or gasket.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE (cont.)	<p>Strainer clogged.</p> <p>Discharge check valve clogged.</p> <p>Suction intake not submerged at proper level or sump too small.</p> <p>Impeller or other wearing parts worn or damaged.</p> <p>Impeller clogged.</p> <p>Discharge head too high.</p> <p>Suction lift too high.</p> <p>Pump speed too slow.</p> <p>Belt or flexible coupling broken.</p>	<p>Check strainer and clean if necessary.</p> <p>Check and clean check valve.</p> <p>Check installation and correct submergence as needed.</p> <p>Replace worn or damaged parts. Check that impeller is properly centered and rotates freely.</p> <p>Free impeller of debris.</p> <p>Install bypass line.</p> <p>Measure lift w/vacuum gauge. Reduce lift and/or friction losses in suction line.</p> <p>Check engine output; consult engine operation manual.</p> <p>Check and replace as necessary.</p>
PUMP REQUIRES TOO MUCH POWER	<p>Pump speed too high.</p> <p>Extreme ambient temperature.</p> <p>Discharge head too low.</p> <p>Fuel filter clogged.</p> <p>Liquid solution too thick.</p> <p>Fuel contaminated.</p> <p>Pump or jack shaft bearing(s) frozen.</p>	<p>Check engine output.</p> <p>Reduce pump output.</p> <p>Adjust discharge valve.</p> <p>Check & replace often in extreme operating conditions.</p> <p>Dilute if possible.</p> <p>Check and replace as required.</p> <p>Disassemble, check and replace bearing(s) as required..</p>
PUMP CLOGS FREQUENTLY	<p>Discharge flow too slow.</p> <p>Suction check valve or foot valve clogged or binding.</p> <p>Liquid solution too thick.</p>	<p>Open discharge valve fully to increase flow rate, and run engine at maximum governed speed.</p> <p>Clean valve.</p> <p>Dilute if possible.</p>
EXCESSIVE NOISE	<p>Cavitation in pump.</p> <p>Pumping entrained air.</p> <p>Pump or drive not securely mounted.</p> <p>Impeller clogged or damaged.</p>	<p>Reduce suction lift and/or friction losses in suction line. Record vacuum and pressure gauge readings and consult local representative or factory.</p> <p>Locate and eliminate source of air bubble.</p> <p>Secure mounting hardware.</p> <p>Clean out debris; replace damaged parts.</p>

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
BEARINGS RUN TOO HOT	<p>Bearing temperature is high, but within limits.</p> <p>Low or incorrect lubricant.</p> <p>Suction and discharge lines not properly supported.</p> <p>Drive misaligned.</p> <p>Excessive tension on drive belt.</p>	<p>Check bearing temperature regularly to monitor any increase.</p> <p>Check for proper type and level of lubricant.</p> <p>Check piping installation for proper support.</p> <p>Align drive properly.</p> <p>Check belt tension. Adjust as required.</p>

PREVENTIVE MAINTENANCE

Since pump applications are seldom identical, and pump wear is directly affected by such things as the abrasive qualities, pressure and temperature of the liquid being pumped, this section is intended only to provide general recommendations and practices for preventive maintenance. Regardless of the application however, following a routine preventive maintenance schedule will help assure trouble-free performance and long life from your Gorman-Rupp pump. For specific questions concerning your application, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

Record keeping is an essential component of a good preventive maintenance program. Changes in suction and discharge gauge readings (if so


equipped) between regularly scheduled inspections can indicate problems that can be corrected before system damage or catastrophic failure occurs. The appearance of wearing parts should also be documented at each inspection for comparison as well. Also, if records indicate that a certain part (such as the seal) fails at approximately the same duty cycle, the part can be checked and replaced before failure occurs, reducing unscheduled down time.

For new applications, a first inspection of wearing parts at 250 hours will give insight into the wear rate for your particular application. Subsequent inspections should be performed at the intervals shown on the chart below. Critical applications should be inspected more frequently.

Preventive Maintenance Schedule					
Item	Service Interval*				
	Daily	Weekly	Monthly	Semi-Annually	Annually
General Condition (Temperature, Unusual Noises or Vibrations, Cracks, Leaks, Loose Hardware, Etc.)	I				
Pump Performance (Gauges, Speed, Flow)	I				
Bearing Lubrication		I			R
Seal Lubrication (And Packing Adjustment, If So Equipped)		I			R
V-Belts (If So Equipped)			I		
Air Release Valve Plunger Rod (If So Equipped)			I	C	
Front Impeller Clearance (Wear Plate)				I	
Rear Impeller Clearance (Seal Plate)				I	
Check Valve					I
Pressure Relief Valve (If So Equipped)					C
Pump and Driver Alignment					I
Shaft Deflection					I
Bearings					I
Bearing Housing					I
Piping					I
Driver Lubrication – See Mfgr’s Literature					I
<p>Legend: I = Inspect, Clean, Adjust, Repair or Replace as Necessary C = Clean R = Replace</p> <p>* Service interval based on an intermittent duty cycle equal to approximately 4000 hours annually. Adjust schedule as required for lower or higher duty cycles or extreme operating conditions.</p>					

PUMP MAINTENANCE AND REPAIR – SECTION E

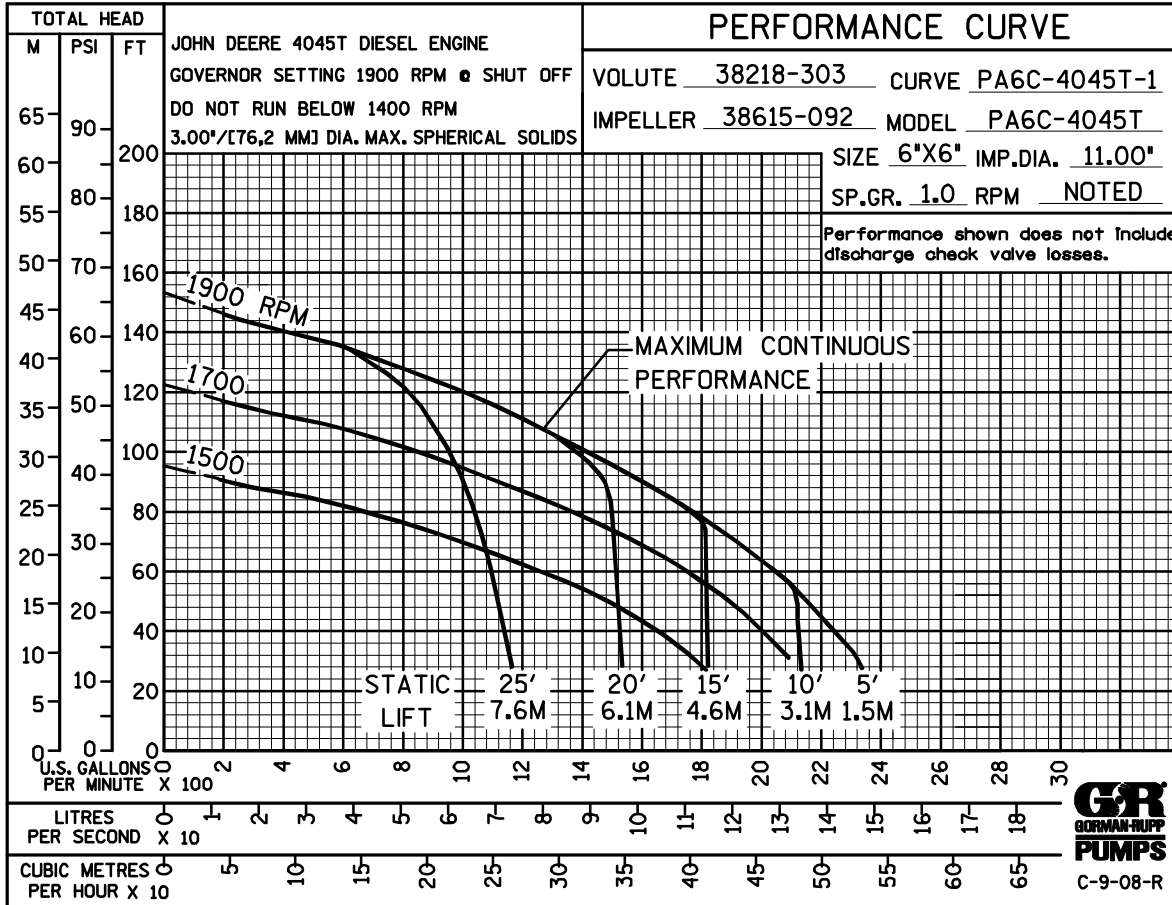MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.



* STANDARD PERFORMANCE FOR PUMP MODEL PA6C60-4045T-ESP

* Based on 70°F (21°C) clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.



Pump speed and operating condition points must be within the continuous performance range shown on the curve.

ILLUSTRATION

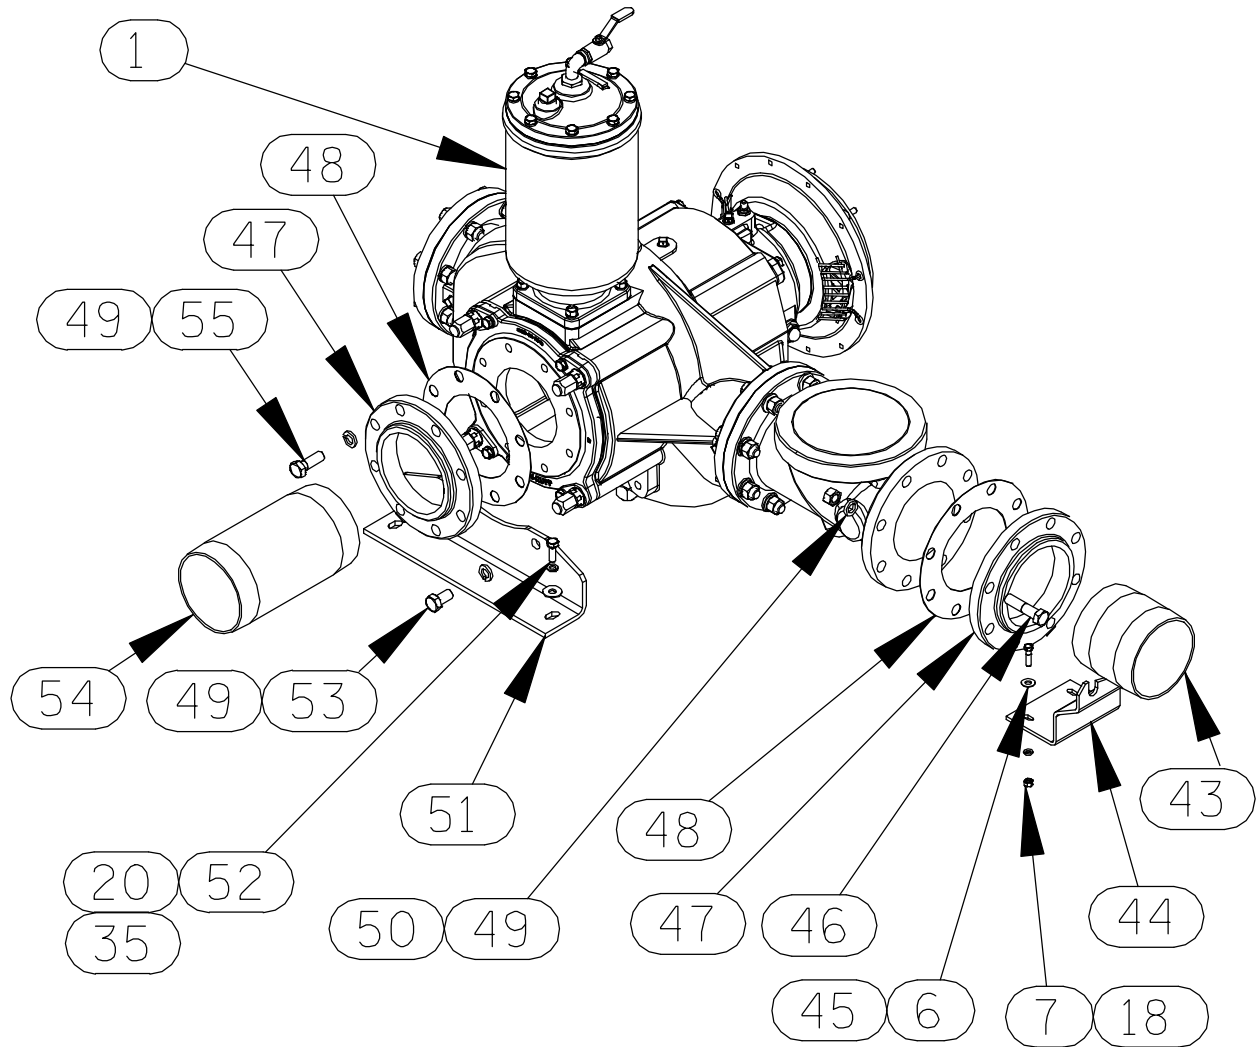


Figure 1. Pump Model PA6C60-4045T-ESP

Pump Model PA6C60-4045T-ESP
PARTS LIST
(From S/N 1479001 Up)

ITEM NO.	PART NAME	PART NUMBER	QTY	ITEM NO.	PART NAME	PART NUMBER	QTY
1	PA6C60-(SAE 3/10)	46133-799	1	67	EXHAUST	29334-110	1
2	J DEERE ENGINE 4045T	29224-383	1	68	REDUCER PIPE BUSHING	AP2008 11999	1
3	PA6C ENCLOSURE ASSY	42164-031	1	69	HOSE CLAMP	26518-641	2
4	HOSE CLAMP	26518-678	2	70	REDUCER PIPE BUSHING	AP1206 14990	2
5	BRACKET	34184-007 15120	1	71	FUEL PICKUP	29332-146	1
6	FLAT WASHER	K06 15991	12	72	HOSE BARB FITTING	26523-386	2
7	HEX NUT	D06 15991	12	73	HOSE .18 ID X 30" LG	18513-301	1
8	4.50" ID HOSE X 48" LG	18533-172	1	74	FUEL PICKUP	29332-144	1
9	HOIST BAIL ASSY	44715-044 24150	1	75	HOSE BARB FTG	26523-015	1
10	GASKET	33311-060 19460	1	76	CONNECTOR	S1447	1
11	MOUNTING BRACKET	34741-021 13000	1	77	STREET ELBOW	RS08 11999	2
12	HEX HEAD CAP SCREW	B0604 15991	10	78	PIPE TEE	U08 11999	1
13	FLAT WASHER	K04 15991	4	79	PIPE UNION	AH12 11999	1
14	CONTROL PANEL	48122-544	1	80	REDUCER PIPE BUSHING	AP1208 15079	1
15	PLUG CONNECTOR	27261-301	1	81	1/2" CHECK VALVE	26641-092	1
16	CABLE SO 16/4 X 80" LG	18141-147	1	82	MALE ELBOW	26341-310	1
17	HEX HEAD CAP SCREW	B0605 15991	4	83	HOSE .50 I.D. X 13.5" LG	18513-056	1
18	LOCK WASHER	J06 15991	12	84	MALE HOSE END	26525-020	5
19	HEX HEAD CAP SCREW	B0805 15991	11	85	HOSE CLAMP	26518-642	8
20	LOCK WASHER	J08 15991	15	86	HOSE FITTING	26523-335	2
21	U-BOLT 4" OD	29334-268	2	87	HOSE .50 I.D. X 60" LG	18513-056	1
22	WEATHER CAP	S1706	1	88	PIPE ELBOW	R16 11999	1
23	EXHAUST ELBOW	29334-381	1	89	HOSE .38 I.D. X 89" LG	18513-054	1
24	MOUNTING ASS'Y	41881-788	2	90	HOSE .50 I.D. X 25" LG	18513-056	1
25	HEX HEAD CAP SCREW	B0504 15991	14	91	HOSE BARB FTG	26523-047	1
26	LOCK WASHER	J05 15991	24	92	CONNECTOR	S1598	1
27	FLAT WASHER	K05 15991	24	93	HOSE 1/2 I.D. X 45" LG	18513-113	1
28	HEX HEAD CAP SCREW	B0606-1/2 15991	2	94	CONNECTOR	26351-065	1
29	BATTERY BOX LID ASSY	42113-012 24150	1	95	HOSE ASSY	46341-426	1
30	BATTERY	29331-526	1	96	HOSE .38 I.D. X 23.5" LG	18513-302	1
31	1/0 POS. CABLE ASSY	47311-137	1	97	CABLE CLAMP 5/8	27111-105	1
32	1/0 NEG. CABLE ASSY	47311-133	1	98	TAP SCREW #10 X 3/4	21281-446	1
33	BATTERY BOX ASSY	42431-030 24150	1	99	HOSE .37 I.D. X 36" LG	18513-302	1
34	HEX NUT W/FLANGE	21765-314	6	100	HOSE BARB	26523-333	1
35	FLAT WASHER	K08 15991	11	101	PRESSURE RELIEF VALVE	26662-028	1
36	SKID BASE ASSY	41565-596	1	102	BALL VALVE	26631-023	1
37	HEX HEAD CAP SCREW	B0505 15991	10	103	CLOSE PIPE NIPPLE	T08 15079	1
38	HEX NUT	D08 15991	3	104	VENTURI	26817-001	1
39	STUD MOUNT	24631-011	2	105	PIPE CPLG 1/2	AE1608 15079	1
40	BRACKET ASSY	41881-706 24150	1	106	STREET ELBOW	AGS08 11999	1
41	CROSS RAIL	34412-035 15080	1	107	HOSE BARB FITTING	26523-446	1
42	CABLE TIE MTG BLOCK	27111-352	2	108	HEX ADAPTER	26523-188	1
43	PIPE NIPPLE	T9624 15070	1	109	U-BOLT 3 1/2" OD	S2227	1
44	CHECK VALVE SUPPORT	34561-012 15080	1	110	LOCK WASHER	J04 15991	2
45	HEX HEAD CAP SCREW	B0606 15991	2	111	HEX NUT	D04 15991	2
46	HEX HEAD CAP SCREW	B1212 15991	8	112	HOSE BARB FTG	26523-396	1
47	6" NPT FLANGE	1758 10010	2	113	HOSE CLAMP	26518-666	1
48	6" GASKET	25113-036	2		NOT SHOWN:		
49	LOCK WASHER	J12 15991	18		PRIME AIRE DECAL	38812-078	2
50	HEX NUT	D12 15991	8		SUCTION STICKER	6588AG	1
51	PUMP SUPPORT	34265-051 15080	1		DECAL KIT-SILENT PUMP	48154-813	1
52	HEX HEAD CAP SCREW	B0806 15991	2		DISCHARGE STICKER	6588BJ	1
53	HEX HEAD CAP SCREW	B1206 15991	2		CAUTION DECAL	2613FJ	1
54	PIPE NIPPLE	T9648 15070	1		ENGINE START-UP TAG	38816-269	1
55	HEX HEAD CAP SCREW	B1209 15991	8		INSTRUCTION TAG	38817-085	1
56	T-BOLT CLAMP 4 IN	26518-166	1		LEVEL CONTROL LABEL	38816-332	1
57	SHIM SET	48261-045	4		OIL DRAIN LABEL	38816-323	1
58	ELBOW, REDUCING, 90°	29284-041	1		TAPE-1/8" X 5/8" X 168"	18668-003	1
59	AIR INTAKE PIPE	46671-503 24150	1		INSTRUCTION DECAL	38818-144	1
60	TBOLT CLAMP 3.5 IN	26518-164	5		RADIATOR DRAIN LABEL	38816-322	1
61	SOCKET CONNECTOR	27263-001	1		PUMP DRAIN LABEL	38816-320	1
62	FLANGED CAPSCREW	21634-505	2		FUEL TANK DRAIN LABEL	38816-321	1
63	ELBOW	29284-039	1		FLOAT SWITCH	48312-980	1
64	AIR INTAKE PIPE	31417-068 15210	1		CABLE TIE 1 1/4	27111-205	2
65	3.00 X 3.00 HUMP HOSE	29284-056	1		WARNING DECAL	2613FE	2
66	MUFFLER BRACKET ASSY	41888-178 24150	1		FUEL DECAL	38816-196	1

ILLUSTRATION

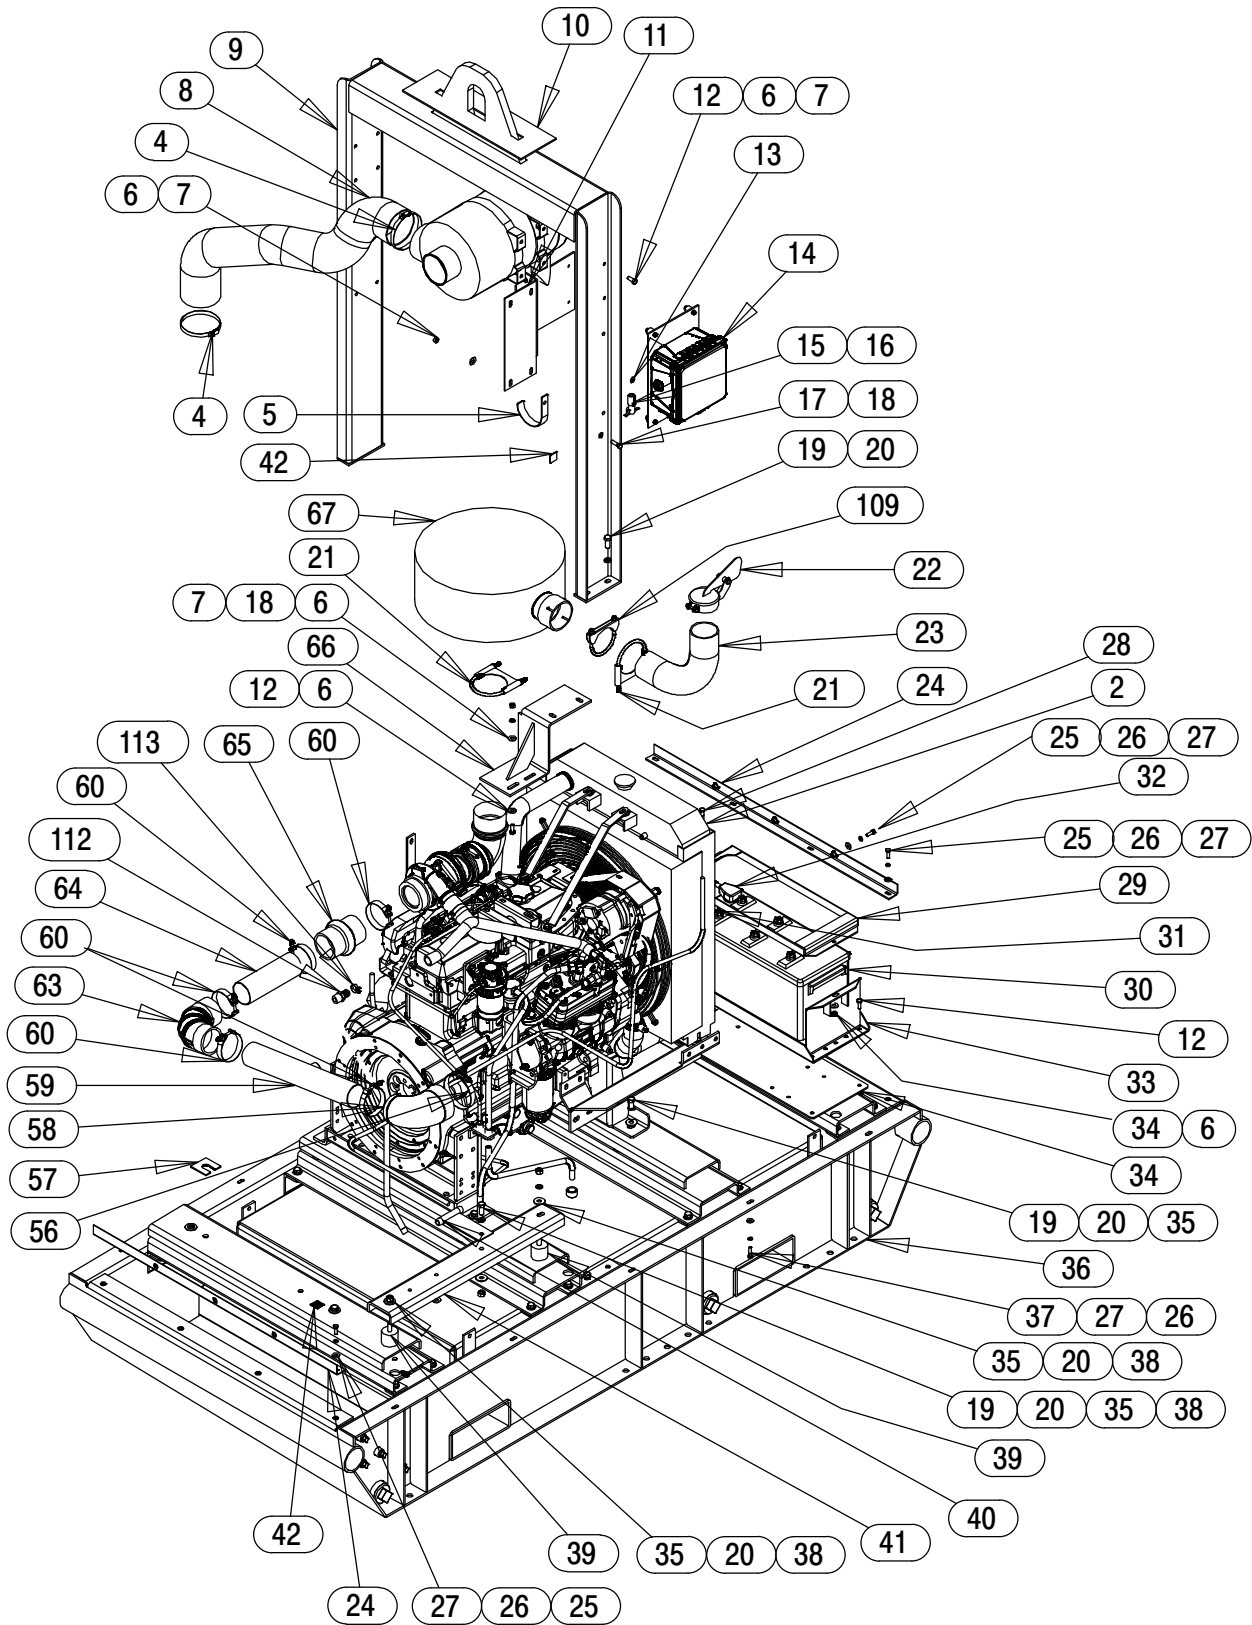


Figure 2. Pump Model PA6C60-4045T-ESP

Pump Model PA6C60-4045T-ESP
PARTS LIST (Cont'd)
 (From S/N 1479001 Up)

ITEM NO.	PART NAME	PART NUMBER	QTY	ITEM NO.	PART NAME	PART NUMBER	QTY
1	PA6C60-(SAE 3/10)	46133-799	1	67	EXHAUST	29334-110	1
2	J DEERE ENGINE 4045T	29224-383	1	68	REDUCER PIPE BUSHING	AP2008 11999	1
3	PA6C ENCLOSURE ASSY	42164-031	1	69	HOSE CLAMP	26518-641	2
4	HOSE CLAMP	26518-678	2	70	REDUCER PIPE BUSHING	AP1206 14990	2
5	BRACKET	34184-007 15120	1	71	FUEL PICKUP	29332-146	1
6	FLAT WASHER	K06 15991	12	72	HOSE BARB FITTING	26523-386	2
7	HEX NUT	D06 15991	12	73	HOSE .18 ID X 30" LG	18513-301	1
8	4.50" ID HOSE X 48" LG	18533-172	1	74	FUEL PICKUP	29332-144	1
9	HOIST BAIL ASSY	44715-044 24150	1	75	HOSE BARB FTG	26523-015	1
10	GASKET	33311-060 19460	1	76	CONNECTOR	S1447	1
11	MOUNTING BRACKET	34741-021 13000	1	77	STREET ELBOW	RS08 11999	2
12	HEX HEAD CAP SCREW	B0604 15991	10	78	PIPE TEE	U08 11999	1
13	FLAT WASHER	K04 15991	4	79	PIPE UNION	AH12 11999	1
14	CONTROL PANEL	48122-544	1	80	REDUCER PIPE BUSHING	AP1208 15079	1
15	PLUG CONNECTOR	27261-301	1	81	1/2" CHECK VALVE	26641-092	1
16	CABLE SO 16/4 X 80" LG	18141-147	1	82	MALE ELBOW	26341-310	1
17	HEX HEAD CAP SCREW	B0605 15991	4	83	HOSE .50 I.D. X 13.5" LG	18513-056	1
18	LOCK WASHER	J06 15991	12	84	MALE HOSE END	26525-020	5
19	HEX HEAD CAP SCREW	B0805 15991	11	85	HOSE CLAMP	26518-642	8
20	LOCK WASHER	J08 15991	15	86	HOSE FITTING	26523-335	2
21	U-BOLT 4" OD	29334-268	2	87	HOSE .50 I.D. X 60" LG	18513-056	1
22	WEATHER CAP	S1706	1	88	PIPE ELBOW	R16 11999	1
23	EXHAUST ELBOW	29334-381	1	89	HOSE .38 I.D. X 89" LG	18513-054	1
24	MOUNTING ASS'Y	41881-788	2	90	HOSE .50 I.D. X 25" LG	18513-056	1
25	HEX HEAD CAP SCREW	B0504 15991	14	91	HOSE BARB FTG	26523-047	1
26	LOCK WASHER	J05 15991	24	92	CONNECTOR	S1598	1
27	FLAT WASHER	K05 15991	24	93	HOSE 1/2 I.D. X 45" LG	18513-113	1
28	HEX HEAD CAP SCREW	B0606-1/2 15991	2	94	CONNECTOR	26351-065	1
29	BATTERY BOX LID ASSY	42113-012 24150	1	95	HOSE ASSY	46341-426	1
30	BATTERY	29331-526	1	96	HOSE .38 I.D. X 23.5" LG	18513-302	1
31	1/0 POS. CABLE ASSY	47311-137	1	97	CABLE CLAMP 5/8	27111-105	1
32	1/0 NEG. CABLE ASSY	47311-133	1	98	TAP SCREW #10 X 3/4	21281-446	1
33	BATTERY BOX ASSY	42431-030 24150	1	99	HOSE .37 I.D. X 36" LG	18513-302	1
34	HEX NUT W/FLANGE	21765-314	6	100	HOSE BARB	26523-333	1
35	FLAT WASHER	K08 15991	11	101	PRESSURE RELIEF VALVE	26662-028	1
36	SKID BASE ASSY	41565-596	1	102	BALL VALVE	26631-023	1
37	HEX HEAD CAP SCREW	B0505 15991	10	103	CLOSE PIPE NIPPLE	T08 15079	1
38	HEX NUT	D08 15991	3	104	VENTURI	26817-001	1
39	STUD MOUNT	24631-011	2	105	PIPE CPLG 1/2	AE1608 15079	1
40	BRACKET ASSY	41881-706 24150	1	106	STREET ELBOW	AGS08 11999	1
41	CROSS RAIL	34412-035 15080	1	107	HOSE BARB FITTING	26523-446	1
42	CABLE TIE MTG BLOCK	27111-352	2	108	HEX ADAPTER	26523-188	1
43	PIPE NIPPLE	T9624 15070	1	109	U-BOLT 3 1/2" OD	S2227	1
44	CHECK VALVE SUPPORT	34561-012 15080	1	110	LOCK WASHER	J04 15991	2
45	HEX HEAD CAP SCREW	B0606 15991	2	111	HEX NUT	D04 15991	2
46	HEX HEAD CAP SCREW	B1212 15991	8	112	HOSE BARB FTG	26523-396	1
47	6" NPT FLANGE	1758 10010	2	113	HOSE CLAMP	26518-666	1
48	6" GASKET	25113-036	2		NOT SHOWN:		
49	LOCK WASHER	J12 15991	18		PRIME AIRE DECAL	38812-078	2
50	HEX NUT	D12 15991	8		SUCTION STICKER	6588AG	1
51	PUMP SUPPORT	34265-051 15080	1		DECAL KIT-SILENT PUMP	48154-813	1
52	HEX HEAD CAP SCREW	B0806 15991	2		DISCHARGE STICKER	6588BJ	1
53	HEX HEAD CAP SCREW	B1206 15991	2		CAUTION DECAL	2613FJ	1
54	PIPE NIPPLE	T9648 15070	1		ENGINE START-UP TAG	38816-269	1
55	HEX HEAD CAP SCREW	B1209 15991	8		INSTRUCTION TAG	38817-085	1
56	T-BOLT CLAMP 4 IN	26518-166	1		LEVEL CONTROL LABEL	38816-332	1
57	SHIM SET	48261-045	4		OIL DRAIN LABEL	38816-323	1
58	ELBOW, REDUCING, 90°	29284-041	1		TAPE-1/8" X 5/8" X 168"	18668-003	1
59	AIR INTAKE PIPE	46671-503 24150	1		INSTRUCTION DECAL	38818-144	1
60	TBOLT CLAMP 3.5 IN	26518-164	5		RADIATOR DRAIN LABEL	38816-322	1
61	SOCKET CONNECTOR	27263-001	1		PUMP DRAIN LABEL	38816-320	1
62	FLANGED CAPSCREW	21634-505	2		FUEL TANK DRAIN LABEL	38816-321	1
63	ELBOW	29284-039	1		FLOAT SWITCH	48312-980	1
64	AIR INTAKE PIPE	31417-068 15210	1		CABLE TIE 1 1/4	27111-205	2
65	3.00 X 3.00 HUMP HOSE	29284-056	1		WARNING DECAL	2613FE	2
66	MUFFLER BRACKET ASSY	41888-178 24150	1		FUEL DECAL	38816-196	1

ILLUSTRATION

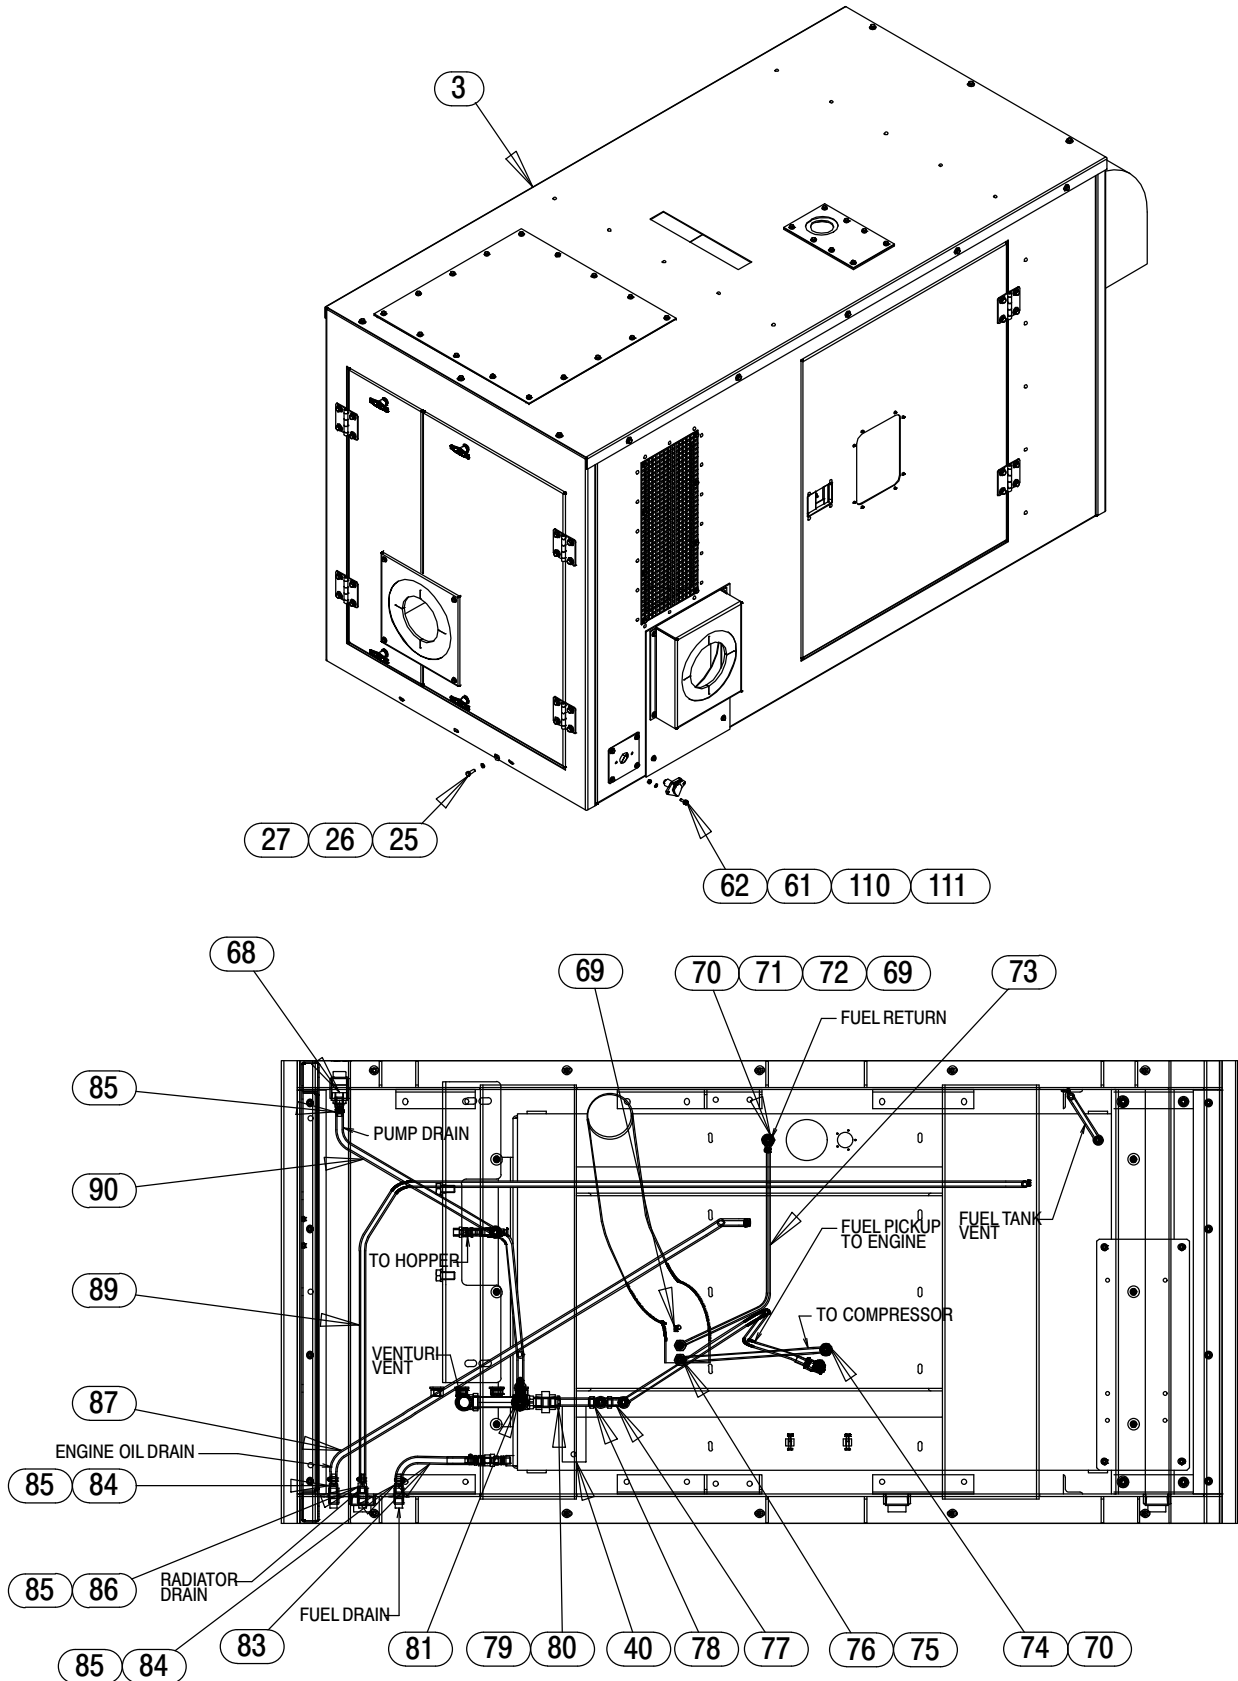


Figure 3. Pump Model PA6C60-4045T-ESP

Pump Model PA6C60-4045T-ESP
PARTS LIST (Cont'd)
(From S/N 1479001 Up)

ITEM NO.	PART NAME	PART NUMBER	QTY	ITEM NO.	PART NAME	PART NUMBER	QTY
1	PA6C60-(SAE 3/10)	46133-799	1	67	EXHAUST	29334-110	1
2	J DEERE ENGINE 4045T	29224-383	1	68	REDUCER PIPE BUSHING	AP2008 11999	1
3	PA6C ENCLOSURE ASSY	42164-031	1	69	HOSE CLAMP	26518-641	2
4	HOSE CLAMP	26518-678	2	70	REDUCER PIPE BUSHING	AP1206 14990	2
5	BRACKET	34184-007 15120	1	71	FUEL PICKUP	29332-146	1
6	FLAT WASHER	K06 15991	12	72	HOSE BARB FITTING	26523-386	2
7	HEX NUT	D06 15991	12	73	HOSE .18 ID X 30" LG	18513-301	1
8	4.50" ID HOSE X 48" LG	18533-172	1	74	FUEL PICKUP	29332-144	1
9	HOIST BAIL ASSY	44715-044 24150	1	75	HOSE BARB FTG	26523-015	1
10	GASKET	33311-060 19460	1	76	CONNECTOR	S1447	1
11	MOUNTING BRACKET	34741-021 13000	1	77	STREET ELBOW	RS08 11999	2
12	HEX HEAD CAP SCREW	B0604 15991	10	78	PIPE TEE	U08 11999	1
13	FLAT WASHER	K04 15991	4	79	PIPE UNION	AH12 11999	1
14	CONTROL PANEL	48122-544	1	80	REDUCER PIPE BUSHING	AP1208 15079	1
15	PLUG CONNECTOR	27261-301	1	81	1/2" CHECK VALVE	26641-092	1
16	CABLE SO 16/4 X 80" LG	18141-147	1	82	MALE ELBOW	26341-310	1
17	HEX HEAD CAP SCREW	B0605 15991	4	83	HOSE .50 I.D. X 13.5" LG	18513-056	1
18	LOCK WASHER	J06 15991	12	84	MALE HOSE END	26525-020	5
19	HEX HEAD CAP SCREW	B0805 15991	11	85	HOSE CLAMP	26518-642	8
20	LOCK WASHER	J08 15991	15	86	HOSE FITTING	26523-335	2
21	U-BOLT 4" OD	29334-268	2	87	HOSE .50 I.D. X 60" LG	18513-056	1
22	WEATHER CAP	S1706	1	88	PIPE ELBOW	R16 11999	1
23	EXHAUST ELBOW	29334-381	1	89	HOSE .38 I.D. X 89" LG	18513-054	1
24	MOUNTING ASS'Y	41881-788	2	90	HOSE .50 I.D. X 25" LG	18513-056	1
25	HEX HEAD CAP SCREW	B0504 15991	14	91	HOSE BARB FTG	26523-047	1
26	LOCK WASHER	J05 15991	24	92	CONNECTOR	S1598	1
27	FLAT WASHER	K05 15991	24	93	HOSE 1/2 I.D. X 45" LG	18513-113	1
28	HEX HEAD CAP SCREW	B0606-1/2 15991	2	94	CONNECTOR	26351-065	1
29	BATTERY BOX LID ASSY	42113-012 24150	1	95	HOSE ASSY	46341-426	1
30	BATTERY	29331-526	1	96	HOSE .38 I.D. X 23.5" LG	18513-302	1
31	1/0 POS. CABLE ASSY	47311-137	1	97	CABLE CLAMP 5/8	27111-105	1
32	1/0 NEG. CABLE ASSY	47311-133	1	98	TAP SCREW #10 X 3/4	21281-446	1
33	BATTERY BOX ASSY	42431-030 24150	1	99	HOSE .37 I.D. X 36" LG	18513-302	1
34	HEX NUT W/FLANGE	21765-314	6	100	HOSE BARB	26523-333	1
35	FLAT WASHER	K08 15991	11	101	PRESSURE RELIEF VALVE	26662-028	1
36	SKID BASE ASSY	41565-596	1	102	BALL VALVE	26631-023	1
37	HEX HEAD CAP SCREW	B0505 15991	10	103	CLOSE PIPE NIPPLE	T08 15079	1
38	HEX NUT	D08 15991	3	104	VENTURI	26817-001	1
39	STUD MOUNT	24631-011	2	105	PIPE CPLG 1/2	AE1608 15079	1
40	BRACKET ASSY	41881-706 24150	1	106	STREET ELBOW	AGS08 11999	1
41	CROSS RAIL	34412-035 15080	1	107	HOSE BARB FITTING	26523-446	1
42	CABLE TIE MTG BLOCK	27111-352	2	108	HEX ADAPTER	26523-188	1
43	PIPE NIPPLE	T9624 15070	1	109	U-BOLT 3 1/2" OD	S2227	1
44	CHECK VALVE SUPPORT	34561-012 15080	1	110	LOCK WASHER	J04 15991	2
45	HEX HEAD CAP SCREW	B0606 15991	2	111	HEX NUT	D04 15991	2
46	HEX HEAD CAP SCREW	B1212 15991	8	112	HOSE BARB FTG	26523-396	1
47	6" NPT FLANGE	1758 10010	2	113	HOSE CLAMP	26518-666	1
48	6" GASKET	25113-036	2		NOT SHOWN:		
49	LOCK WASHER	J12 15991	18		PRIME AIRE DECAL	38812-078	2
50	HEX NUT	D12 15991	8		SUCTION STICKER	6588AG	1
51	PUMP SUPPORT	34265-051 15080	1		DECAL KIT-SILENT PUMP	48154-813	1
52	HEX HEAD CAP SCREW	B0806 15991	2		DISCHARGE STICKER	6588BJ	1
53	HEX HEAD CAP SCREW	B1206 15991	2		CAUTION DECAL	2613FJ	1
54	PIPE NIPPLE	T9648 15070	1		ENGINE START-UP TAG	38816-269	1
55	HEX HEAD CAP SCREW	B1209 15991	8		INSTRUCTION TAG	38817-085	1
56	T-BOLT CLAMP 4 IN	26518-166	1		LEVEL CONTROL LABEL	38816-332	1
57	SHIM SET	48261-045	4		OIL DRAIN LABEL	38816-323	1
58	ELBOW, REDUCING, 90°	29284-041	1		TAPE-1/8" X 5/8" X 168"	18668-003	1
59	AIR INTAKE PIPE	46671-503 24150	1		INSTRUCTION DECAL	38818-144	1
60	TBOLT CLAMP 3.5 IN	26518-164	5		RADIATOR DRAIN LABEL	38816-322	1
61	SOCKET CONNECTOR	27263-001	1		PUMP DRAIN LABEL	38816-320	1
62	FLANGED CAPSCREW	21634-505	2		FUEL TANK DRAIN LABEL	38816-321	1
63	ELBOW	29284-039	1		FLOAT SWITCH	48312-980	1
64	AIR INTAKE PIPE	31417-068 15210	1		CABLE TIE 1 1/4	27111-205	2
65	3.00 X 3.00 HUMP HOSE	29284-056	1		WARNING DECAL	2613FE	2
66	MUFFLER BRACKET ASSY	41888-178 24150	1		FUEL DECAL	38816-196	1

ILLUSTRATION

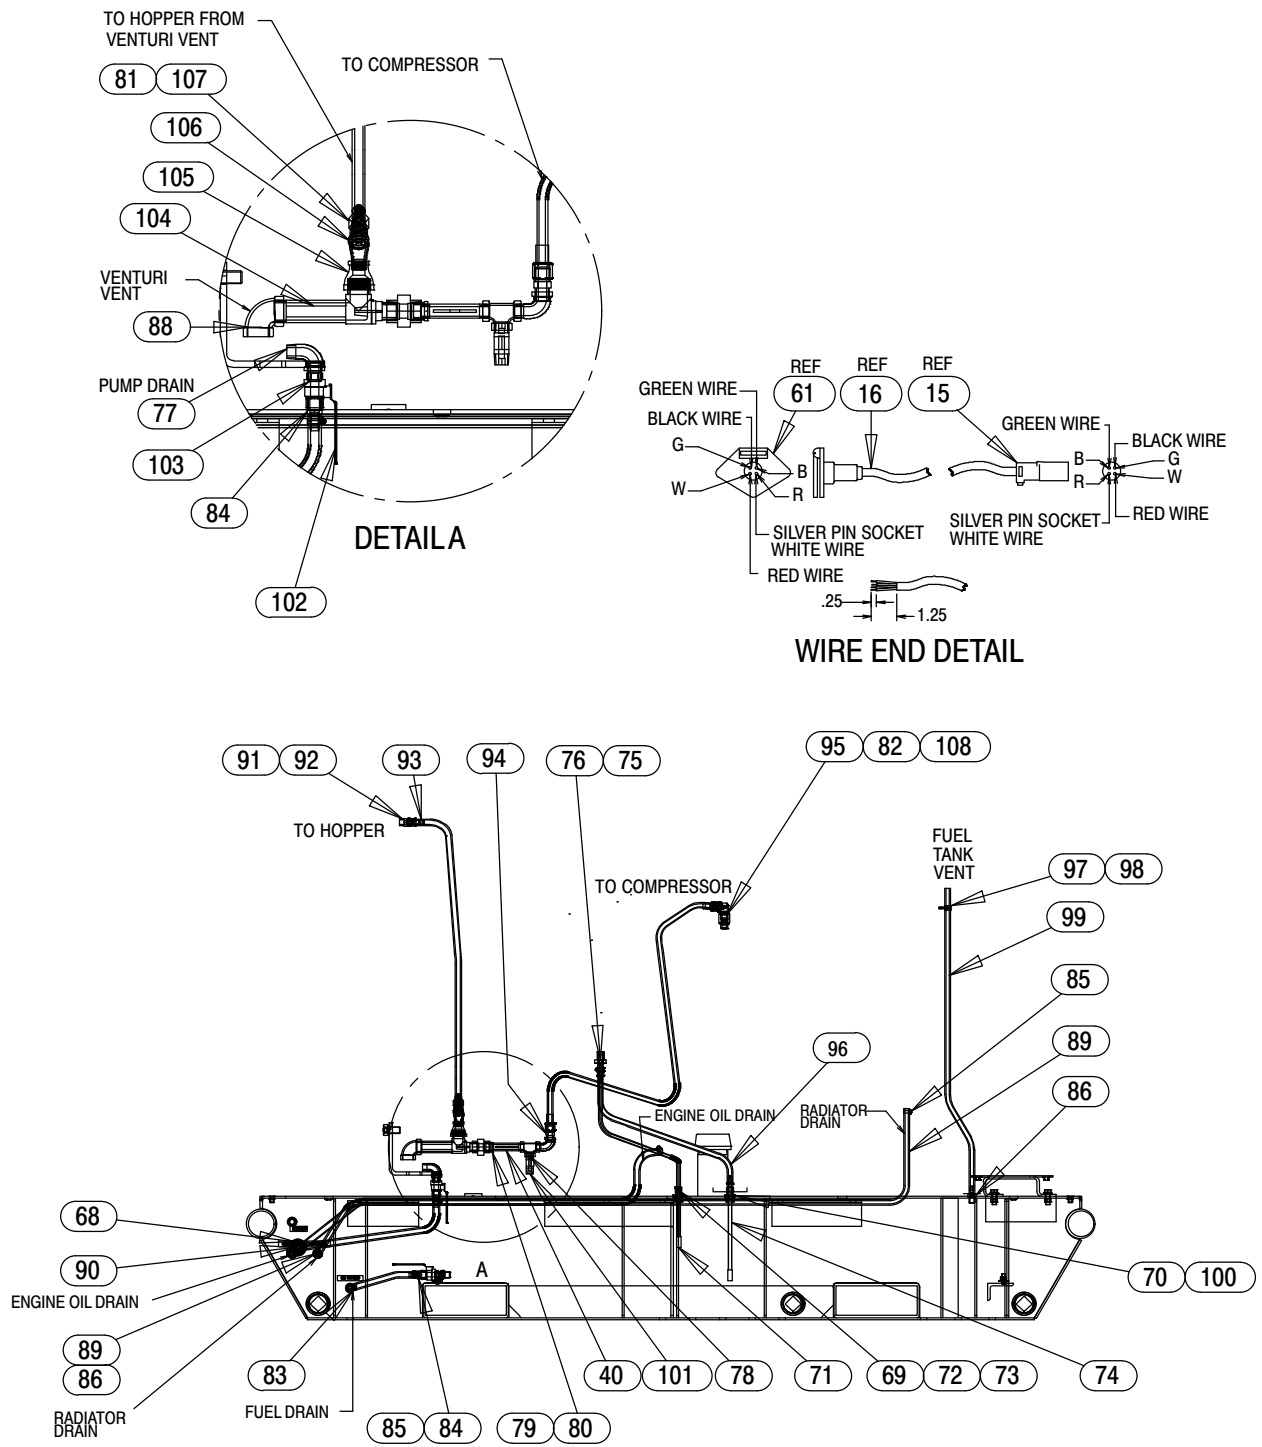


Figure 4. Pump Model PA6C60-4045T-ESP

Pump Model PA6C60-4045T-ESP
PARTS LIST (Cont'd)
(From S/N 1479001 Up)

ITEM NO.	PART NAME	PART NUMBER	QTY	ITEM NO.	PART NAME	PART NUMBER	QTY
1	PA6C60-(SAE 3/10)	46133-799	1	67	EXHAUST	29334-110	1
2	J DEERE ENGINE 4045T	29224-383	1	68	REDUCER PIPE BUSHING	AP2008 11999	1
3	PA6C ENCLOSURE ASSY	42164-031	1	69	HOSE CLAMP	26518-641	2
4	HOSE CLAMP	26518-678	2	70	REDUCER PIPE BUSHING	AP1206 14990	2
5	BRACKET	34184-007 15120	1	71	FUEL PICKUP	29332-146	1
6	FLAT WASHER	K06 15991	12	72	HOSE BARB FITTING	26523-386	2
7	HEX NUT	D06 15991	12	73	HOSE .18 ID X 30" LG	18513-301	1
8	4.50" ID HOSE X 48" LG	18533-172	1	74	FUEL PICKUP	29332-144	1
9	HOIST BAIL ASSY	44715-044 24150	1	75	HOSE BARB FTG	26523-015	1
10	GASKET	33311-060 19460	1	76	CONNECTOR	S1447	1
11	MOUNTING BRACKET	34741-021 13000	1	77	STREET ELBOW	RS08 11999	2
12	HEX HEAD CAP SCREW	B0604 15991	10	78	PIPE TEE	U08 11999	1
13	FLAT WASHER	K04 15991	4	79	PIPE UNION	AH12 11999	1
14	CONTROL PANEL	48122-544	1	80	REDUCER PIPE BUSHING	AP1208 15079	1
15	PLUG CONNECTOR	27261-301	1	81	1/2" CHECK VALVE	26641-092	1
16	CABLE SO 16/4 X 80" LG	18141-147	1	82	MALE ELBOW	26341-310	1
17	HEX HEAD CAP SCREW	B0605 15991	4	83	HOSE .50 I.D. X 13.5" LG	18513-056	1
18	LOCK WASHER	J06 15991	12	84	MALE HOSE END	26525-020	5
19	HEX HEAD CAP SCREW	B0805 15991	11	85	HOSE CLAMP	26518-642	8
20	LOCK WASHER	J08 15991	15	86	HOSE FITTING	26523-335	2
21	U-BOLT 4" OD	29334-268	2	87	HOSE .50 I.D. X 60" LG	18513-056	1
22	WEATHER CAP	S1706	1	88	PIPE ELBOW	R16 11999	1
23	EXHAUST ELBOW	29334-381	1	89	HOSE .38 I.D. X 89" LG	18513-054	1
24	MOUNTING ASS'Y	41881-788	2	90	HOSE .50 I.D. X 25" LG	18513-056	1
25	HEX HEAD CAP SCREW	B0504 15991	14	91	HOSE BARB FTG	26523-047	1
26	LOCK WASHER	J05 15991	24	92	CONNECTOR	S1598	1
27	FLAT WASHER	K05 15991	24	93	HOSE 1/2 I.D. X 45" LG	18513-113	1
28	HEX HEAD CAP SCREW	B0606-1/2 15991	2	94	CONNECTOR	26351-065	1
29	BATTERY BOX LID ASSY	42113-012 24150	1	95	HOSE ASSY	46341-426	1
30	BATTERY	29331-526	1	96	HOSE .38 I.D. X 23.5" LG	18513-302	1
31	1/0 POS. CABLE ASSY	47311-137	1	97	CABLE CLAMP 5/8	27111-105	1
32	1/0 NEG. CABLE ASSY	47311-133	1	98	TAP SCREW #10 X 3/4	21281-446	1
33	BATTERY BOX ASSY	42431-030 24150	1	99	HOSE .37 I.D. X 36" LG	18513-302	1
34	HEX NUT W/FLANGE	21765-314	6	100	HOSE BARB	26523-333	1
35	FLAT WASHER	K08 15991	11	101	PRESSURE RELIEF VALVE	26662-028	1
36	SKID BASE ASSY	41565-596	1	102	BALL VALVE	26631-023	1
37	HEX HEAD CAP SCREW	B0505 15991	10	103	CLOSE PIPE NIPPLE	T08 15079	1
38	HEX NUT	D08 15991	3	104	VENTURI	26817-001	1
39	STUD MOUNT	24631-011	2	105	PIPE CPLG 1/2	AE1608 15079	1
40	BRACKET ASSY	41881-706 24150	1	106	STREET ELBOW	AGS08 11999	1
41	CROSS RAIL	34412-035 15080	1	107	HOSE BARB FITTING	26523-446	1
42	CABLE TIE MTG BLOCK	27111-352	2	108	HEX ADAPTER	26523-188	1
43	PIPE NIPPLE	T9624 15070	1	109	U-BOLT 3 1/2" OD	S2227	1
44	CHECK VALVE SUPPORT	34561-012 15080	1	110	LOCK WASHER	J04 15991	2
45	HEX HEAD CAP SCREW	B0606 15991	2	111	HEX NUT	D04 15991	2
46	HEX HEAD CAP SCREW	B1212 15991	8	112	HOSE BARB FTG	26523-396	1
47	6" NPT FLANGE	1758 10010	2	113	HOSE CLAMP	26518-666	1
48	6" GASKET	25113-036	2		NOT SHOWN:		
49	LOCK WASHER	J12 15991	18		PRIME AIRE DECAL	38812-078	2
50	HEX NUT	D12 15991	8		SUCTION STICKER	6588AG	1
51	PUMP SUPPORT	34265-051 15080	1		DECAL KIT-SILENT PUMP	48154-813	1
52	HEX HEAD CAP SCREW	B0806 15991	2		DISCHARGE STICKER	6588BJ	1
53	HEX HEAD CAP SCREW	B1206 15991	2		CAUTION DECAL	2613FJ	1
54	PIPE NIPPLE	T9648 15070	1		ENGINE START-UP TAG	38816-269	1
55	HEX HEAD CAP SCREW	B1209 15991	8		INSTRUCTION TAG	38817-085	1
56	T-BOLT CLAMP 4 IN	26518-166	1		LEVEL CONTROL LABEL	38816-332	1
57	SHIM SET	48261-045	4		OIL DRAIN LABEL	38816-323	1
58	ELBOW, REDUCING, 90°	29284-041	1		TAPE-1/8" X 5/8" X 168"	18668-003	1
59	AIR INTAKE PIPE	46671-503 24150	1		INSTRUCTION DECAL	38818-144	1
60	TBOLT CLAMP 3.5 IN	26518-164	5		RADIATOR DRAIN LABEL	38816-322	1
61	SOCKET CONNECTOR	27263-001	1		PUMP DRAIN LABEL	38816-320	1
62	FLANGED CAPSCREW	21634-505	2		FUEL TANK DRAIN LABEL	38816-321	1
63	ELBOW	29284-039	1		FLOAT SWITCH	48312-980	1
64	AIR INTAKE PIPE	31417-068 15210	1		CABLE TIE 1 1/4	27111-205	2
65	3.00 X 3.00 HUMP HOSE	29284-056	1		WARNING DECAL	2613FE	2
66	MUFFLER BRACKET ASSY	41888-178 24150	1		FUEL DECAL	38816-196	1

ILLUSTRATION

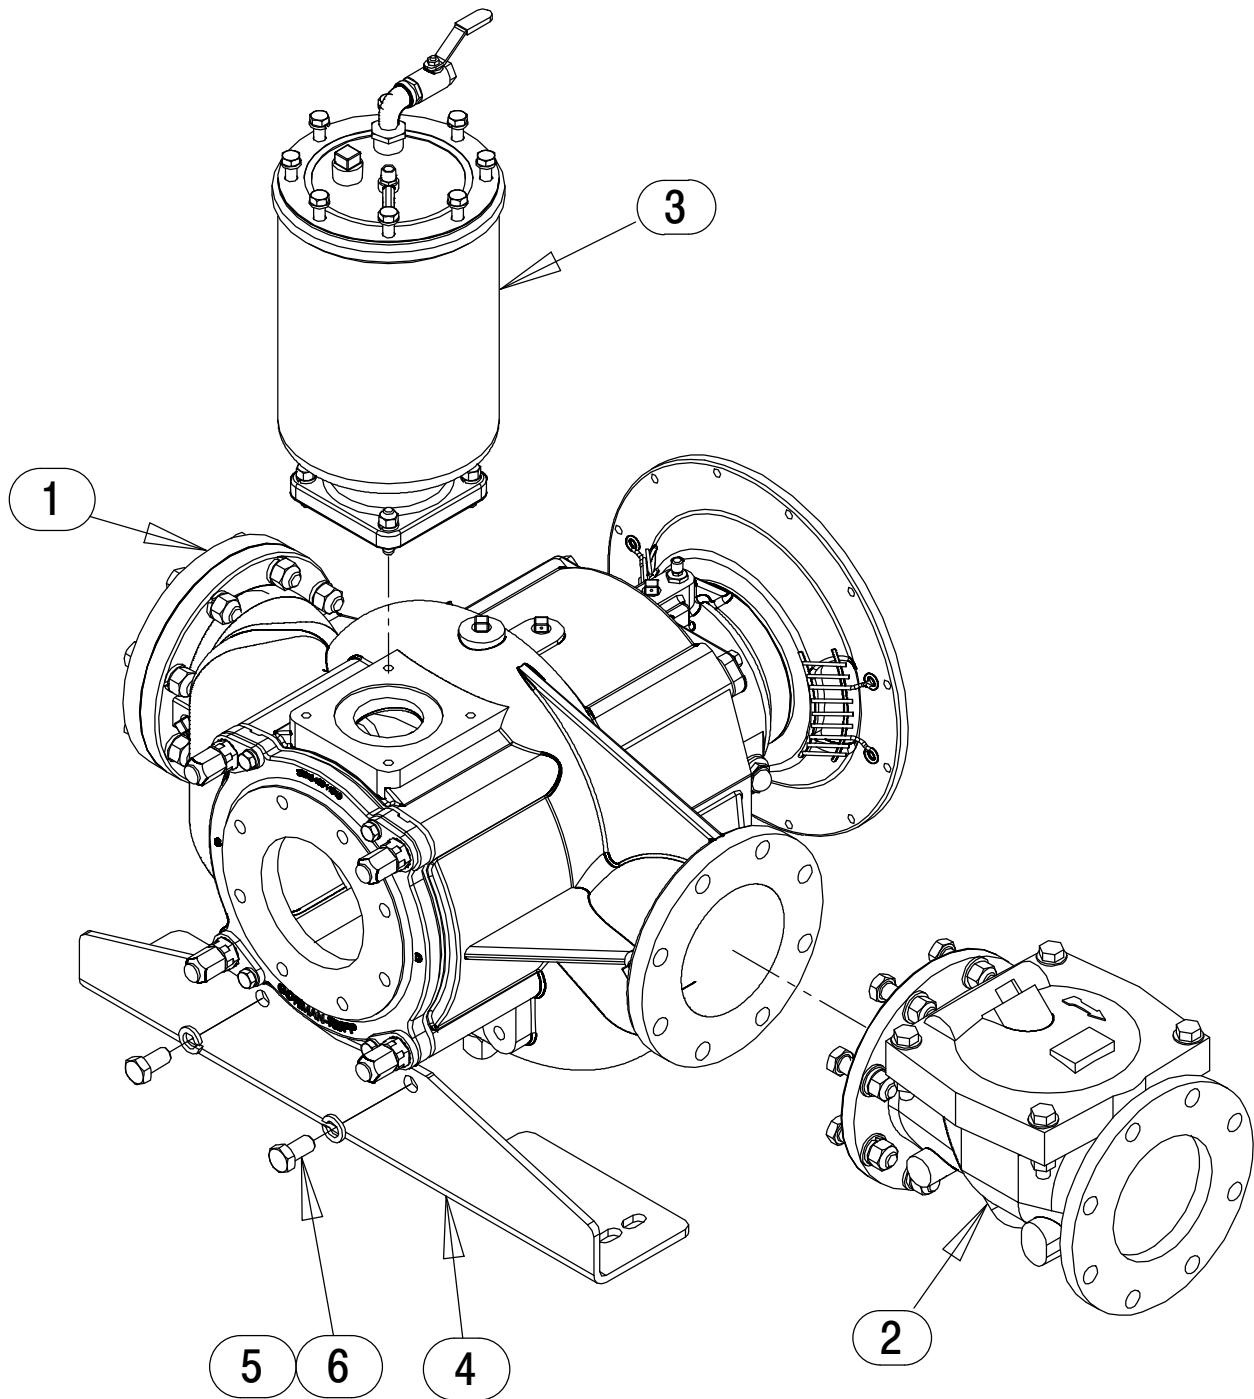


Figure 5. PA6C60—(SAE 3/10) Pump Assembly

PA6C60--(SAE 3/10) Pump Assembly

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	PUMP END ASSEMBLY	46133-798	1
2	CHECK VALVE KIT 6"	48274-015	1
	-CHECK VALVE	26642-134	1
	* --FLAPPER	26688-001	1
	* --COVER O-RING	25152-377	1
3	PRIMING CHAMBER KIT	48275-005	1
4	PUMP SUPPORT BRACKET	34266-047 15080	1
5	HEX HEAD CAP SCREW	B1206 15991	2
6	LOCK WASHER	J12 15991	2
NOT SHOWN:			
	6" STRAINER ASSEMBLY	7823A 24000	1
	SUCTION STICKER	6588AG	1
	DISCHARGE STICKER	6588BJ	1
	WARNING DECAL	2613FE	1
	G-R DECAL 6 IN	GR-06	1
	LUBRICATION DECAL	11421A	1
	OIL LEVEL DECAL	38816-123	1
OPTIONAL:			
	HEATED PRIMING CHAMBER KIT	28275-007	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

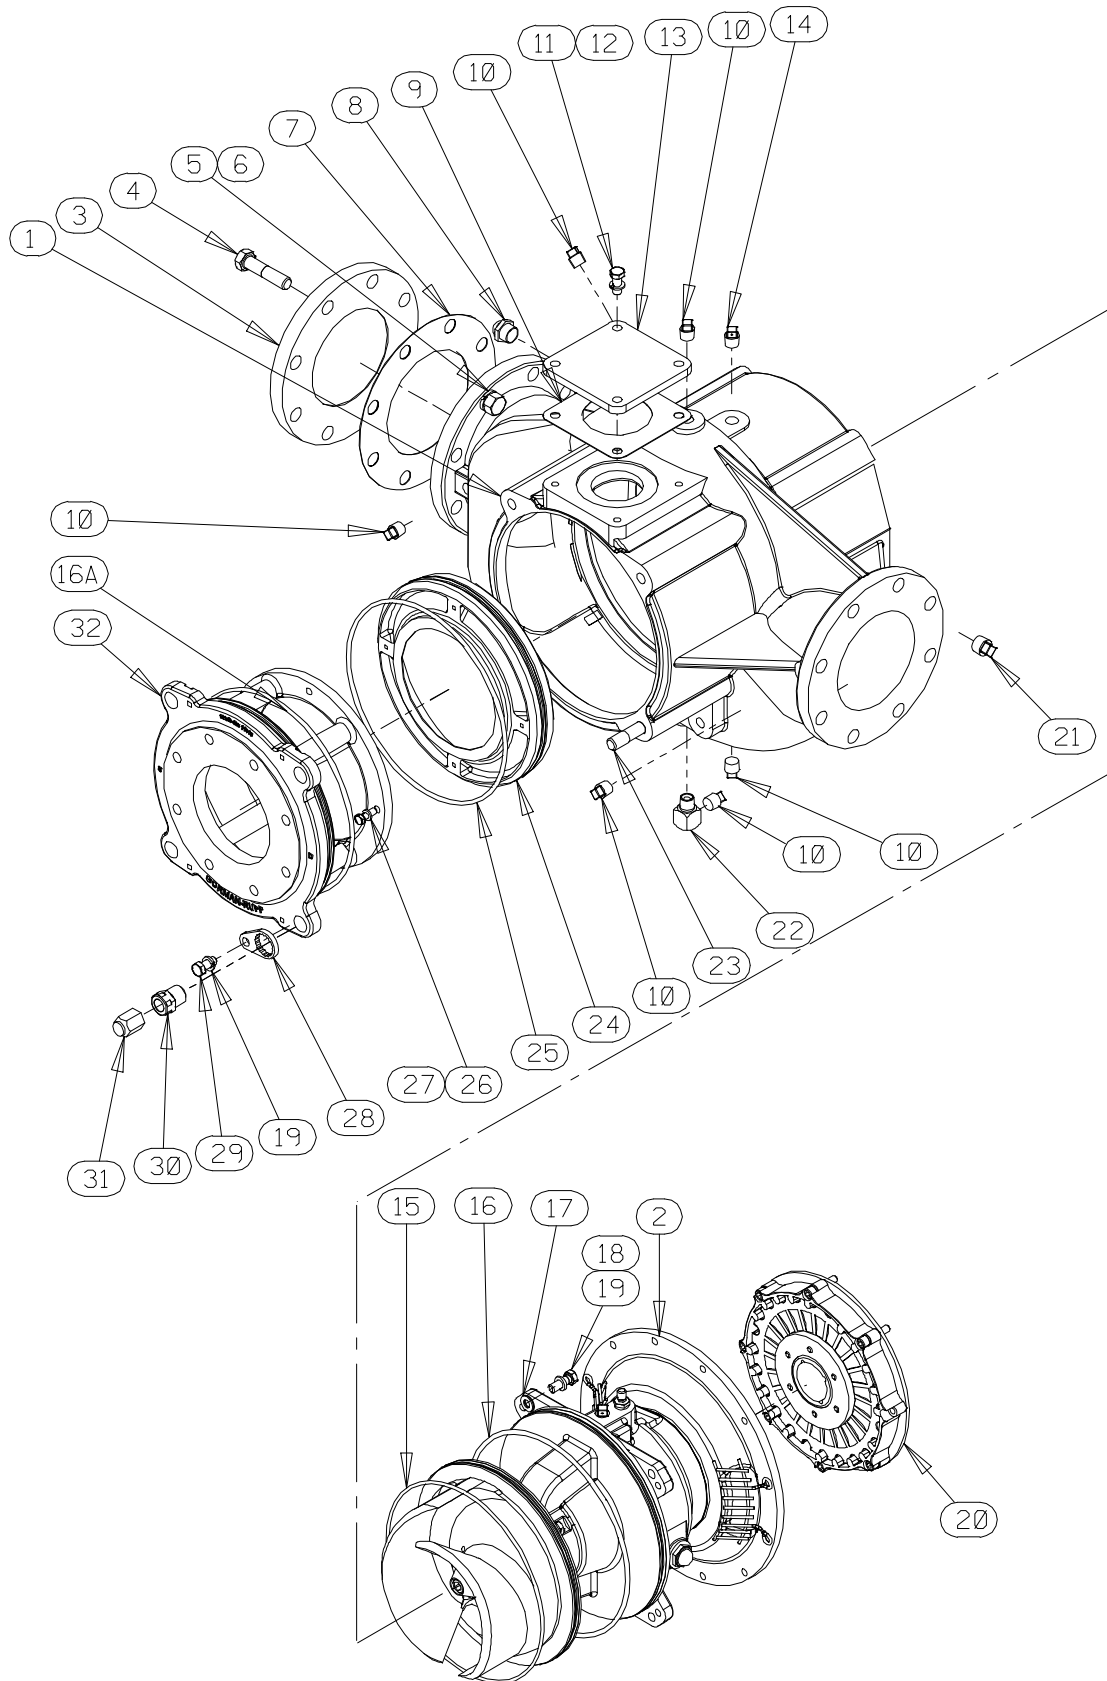


Figure 6. 66F60-(SAE 3/10) Pump Subassembly

PARTS LIST
66F60-(SAE 3/10) Pump Subassembly

ITEM NO.	PART NAME	PART NUMBER	QTY
☞ 1	PUMP CASING	SEE NOTE BELOW	1
2	REPAIR ROTATING ASSY	44163-504	1
3	BLIND FLANGE ASSY	42111-349	1
4	HEX HD CAPSCREW	B1213 15991	8
5	LOCK WASHER	J12 15991	8
6	HEX NUT	D12 15991	8
7	* GASKET	25113-036	1
8	SEAL CVTY SIGHT GAUGE	S1471	1
9	NOT USED		
☞ 10	PIPE PLUG	P08 15079	6
11	NOT USED		
12	NOT USED		
13	NOT USED		
14	VENTED PLUG	4823A 15079	1
15	* SEAL PLATE O-RING	25152-381	1
16	* BEARING HSG O-RING	S1676	1
16A	* BACK COVER O-RING	S1676	1
17	ROT ASSY SHIM	13131-3 17040	8
18	HEX HD CAPSCREW	B0806 15991	4
19	LOCK WASHER	J08 15991	4
20	DRIVE ASSY	44162-159	1
21	PIPE PLUG	P12 15079	1
22	STREET ELBOW	25412-004	1
☞ 23	STUD	C1213 15991	4
24	* WEAR PLATE	38691-864 11010	1
25	* WEAR PLATE O-RING	25152-453	1
26	LOCK WASHER	J06 17090	4
27	HEX HD CAPSCREW	B0604-1/2 17000	4
28	LOCK COLLAR	38115-551 15001	4
29	HEX HD CAPSCREW	B0804-1/2 15991	4
30	ADJUSTING SCREW	31871-070	4
31	BACK COVER NUT	31871-073 15000	4
32	BACK COVER PLATE	38243-468 11010	1
NOT SHOWN:			
	OIL LEVEL DECAL	38816-123	1
	NAME PLATE	38818-127 13000	1
	DRIVE SCREW	BM#04-03 17000	2
☞	INCLUDED W/REPAIR PUMP CASING ASSY	46474-903	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

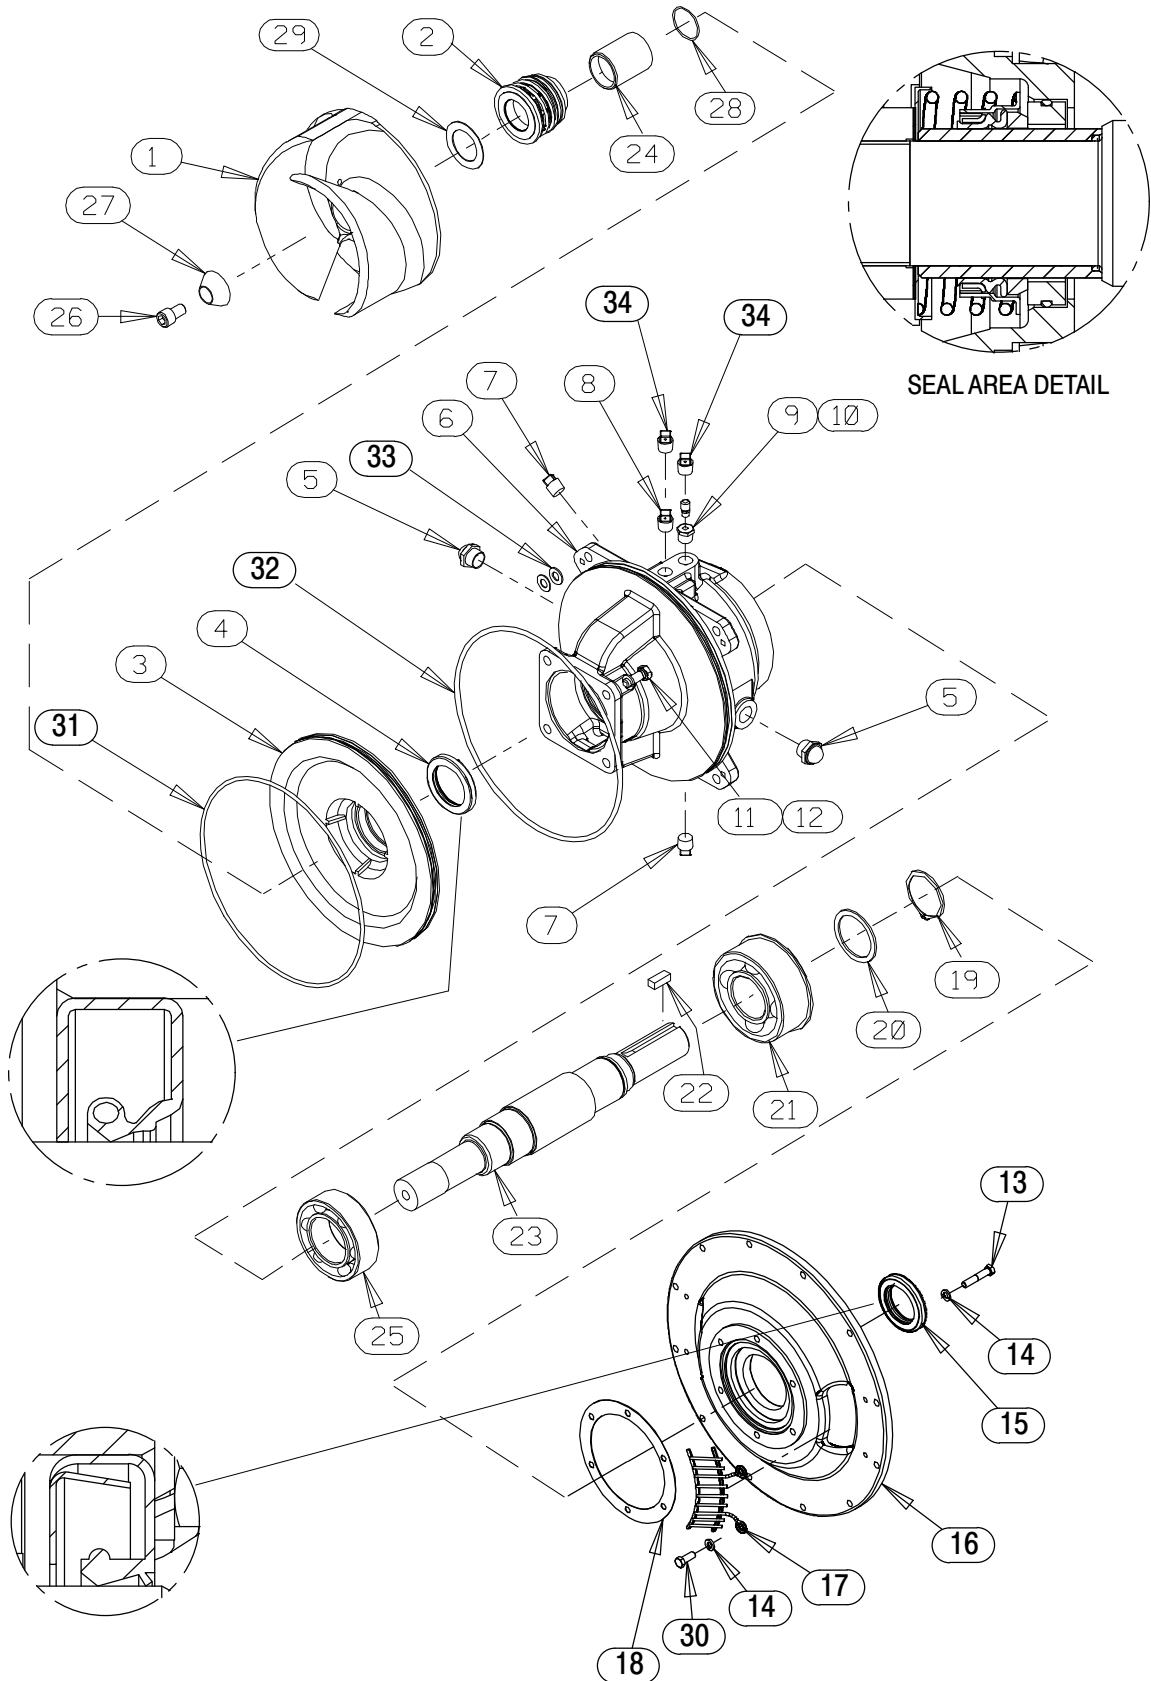


Figure 7. Repair Rotating Assembly

PARTS LIST
Repair Rotating Assembly

ITEM NO.		PART NAME	PART NUMBER	QTY
1	*	IMPELLER – HIGH HEAD	38615-092 11010	1
2	*	SEAL ASSEMBLY	46512-149	1
3		SEAL PLATE	38272-256 10000	1
4	*	OIL SEAL	25227-771	1
5		SIGHT GAUGE	S1471	2
6		BEARING HOUSING	38251-513 10000	1
7		PIPE PLUG	P08 15079	3
8		VENTED PIPE PLUG	4823A 15079	1
9		REDUCER PIPE BUSHING	AP0802 15079	1
10		AIR VENT	S1530	1
11		HEX HEAD CAP SCREW	B0805-1/2 15991	4
12		LOCK WASHER	J08 15991	4
13		HEX HEAD CAP SCREW GRADE 8	21632-938	6
14		LOCK WASHER	J06 15991	10
15	*	OIL SEAL	S1907	1
16		DRIVE FLANGE	38545-020 10000	1
17		INTERMEDIATE GUARD	42381-509 24152	2
18		GASKET	38683-474 18000	1
19		RETAINING RING	S720	1
20		THRUST WASHER	31134-115 15000	1
21	*	BALL BEARING	23422-414	1
22	*	KEY	24113-603	REF
23	*	IMPELLER SHAFT	38515-592 1706H	1
24		SHAFT SLEEVE	31163-019 1706H	1
25	*	BALL BEARING	23422-019	1
26		SOCKET HEAD CAP SCREW	DM1004S 17090	1
27		IMPELLER WASHER	31514-015 17000	1
28	*	O-RING	25154-131	REF
29	*	ADJ SHIM SET	48261-057	REF
30		HEX HEAD CAP SCREW	B0604 15991	4
31	*	O-RING	25152-381	1
32	*	O-RING	S1676	1
33	*	ADJ SHIM	13131-3 17040	8
34		SHIPPING PLUG	11495B 15079	2
NOT SHOWN:				
		WARNING DECAL	38817-102	1
		INSTRUCTION TAG	6588U	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

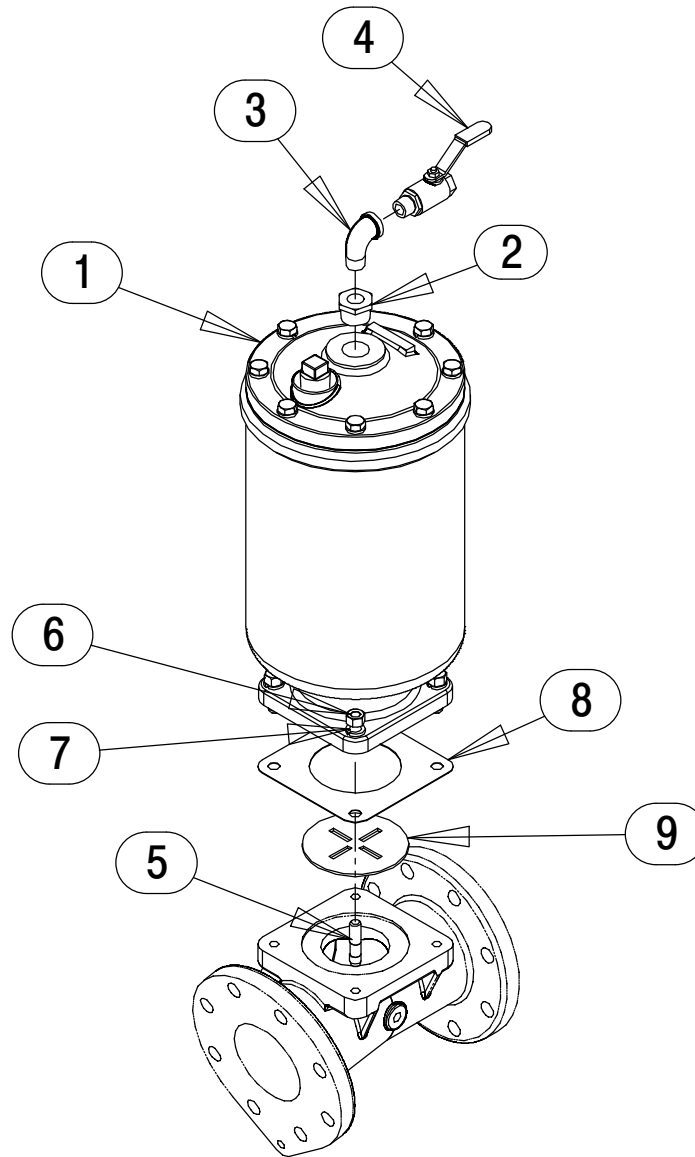


Figure 8. Priming Chamber Kit

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	PRIMING CHAMBER ASSY	46112-709	1
2	PIPE BUSHING	AP1608 15070	1
3	STREET ELBOW	RS08 11999	1
4	BALL VALVE	26631-052	1
5	STUD	C0809 15991	4
6	HEX NUT	D08 15991	4
7	LOCK WASHER	J08 15991	4
8	* GASKET	38687-053 19060	1
9	BAFFLE	31113-011 17000	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

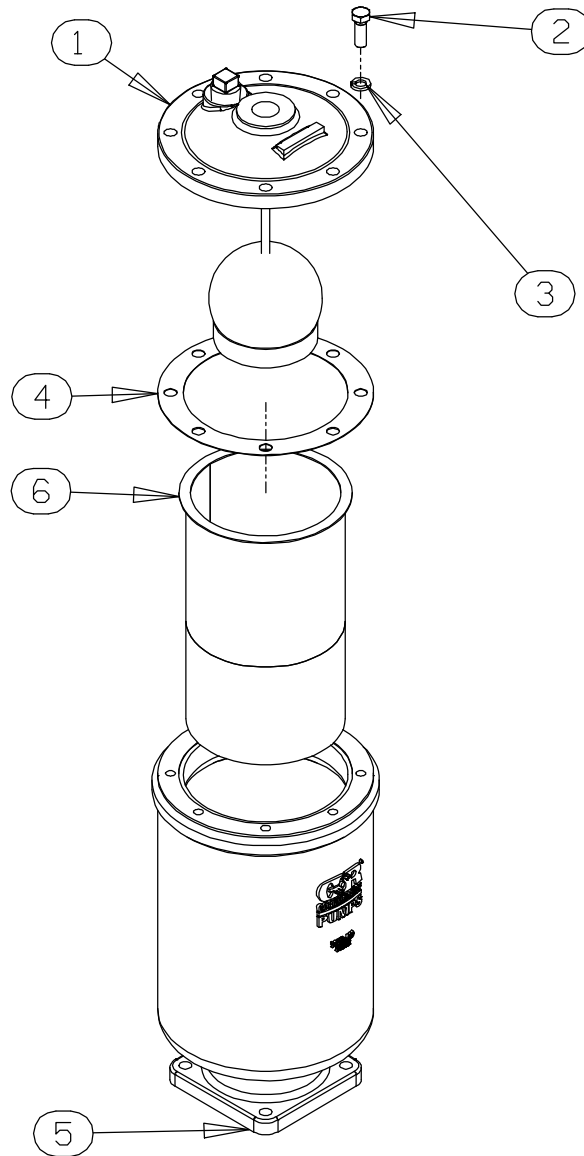


Figure 9. Priming Chamber Assembly

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	PRIMING VALVE	26664-007	1
	-ORIFICE BUTTON	26688-021	1
2	HEX HEAD CAP SCREW	B0806 15991	8
3	LOCK WASHER	J08 15991	8
4	* PRIMING VALVE GASKET	38683-657 19060	1
5	PRIMING CHAMBER	38343-020 10000	1
6	STRAINER ASSEMBLY	46641-222 17000	1

* INDICATES PARTS RECOMMENDED FOR STOCK

ILLUSTRATION

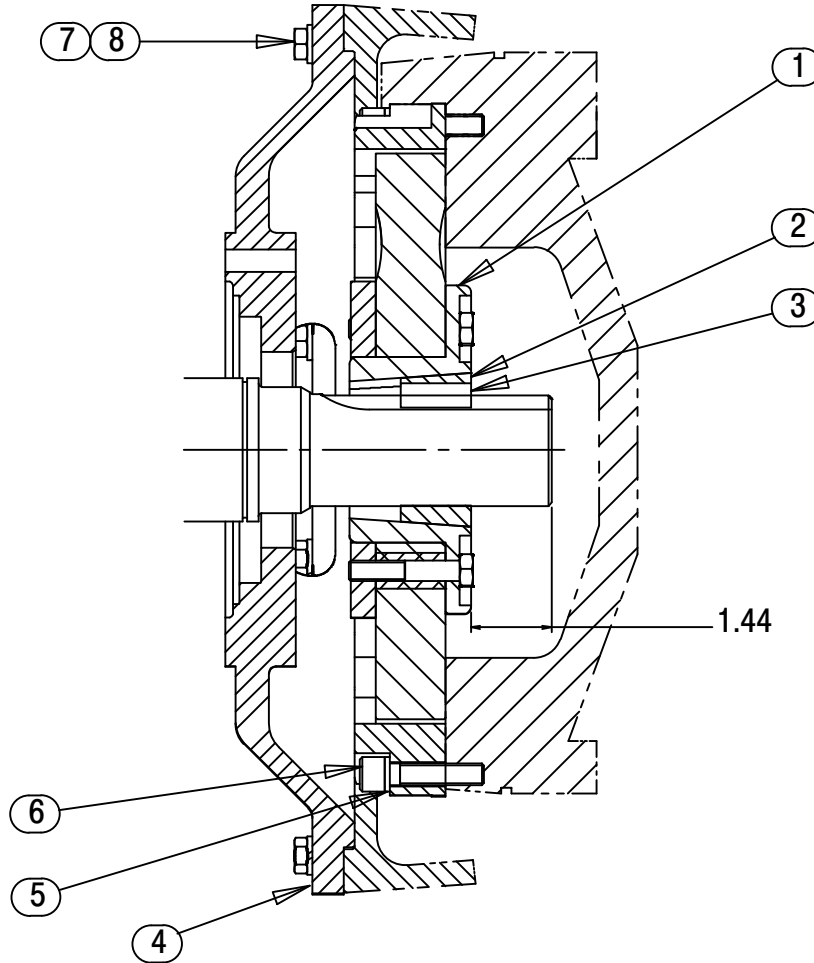










Figure 10. Drive Assembly

PARTS LIST

ITEM NO.	PART NAME	PART NUMBER	QTY
1	COUPLING ASSEMBLY	44165-016	1
2	BUSHING	24131-498	1
3	-KEY	24113-603	REF
4	DRIVE FLANGE	38545-004 10000	REF
5	LOCK WASHER	21171-536	8
6	 SOC HD CAPSCREW	BD0606-1/2 15991	8
6	 SOC HD CAPSCREW	22644-220	8
7	 HEX HD CAPSCREW	B0605 15991	12
7	 HEX HD CAPSCREW	22645-164	12
8	 LOCK WASHER	J06 15991	12
8	 LOCK WASHER	21171-511	12
	 USE FOR SAE APPLICATIONS		
	 USE FOR METRIC APPLICATIONS		

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Review all SAFETY information in Section A.

Follow the instructions on all tags, label and decals attached to the pump.

This pump requires little service due to its rugged, minimum-maintenance design. However, if it becomes necessary to inspect or replace the wearing parts, follow these instructions which are keyed to the Sectional Views (see Figures 1 through and 10) and the corresponding Parts Lists. Maintenance and repair instructions for the engine is covered separately in the specific literature supplied by the manufacturer.

No instructions for removal and/or disassembly of the enclosure or its components are provided in this manual. If removal of the enclosure is required for pump service, be sure to use safe shop practices so as not to endanger personnel and use caution to prevent damage to the enclosure.

Many pump service functions may be performed without separating the pump end assembly from the engine. However, the priming chamber assembly and discharge check valve assembly must be removed to service most pump components. The following instructions assume complete disassembly of the pump is required.

Before attempting to service the pump, shut down the engine and take precautions to ensure that it will remain inoperative. Close all valves in the suction and discharge lines and drain the pump casing.



This manual will alert personnel to known procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel. However, this manual cannot possibly anticipate and provide detailed instructions and precautions for every situation that might occur during maintenance of the unit. Therefore, it is the responsibility of

the owner/maintenance personnel to ensure that only safe, established maintenance procedures are used, and that any procedures not addressed in this manual are performed only after establishing that neither personal safety nor pump integrity are compromised by such practices.



Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Shut down the engine, disconnect the positive battery cable and take precautions to ensure that the pump will remain inoperative.
3. Allow the pump to completely cool if overheated.
4. Check the temperature and make sure it is cool before opening any covers, plates, gauges, or plugs.
5. Close the suction and discharge valves.
6. Vent the pump slowly and cautiously.
7. Drain the pump.



This pump may be used to handle materials which could cause illness through direct exposure or emitted fumes. Wear adequate protective clothing when working on the pump or piping.



Use only replacement parts provided or approved by Gorman-Rupp. Use of non-authorized parts may result in damage to the equipment and/or injury to personnel and will invalidate the warranty.

Priming Chamber Removal And Disassembly

(Figure 8)

Disconnect both the suction piping and the air discharge tubing from the priming chamber assembly (1). Support the priming chamber assembly using a sling and a suitable lifting device. Remove the hardware (6 and 7) and separate the priming chamber assembly, baffle (9) and gasket (8) from the pump assembly.

(Figure 9)

Remove the hardware (2 and 3) securing the priming valve (1) to the priming chamber (5). Carefully lift the valve components from the priming chamber. Remove the gasket (4) and clean the mating surfaces.

If the priming valve float is stuck or the strainer (6) is clogged, it can usually be cleaned without further disassembly.

The only serviceable part of the priming valve is the orifice button (not shown). If liquid continues to bypass through the priming chamber after adjusting the orifice button (see **Priming Chamber Reassembly and Installation** for adjustment), the button may require replacement. To replace the orifice button, remove one of the “e-clips” from the pivot pin closest to the orifice button and remove the pivot pin. This will allow the linkage to be raised high enough to access the orifice button.

Remove the hex nut and lockwasher securing the orifice button to the linkage bar and unscrew the orifice button from the linkage bar.

Discharge Check Valve Removal and Disassembly

(Figure 5)

Remove the hardware (not shown) securing the discharge check valve bracket to the base.

Support the discharge check valve (2) using a sling and a suitable lifting device. Remove the hardware (not shown) and separate the discharge check valve assembly and gasket from the pump assembly (1).

The flapper and cover O-ring are the only serviceable parts of the check valve. If the flapper requires

replacement, remove the hardware securing the cover and O-ring. Separate the valve cover and remove the flapper.

Back Cover Plate and Wear Plate Removal

(Figure 6)

The wear plate (24) is easily accessible and may be serviced by removing the back cover plate (32). Before attempting to service the pump, remove the pump casing drain plug (10) and drain the pump. Clean and reinstall the drain plug.

Remove the back cover nuts (31) and pry the back cover and assembled wear plate from the pump casing (1).

NOTE

An alternate method of removing the back cover from the pump casing is to remove the back cover nuts (31) and two diagonally opposing locking collars (28). Use the adjusting screws (30) to press the back cover out of the pump casing.

Remove and discard the O-rings (16 and 25).

Inspect the wear plate and, if replacement is required, remove the hardware (26 and 27) securing it to the back cover plate.

Separating Pump And Drive Assembly From Engine

(Figure 10)

Further disassembly of the pump requires separating the pump end and drive assembly from the engine. Disconnect the discharge piping from the pump casing.

Remove the hardware (7 and 8) securing the drive flange (4) to the engine bellhousing. Separate the assemblies by pulling the pump end straight away from the engine.

As the assemblies separate, the flexible portion of the coupling assembly (1) will remain on the shaft. To remove the coupling from the shaft, unscrew the two allen head setscrews from the bushing (2). Screw one of the setscrews into the puller hole on the circumference of the bushing. As the coupling and bushing separate, remove the bushing, and slide the coupling off the shaft. Remove the shaft key (3).

It is not necessary to remove the outer ring of the coupling from the engine flywheel unless the coupling must be replaced. To remove the ring, disengage the hardware (5 and 6) securing it to the flywheel.

Move the pump end to a clean, well equipped shop area for further disassembly.

Draining Oil From Seal Cavity

(Figure 7)

If any further disassembly is to be performed on the pump, the seal oil cavity must be drained to prevent the oil in the seal cavity from escaping as the pump casing is removed.

Position a **clean** container (3 gallons [11,4 liters] minimum capacity) under the seal cavity drain plugs (7). Remove the plug and drain the oil from the seal cavity into the container. For shorter drain time, remove the vented plugs (8). Clean and reinstall the drain and vent plugs. Inspect the oil for water, dirt or a cloudy condition which could indicate seal failure.

Loosening Impeller

(Figure 7)

With the pump end separated from the engine, wedge a block of wood between the vanes of the impeller and the pump casing to prevent rotation. Remove the impeller capscrew and washer (26 and 27).

Install the shaft key (22) in the shaft keyway. Install a lathe dog on the drive end of the shaft (23) with the "V" notch positioned over the shaft key.

With the impeller rotation still blocked, see Figure 11 and use a long piece of heavy bar stock to pry against the arm of the lathe dog in a counterclockwise direction (when facing the drive end of the shaft). **Use caution** not to damage the shaft or keyway. When the impeller breaks loose, remove the lathe dog, key and wood block.

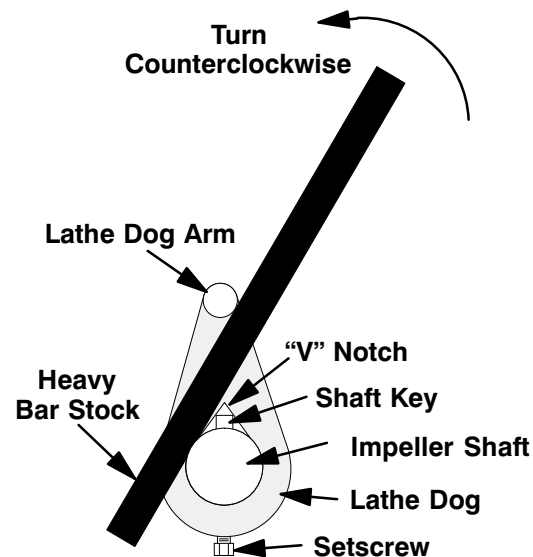


Figure 11. Loosening Impeller

NOTE

Do not remove the impeller until the rotating assembly has been removed from the pump casing.

Pump Casing Removal

(Figure 6)



Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. If slings or chains are used to move the pump or components, make sure that the load is balanced; otherwise serious personal injury or death could result. Suction and discharge hoses and piping must be removed from the pump before lifting.

Support the pump casing using a suitable hoist and sling, and remove the hardware (18 and 19). Install four 1/2–13 UNC x 2-inch long jacking screws in the tapped holes in the bearing housing (6, Figure 7). Tighten the jacking screws in an alternating pattern until the pump casing is pushed off of the bearing housing. Remove the jacking screws and shims (17).

Impeller Removal

(Figure 7)

With the rotating assembly removed from the pump casing, unscrew the impeller (1) in a counterclockwise direction (when facing the impeller). Use caution when unscrewing the impeller; tension on the shaft seal spring will be released as the impeller is removed. Inspect the impeller and replace if cracked or badly worn.

Remove the impeller adjusting shims (29); tie and tag the shims, or measure and record their thickness for ease of reassembly.

Seal Removal

(Figures 7 and 12)

Remove the spring centering washer and seal spring. Slide the shaft sleeve (24) and rotating portion of the seal (consisting of the bellows, retainer, and rotating element) off the shaft as a unit.

Apply oil to the sleeve and work it up under the rubber bellows. Slide the rotating portion of the seal off the sleeve.

Slide a pair of stiff wires with hooked ends along the shaft and hook the stationary seat from the back side. Pull the stationary seat and O-ring from the seal plate.

An alternate method of removing the stationary seal components is to remove the hardware (11 and 12) and separate the seal plate from the bearing housing (6). Position the seal plate on a flat surface with the impeller side down. Use a wooden dowel or other suitable tool to press on the back side of the stationary seat until the seat and O-ring can be removed.

Remove the seal plate O-ring (31).


Remove the shaft sleeve O-ring (28).

If no further disassembly is required, refer to **Seal Installation**.

Shaft and Bearing Removal and Disassembly

(Figure 7)

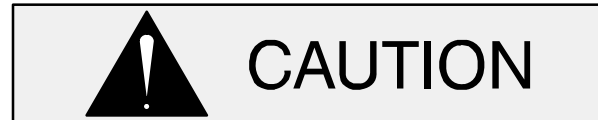When the pump is properly operated and maintained, the bearing housing should not require disassembly. Disassemble the shaft and bearings **only** when there is evidence of wear or damage.



Shaft and bearing disassembly in the field is not recommended. These operations should be performed only in a properly-equipped shop by qualified personnel.

Remove the bearing housing drain plug (7) and drain the lubricant. Clean and reinstall the drain plug.

Disengage the hardware (13 and 14) and remove the drive flange (16), gasket (18) and oil seal (15). Use a suitably sized dowel to press the oil seal from the drive flange.

Place a block of wood against the impeller end of the shaft (23) and tap the shaft and assembled bearings from the intermediate. Press the inboard oil seal (4) out of the bearing housing.

Remove the bearing housing O-ring (32).

After removing the shaft and bearings, clean and inspect the bearings **in place** as follows.



To prevent damage during removal from the shaft, it is recommended that bearings be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

Clean the bearing housing, shaft and all component parts (except the bearings) with a soft cloth soaked in cleaning solvent. Inspect the parts for wear or damage and replace as necessary.



Most cleaning solvents are toxic and

flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.

Clean the bearings thoroughly in **fresh** cleaning solvent. Dry the bearings with filtered compressed air and coat with light oil.



Bearings must be kept free of all dirt and foreign material. Failure to do so will greatly shorten bearing life. **Do not** spin dry bearings. This may scratch the balls or races and cause premature bearing failure.

Rotate the bearings by hand to check for roughness or binding and inspect the bearing balls. If rotation is rough or the bearing balls are discolored, replace the bearings.

The bearing tolerances provide a tight press fit onto the shaft and a snug slip fit into the bearing housing. Replace the bearings, shaft, or bearing housing if the proper bearing fit is not achieved.

If bearing replacement is required, remove the snap ring and thrust washer (19 and 20) and use a bearing puller to remove the inboard and outboard bearings (21 and 25) from the shaft.

Shaft and Bearing Reassembly and Installation

(Figure 7)

Inspect the shaft for distortion, nicks or scratches, or for thread damage on the impeller end. Dress small nicks and burrs with a fine file or emery cloth. Replace the shaft if defective.

Clean and inspect the bearings as indicated in **Shaft And Bearing Removal And Disassembly**.



To prevent damage during removal from the shaft, it is recommended that bearings

be cleaned and inspected **in place**. It is **strongly** recommended that the bearings be replaced **any** time the shaft and bearings are removed.

NOTE

*The inboard bearing (25) comes from the manufacturer with a retaining ring installed on the bearing O.D. This retaining ring **must** be removed prior to installation. Position the outboard bearing (21) on the shaft with the integral retaining ring toward the drive end of the shaft.*

The bearings may be heated to ease installation. An induction heater, hot oil bath, electric oven, or hot plate may be used to heat the bearings. Bearings should **never** be heated with a direct flame or directly on a hot plate.

NOTE

*If a hot oil bath is used to heat the bearings, both the oil and the container must be **absolutely** clean. If the oil has been previously used, it must be **thoroughly** filtered.*

Heat the bearings to a uniform temperature **no higher than** 250°F (120°C), and slide the bearings onto the shaft, one at a time, until they are fully seated. This should be done quickly, in one continuous motion, to prevent the bearings from cooling and sticking on the shaft.

After the bearings have been installed and allowed to cool, check to ensure that they have not moved away from the shaft shoulders in shrinking. If movement has occurred, use a suitably sized sleeve and a press to reposition the bearings against the shaft shoulders.

If heating the bearings is not practical, use a suitably sized sleeve, and an arbor (or hydraulic) press to install the bearings on the shaft.



When installing the bearings onto the shaft, **never** press or hit against the outer race, balls, or ball cage. Press **only** on the inner race.

Install the thrust washer (20) and secure the outboard bearing (21) to the shaft with the snap ring (19).

Apply a light coating of oil to the lip of the inboard oil seal (4) and press it into the bearing housing with the lip positioned as shown in Figure 7. Press the oil seal into the housing until the face is **just flush** with the machined surface on the housing.

Slide the shaft and assembled bearings into the intermediate bore until the integral retaining ring on the O.D. of the outboard bearing is fully seated against the bearing housing shoulder. Use caution not to damage the lip seal (4) on the shaft threads.



When installing the shaft and bearings into the bearing bore, push against the outer race. **Never** hit the balls or ball cage.

Install the drive flange gasket (18) and secure the drive flange (16) to the bearing housing with the hardware (13 and 14).

Apply a light coating of oil to the lip of the oil seal (15) and press it into the drive flange with the lip positioned as shown in Figure 7. **Be careful** not to damage the lip of the oil seal (15) on the shaft keyway. The face of the oil seal should be just flush with the outer face of the drive flange.

Lubricate a new bearing housing O-ring (32) with grease and install it in the groove in the bearing housing.

Lubricate the bearings as indicated in **LUBRICATION** at the end of this section.

Securing Bearing Housing And Drive Assembly To Engine

(Figure 10)

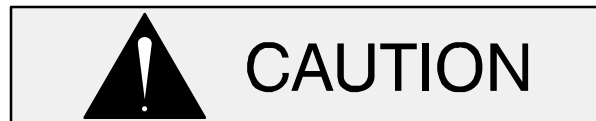
Install the shaft key (22, Figure 7) in the shaft keyway. Position the flexible portion of the coupling assembly (1) on the shaft as shown in Figure 10.

NOTE

The flexible portion of the coupling must be properly positioned on the shaft. The heads of the caps-

*crews in the center of the coupling **must be positioned toward the drive end of the shaft.***

Align the keyway in the bushing (2) with the shaft key, and slide it onto the shaft to the dimension shown in Figure 10. Rotate the flexible portion of the coupling until the tapped holes for the two setscrews align with those in the bushing, and install the setscrews.



Make certain that the flexible portion of the coupling is mounted as shown in Figure 10. **This is critical.** If the coupling is not properly positioned on the shaft, the coupling parts may not fully engage, or a pre-load condition can cause premature bearing failure.

The coupling must be positioned **1.44 inches (37 mm)** from the end of the shaft. This will allow the two portions of the coupling to fully engage when the drive flange is secured to the engine bellhousing, without pre-loading the bearings.

With the flexible portion of the coupling and the bushing properly positioned on the shaft, tighten the two setscrews in an alternating sequence until the bushing and coupling are fully secured. Torque the setscrews to 14.6 ft. lbs. (175 in. lbs. or 2 m. kg.).

If the complete coupling assembly is being replaced, apply 'Loctite Retaining Compound No. 242' or equivalent to the threads of the hardware (5 and 6), and secure the outer ring of the coupling to the engine flywheel by torquing the hardware to 45 ft. lbs. (540 in. lbs. or 6,2 m. kg.).

Using a suitable lifting device, position the assembled rotating assembly and coupling so the flexible portion of the coupling seats inside the outer ring attached to the engine flywheel.

NOTE

*To ease installation, **lightly** lubricate the rubber portion of the coupling with a **non-petroleum based lubricant** such as vegetable oil or glycerin, or a silicon-based lubricant such as "WD40" or equivalent.*

Do not use petroleum-based lubricants, or any other substance which may soften or otherwise damage the rubber.

Install the intermediate guards (17, Figure 7), and secure the drive flange (4) to the engine bellhousing with the previously removed hardware (7 and 8).

Seal Reassembly and Installation

(Figures 7 and 12)



Most cleaning solvents are toxic and flammable. Use them only in a well ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent. Inspect the stationary seat bore in the seal plate for dirt, nicks and burrs, and remove any that exist. The stationary seat bore **must** be completely clean before installing the seal.

The seal is not normally reused because wear patterns on the finished faces cannot be realigned during reassembly. This could result in premature failure. If necessary to reuse an old seal in an emergency, **carefully** wash all metallic parts in **fresh** cleaning solvent and allow to dry thoroughly.

Handle the seal parts with extreme care to prevent damage. Be careful not to contaminate precision finished faces; even fingerprints on the faces can shorten seal life. If necessary, clean the faces with a non-oil based solvent and a clean, lint-free tissue. Wipe **lightly** in a concentric pattern to avoid scratching the faces.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage. Clean and polish the shaft sleeve, or replace it if there are nicks or cuts on either end. If any components are worn, replace the complete seal; **never mix old and new seal parts.**

If a replacement seal is being used, remove it from the container and inspect the precision finished faces to ensure that they are free of any foreign matter.

To ease installation of the seal, lubricate the O-rings and bellows with water or a very **small** amount of oil, and apply a drop of light lubricating oil on the finished faces. Assemble the seal as follows (see Figure 12).


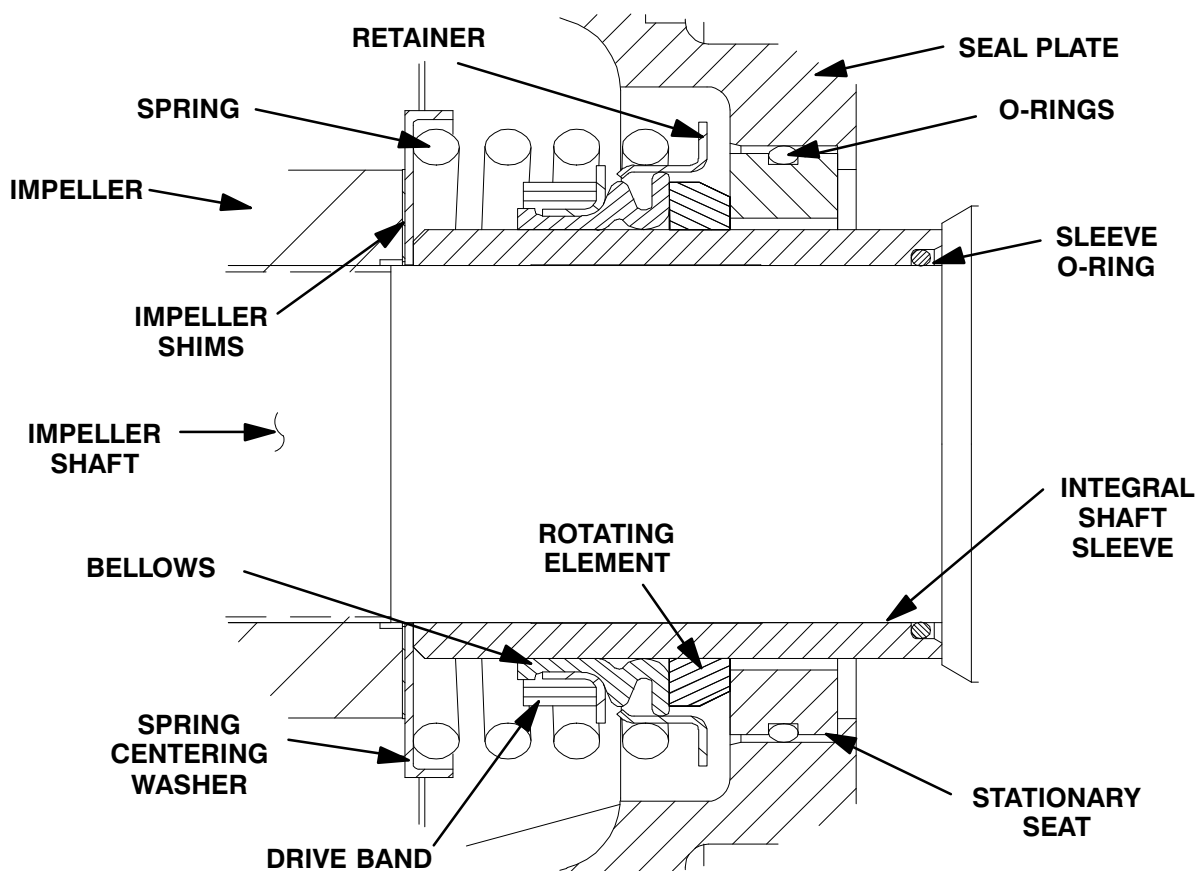


Figure 12. Seal Assembly

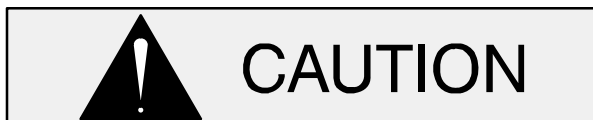

This seal is not designed for operation at temperatures above 160°F (71°C). Do not use at higher operating temperatures.

Lubricate the stationary seat O-ring with water or light oil. Press the stationary seat into the seal plate (3) until fully seated.

Position the seal plate over the shaft and secure it to the bearing housing (6) with the hardware (11 and 12). **Be careful** not to damage the stationary seat on the shaft threads.

Lubricate a new seal plate O-ring (31) with grease and install it in the groove in the seal plate.

To prevent damaging the shaft sleeve O-ring (28) on the shaft threads, cover the threads with electrical or duct tape. Slide the O-ring over the shaft until it seats against the shaft shoulder. Remove the tape covering the threads. Check to ensure that the shaft threads are free of any tape residue and

clean as required before proceeding with seal installation.

Lubricate the shaft sleeve (24) with a **small** amount of light oil and slide the rotating subassembly (consisting of rotating element, bellows and retainer), onto the sleeve until the rotating element is **just flush** with the **undercut** end of the sleeve.

Slide the shaft sleeve and subassembled seal onto the shaft until the seal faces contact. Continue to push the sleeve through the seal until the undercut end seats over the O-ring and against the shaft shoulder.

Install the seal spring and spring centering washer. Lubricate the seal as indicated in **LUBRICATION** after the impeller is installed.

Impeller Installation And Adjustment

(Figure 7)

Inspect the impeller (1) and replace it if cracked or badly worn.



The shaft and impeller threads **must** be completely clean before reinstalling the impeller. Even the slightest amount of dirt on the threads can cause the impeller to seize to the shaft, making future removal difficult or impossible without damage to the impeller or shaft.

Install the same thickness of impeller adjusting shims (29) as previously removed and screw the impeller assembly onto the shaft until tight.

NOTE

At the slightest sign of binding, **immediately** back the impeller off, and check the threads for dirt. **Do not** try to force the impeller onto the shaft.

A clearance of .025 to .040 inch (0,64 to 1,02 mm) between the impeller and the seal plate is necessary for maximum pump efficiency. Measure this clearance, and add or remove impeller adjusting shims as required.

Secure the impeller to the shaft with the impeller washer and capscrew (26 and 27).

Pump Casing Installation

(Figure 6)

Lubricate the rotating assembly O-rings (15 and 16) with a light coating of grease. Use a suitable hoist and sling to slide the pump casing (1) over the rotating assembly.

Install two shims (17) at each mounting location and secure the casing to the rotating assembly (2) with the hardware (18 and 19).

Wear Plate And Back Cover Plate Installation And Adjustment

(Figures 6 and 13)

If the wear plate (24) was removed for replacement, carefully center it on the back cover plate (32) and secure it with the hardware (26 and 27).

Lubricate the O-rings (16 and 25) with light grease and install them in the grooves in the wear plate and back cover.

Clearance between the impeller and wear plate is adjusted using the four back cover nuts (31) and locking collars (28). There are 18 detents on the I.D. of each locking collar. Indexing the collars one detent on the adjusting screws represents approximately .005 inch (0,13 mm) of wear plate clearance. The recommended clearance between the wear plate and the impeller is .010 to .020 inch (0,25 to 0,50 mm).

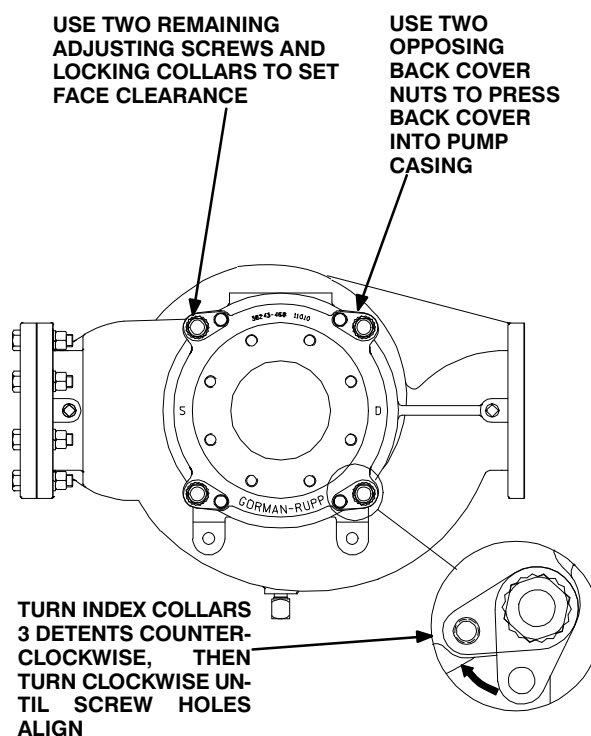


Figure 13. Installing and Adjusting Back Cover

Screw the four adjusting screws (30) into the tapped holes in the back cover plate until they are **just flush** with the machined surface on the back side of the cover plate.

Align the back cover plate over the studs (23) and slide it into the pump casing. Use two back cover nuts (31) on diagonally opposing studs to press the back cover into the pump casing until the wear plate **just touches** the impeller when the shaft is turned by hand. **Tighten the nuts evenly to avoid binding.**

With the wear plate just touching the impeller, turn the two free adjusting screws until they engage the pump casing. Position the locking collars over the

adjusting screws so the holes in the collars for the locking screws align approximately with the holes in the cover plate.

Loosen the back cover nuts used to press the back cover into the pump casing one full turn.

Pull the collars off the adjusting screws, index them three detents counterclockwise, and reinstall the collars on the adjusting screws. Use the collars to turn the adjusting screws clockwise until the holes in the locking collars realign with the tapped screw holes in the back cover plate. Secure the locking collars to the back cover plate with the hardware (19 and 29). Install the two remaining back cover nuts snugly against the adjusting screws.

Remove the first two back cover nuts from their studs. Turn the adjusting screws clockwise until they engage the pump casing. Install the locking collars (28) and hardware (19 and 29). Reinstall the back cover nuts.

Be sure the wear plate does not scrape against the impeller.

Over time it may be necessary to repeat the adjustment process to compensate for normal wear between the impeller and wear plate. When all of the adjustment has been used on the back cover side of the pump, an additional 0.120 inch (3 mm) of adjustment may be obtained by removing the rotating assembly adjusting shims (17).

Allow an installed pump to completely cool before draining liquid from the pump casing. Remove the back cover. Remove the rotating assembly adjusting shims, then reinstall the hardware securing the rotating assembly to the pump casing. Perform the back cover adjustment procedure described above to obtain the proper face clearance.

Discharge Check Valve Reassembly And Installation

(Figure 4)

The flapper and cover O-ring are the only serviceable parts of the check valve. If the flapper requires replacement, remove the hardware securing the cover and gasket. Separate the cover and replace the flapper.

Install the cover O-ring and secure the cover with the previously removed hardware.

Apply a small amount of light grease to the gasket to hold it in place and position it against the pump casing flange. Position the discharge check valve assembly and secure it with the previously removed hardware.

Priming Chamber Assembly And Installation

(Figure 9)

Clean and inspect the components of the priming valve (1). Inspect the linkage and ensure the orifice button (not shown) squarely engages the valve seat. Replace the orifice button if required (see **Priming Chamber Removal and Disassembly** for orifice button removal).

If the orifice button was removed, screw the new orifice button into the linkage bar until fully seated. Align the hole in the linkage bar with the holes in the bracket and reinstall the pivot pin. Secure the pivot pin with the previously removed "e-clip".

Adjust the orifice button seating as necessary by screwing the orifice button into or out of the linkage bar. Proper adjustment is achieved when the orifice button fully seats against the orifice before the linkage bar on the float bottoms against the threads on the orifice button. When adjustment is complete, install and tighten the lock washer and hex nut securing the orifice button.

Install the strainer (6) and priming valve gasket (4).

Lower the float into the priming chamber (5) and secure the priming valve with the previously removed hardware (2 and 3).

(Figure 8)

Install the baffle (9) and gasket (8) and use a sling and suitable lifting device to position the priming chamber assembly on the hopper spool (not shown). Secure the priming chamber assembly with the hardware (6 and 7).

Reconnect the suction piping to the hopper spool and the air discharge tubing to the priming chamber assembly.

LUBRICATION

(Figure 6)

Seal Assembly

Fill the seal cavity through the hole for the vented plug (14) with SAE No. 30 non-detergent oil. Check the oil level regularly and refill as required. When lubricating a dry seal cavity, add approximately 256 oz. or 8 U.S. quarts (7,6 liters) of oil to level indicated.


Bearings

(Figure 7)

The bearing housing was fully lubricated when shipped from the factory. Check the oil level regularly through the sight gauges (5) and maintain it at the midpoint of the gauge. When lubrication is required, remove the air vent and bushing (9 and 10) and add SAE No. 30 non-detergent oil through the opening. When lubricating a dry (overhauled) bearing housing, fill the bearing cavity with approximately 40 ounces (1,2 liters) of oil. Clean and reinstall the air vent. **Do not** over-lubricate. Over-lubri-

cation can cause the bearings to over-heat, resulting in premature bearing failure.

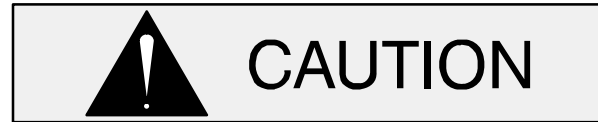Under normal conditions, drain the bearing housing once each year and refill with clean oil. Change the oil more frequently if the pump is operated continuously or installed in an environment with rapid temperature change.



Monitor the condition of the bearing lubricant regularly for evidence of rust or moisture condensation. This is especially important in areas where variable hot and cold temperatures are common.

For cold weather operation, consult the factory or a lubricant supplier for the recommended grade of oil.

Engine

Consult the literature supplied with the engine, or contact your local engine representative.

**For Warranty Information, Please Visit
www.grpumps.com/warranty
or call:
U.S.: 419-755-1280
Canada: 519-631-2870
International: +1-419-755-1352**

GORMAN-RUPP PUMPS