

INSTALLATION, OPERATION, PARTS LIST,
AND MAINTENANCE MANUAL

A C E



OM-00598-0E02

September 25, 1981

A stylized line drawing of a centrifugal pump assembly, showing the pump housing, impeller, and various ports, positioned behind the main title text.

Engine Driven Self-Priming Centrifugal Pump

Model 112A20-B-N855P

THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA Printed in U.S.A.

Copyright by the Gorman-Rupp Company



This Installation, Operation, and Maintenance Manual is designed specifically to help you get the best performance and longest life from your Gorman-Rupp pump.

This pump is a 10 Series, semi-open impeller, self-priming centrifugal model designed for pumping liquids with specified entrained solids.

If there are any questions regarding the pump which are not covered in this manual or in other literature accompanying the unit, please contact your Gorman-Rupp distributor, or write:

The Gorman-Rupp Company
P.O. Box 1217
Mansfield, Ohio 44902

or

Gorman-Rupp of Canada Limited
70 Burwell Road
St. Thomas, Ontario N5P 3R7

For information or technical assistance on the power source, contact the power source manufacturer's local dealer or representative.

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:

NOTE

Instructions to aid in installation, operation, or maintenance or which clarify a procedure.

CAUTION

Instructions which must be followed to avoid causing damage to the product or other equipment incidental to the installation. These describe the procedure required and the damage which could result from failure to follow the procedure.

WARNING

Instructions which must be followed to avoid causing injury or death to personnel. These describe the procedure required and the injury which could result from failure to follow the procedure.

TABLE OF CONTENTS

WARNINGS	Section A
INSTALLATION	Section B
OPERATION	Section C
TROUBLESHOOTING	Section D
MAINTENANCE AND REPAIR	Section E
WARRANTY	

WARNINGS

THESE WARNINGS APPLY TO ALL ENGINE DRIVEN PUMPS. REFER TO THE MANUAL ACCOMPANYING THE ENGINE BEFORE ATTEMPTING TO START THE ENGINE.

Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Disconnect the engine to ensure that the pump will remain inoperative.
3. Allow the pump to cool if overheated.
4. Vent the pump slowly and cautiously.
5. Close the suction and discharge valves.
6. Check the temperature before opening any covers, plates, or plugs.
7. Drain the pump.

Do not attempt to pump volatile or flammable materials for which this pump has not been designed.

After the pump has been located in its operating position, make certain that the pump has been secured before attempting to operate it.

Do not operate the pump without shields and/or guards in place over drive shafts, belts and/or couplings, or other rotating parts. Exposed rotating parts can catch clothing, fingers, or tools, causing severe injury to personnel.

Do not operate the pump against a closed discharge valve for long periods of time. This could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode.



Overheated pumps can cause severe burns and injury. If overheating of the pump casing occurs:

1. Stop the pump immediately.
2. Allow the pump to cool.
3. Refer to instructions in this manual before restarting the pump.

Do not remove plates, covers, gauges, pipe plugs, or fittings from an overheated pump. Vapor pressure within the pump can cause parts being disengaged to be ejected with great force. Allow the pump to cool before servicing.

Do not operate an internal combustion engine in an explosive atmosphere. When operating internal combustion engines in an enclosed area, make certain that exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless, and odorless.

Fuel used by internal combustion engines presents an extreme explosion and fire hazard. Make certain that all fuel lines are securely connected and free of leaks. Never refuel a hot or running engine. Avoid overfilling the fuel tank. Always use the correct type of fuel.

Never tamper with the governor to gain more power. The governor establishes safe operating limits that should not be exceeded.

INSTALLATION

Seldom are two pump installations identical. The information presented in this section is a summary of the recommended installation practices related to inspection, pump positioning, hardware, suction and discharge piping, and sumps. For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before it was shipped from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- a. Inspect the pump assembly for cracks, dents, damaged threads, and other obvious damage.
- b. Check for and tighten loose bolts, nuts, capscrews, and other attaching hardware. Since gaskets tend to shrink after drying, check for and tighten loose nuts and capscrews securing mating surfaces.
- c. Carefully read all tags, decals, and markings on the pump assembly, and perform all duties indicated. Note the direction of rotation indicated on the pump.
- d. Check all lubricant levels and lubricate as necessary. Refer to the MAINTENANCE AND REPAIR section of this manual.

POSITIONING THE PUMP

Mounting

Locate the pump in an accessible place as close as practical to the liquid to be pumped. Level mounting is essential for proper operation. The pump may have to be supported to provide for level operation or to eliminate vibration.

Lifting

WARNING

Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. The bail is intended for use in lifting the pump assembly **only**; disconnect suction and discharge hoses and piping from the pump when lifting the pump by the bail.



Make sure that hoists and other lifting equipment are of sufficient capacity to safely handle the pump assembly. If chains or cables are used, make certain that they are positioned so that they will not damage the pump, and so that the load will be balanced.

CAUTION

The pump assembly can be seriously damaged if the cables or chains used to lift and move the unit are improperly wrapped around it.

SUCTION AND DISCHARGE PIPING

Materials

Either pipe or hose may be used for suction and discharge lines, but hose used in suction lines must be the rigid-wall, reinforced type to prevent collapse under suction. Using pipe couplings in suction lines is not recommended.

Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

Connections to Pump

Never pull a pipe line into place by tightening the flange bolts. The connecting flange must be aligned exactly with the pump port. Lines near the pump must be independently supported to avoid strain on the pump which could cause serious vibration, decreased bearing life, and increased shaft and seal wear. Hose-type lines should have supports strong enough to secure the line when it is filled with liquid and under pressure.

Gauges

Most pumps are drilled and tapped for installing discharge pressure and vacuum suction gauges. If these gauges are desired for pumps that are not tapped, drill and tap the suction and discharge lines close to the pump before installing the lines.

SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem down or to either side to avoid air pockets.

Strainers

Install a strainer at the end of the suction line to avoid possible clogging or damage to the pump. The total area of the openings in the strainer should be at least three or four times the cross section of the suction line, but no opening should be larger than the solids handling capability of the pump. Clean the strainer regularly during operation.

Sealing

All connections in the suction line should be sealed with pipe dope to ensure an airtight seal. Even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift. After installation, inspect the suction line carefully for potential leaks.

DISCHARGE LINES**Throttling Valves**

If a throttling valve is desired, install it in the discharge line. Use a valve as large as the largest pipe in the line to minimize friction losses. Never install a throttling valve in the suction line.

Check Valves

A check valve in the discharge line is normally recommended, but is not necessary in low discharge head applications.

With high discharge heads, install a throttling valve and a check valve in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.

Bypass Lines

If it is necessary to permit the escape of air to atmosphere during initial priming or in the repriming cycle, install a bypass line between the pump and the discharge check valve. The bypass line should be sized so that it does not affect pump discharge capacity.

Either a Gorman-Rupp automatic air release valve—which will automatically open to allow the pump to prime, and automatically close when priming is accomplished—or a hand-operated shutoff valve should be installed in the bypass line.


NOTE

The bypass line may clog frequently, particularly if the valve remains closed. If this condition occurs, either use a larger bypass line or leave the shutoff valve open during the pumping operation.

Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action could result, causing damage to the pump.

SUCTION LINE POSITIONING

The depth of submergence of the suction line is critical to efficient pump operation. Figure 1 shows recommended minimum submergence vs. velocity.

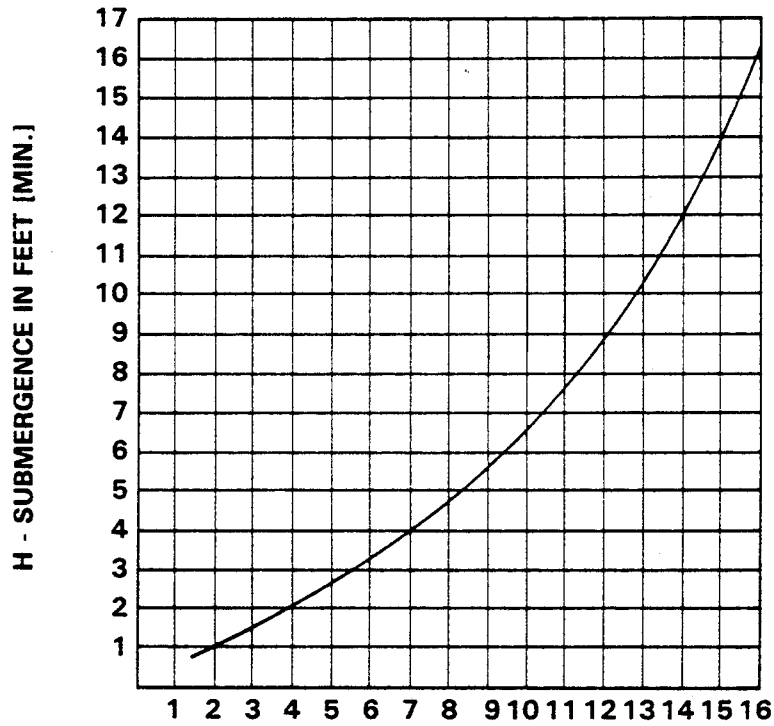

$$\text{VELOCITY IN FEET PER SEC.} = \frac{\text{QUAN. [G.P.M.]} \times .321}{\text{AREA}} \text{ OR } \frac{\text{G.P.M.} \times .4085}{D^2}$$

Figure 1. Recommended Minimum Suction Line Submergence Vs. Velocity

OPERATION

WARNING

Do not attempt to pump volatile or corrosive materials for which this pump has not been designed.

PRIMING

Install the pump and piping as described in INSTALLATION. Make sure that the piping connections are tight, and that the pump is securely mounted. Check that the pump is properly lubricated (see LUBRICATION in MAINTENANCE AND REPAIR).

This pump is self priming, but the pump volute casing must first be filled with liquid if:

1. The pump is being put into service for the first time.
2. The pump has not been used for a considerable length of time.
3. The liquid in the volute casing has evaporated.

Once the volute casing has been filled, the pump will prime and reprime as necessary.

CAUTION

Never operate a self-priming pump unless the volute is filled with liquid. The pump will not prime when dry. Extended operation of a dry pump will destroy the seal assembly.

To fill the pump, remove the volute fill cover or fill plug at the top of the casing and add clean liquid until the pump is filled. Replace the fill cover or fill plug before operating the pump.

STARTING

Consult the operating manual furnished with the power source.

OPERATION

Lines With a Bypass

Either a Gorman-Rupp automatic air release valve or a hand operated shutoff valve may be installed in a bypass line.

If a Gorman-Rupp automatic air release valve has been installed, close the throttling valve in the discharge line. The Gorman-Rupp valve will automatically open to allow the pump to prime, and automatically close when priming has been accomplished. After the pump has been primed, and liquid is flowing steadily from the bypass line, open the discharge throttling valve.

If a hand operated shutoff valve has been installed, close the throttling valve in the discharge line, and open the bypass shutoff valve so that the pump will not have to prime against the weight of the liquid in the discharge line. When the pump has been primed, and liquid is flowing steadily from the bypass line, close the bypass shutoff valve and open the discharge throttling valve.

Lines Without a Bypass

Open all valves in the discharge line and start the power source. Priming is indicated by a positive reading on the discharge pressure gauge or by quieter operation. The pump may not prime immediately because the suction line must first fill with liquid. If the pump fails to prime within five minutes, stop it and check the suction line for leaks.


After the pump has been primed, partially close the discharge line throttling valve in order to fill the line slowly and guard against excessive shock pressure which could damage pipe ends, gaskets, sprinkler heads, and any other fixtures connected to the line. When the discharge line is completely filled, adjust the throttling valve to the required discharge flow rate.

Leakage

No leakage should be visible at pump mating surfaces, or at pump connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

Overheating

Overheating can occur if the valves in the suction or discharge lines are closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump and allow it to cool before servicing it. Refill the volute casing with cool liquid.

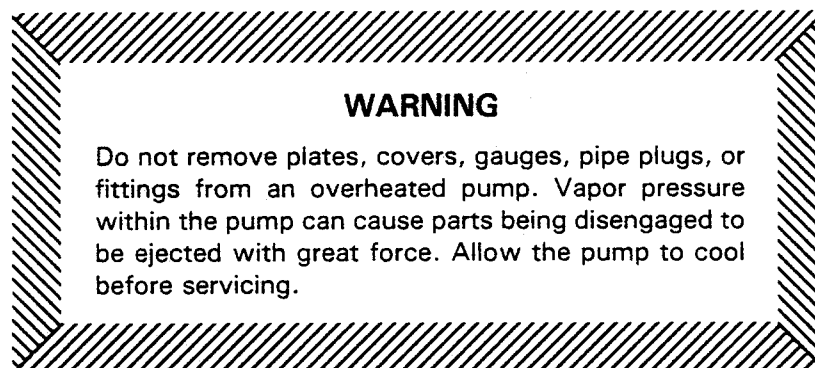

Strainer Check

Check the suction strainer regularly during pump operation, or if the pump flow rate begins to drop, and clean it as necessary. Be especially alert for unusual noises when pumping liquids containing solids.

Pump Vacuum Check

Install a vacuum gauge in the system, using pipe dope on the threads.

The pump should pull a vacuum of 20 inches or more of mercury at operating speed with the suction line blocked. If it does not, check for air leaks in the seals or gaskets.

With the pump primed and at operating speed, and the suction line open, read the vacuum gauge. Shut off the pump, keep the vacuum line open, and read the gauge again to see if the vacuum remains at the maximum developed by the pump. If the vacuum falls off rapidly, an air leak exists. If the liquid level at the source of supply remains at a constant level, check to make certain that the air leak is not from the vacuum gauge connection.

STOPPING

After stopping the pump, disconnect the power source to ensure that the pump will remain inoperative.

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts.

If the pump will be idle for more than a few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump from completely draining, operate the pump during the draining process. Clean out any remaining solids by flushing with a hose.

BEARING TEMPERATURE CHECK

Bearings normally run at higher than ambient temperatures because of heat generated by friction. Temperatures up to 160°F are considered normal for intermediate bearings, and they can operate safely to at least 180°F.

Checking bearing temperatures by hand is inaccurate. Bearing temperatures can be measured accurately by placing a contact-type thermometer against the housing. Record this temperature for future reference.

A sudden increase in bearing temperatures is a warning that the bearings are at the point of failing to operate properly. Make certain that the bearing lubricant is of the proper viscosity and at the correct level (see LUBRICATION in MAINTENANCE AND REPAIR). Bearing overheating can also be caused by shaft misalignment and/or excessive vibration.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

This pump requires little service due to its rugged, minimum-maintenance design. If it becomes necessary to inspect and/or replace the wearing parts, however, follow these instructions, which are keyed to the sectional view (see figure 2) and the accompanying parts list.

WARNING

Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment.

Pump Disassembly

Disconnect the power source, and close all connecting valves. Remove the volute drain plug (35) to drain the pump.

Remove the hex head capscrews (71) securing the flap valve flange (45) and suction plate (75) to the volute casing (1), retaining each of the spacers (76) as the capscrews are removed.

Separate the volute casing, removing the suction plate O-ring (41), for access to the adjustable wear ring (37), impeller wear ring (87), impeller (2), and seal assembly (3).

To remove the impeller, loosen the setscrews (59) on the shaft nut (86), and unscrew the shaft nut. Slide the impeller off the impeller shaft (58), retaining the shaft woodruff key (73).

Seal Disassembly

Before removing the seal assembly, remove the seal drain plug (27) to drain the seal cavity. Clean and reinstall the seal drain plug.

Carefully remove the spring, retainer, and rotating and stationary seal elements, using a stiff wire with a hooked end if necessary.

Clean the seal cavity and impeller shaft with a soft cloth soaked in cleaning solvent.

WARNING

Most cleaning solvents are toxic and flammable. Use them only in a well-ventilated area free from excessive heat, sparks, and flame. Read and follow all precautions printed on solvent containers.

Seal Reassembly

The seal is not normally reused because of the high polish on its lapped faces, but if it is necessary to reuse the old seal, wash all metallic parts in cleaning solvent and dry thoroughly.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage. If any components are worn, replace the complete seal; never mix old and new seal parts.

CAUTION

This seal is not designed for operation at temperatures above 160°F. Do not use at higher operating temperatures.

Install the replacement seal as a complete unit.

Lubricate the bellows and O-rings with soft grease or oil when installing the seal, and place a drop of light lubricating oil on the lapped faces. Assemble the seal as shown in figure 3.

Before starting the pump, fill the seal bottle oiler (10) with SAE No. 30 non-detergent motor oil. Remove the air vent fitting (7) when filling the seal bottle oiler.

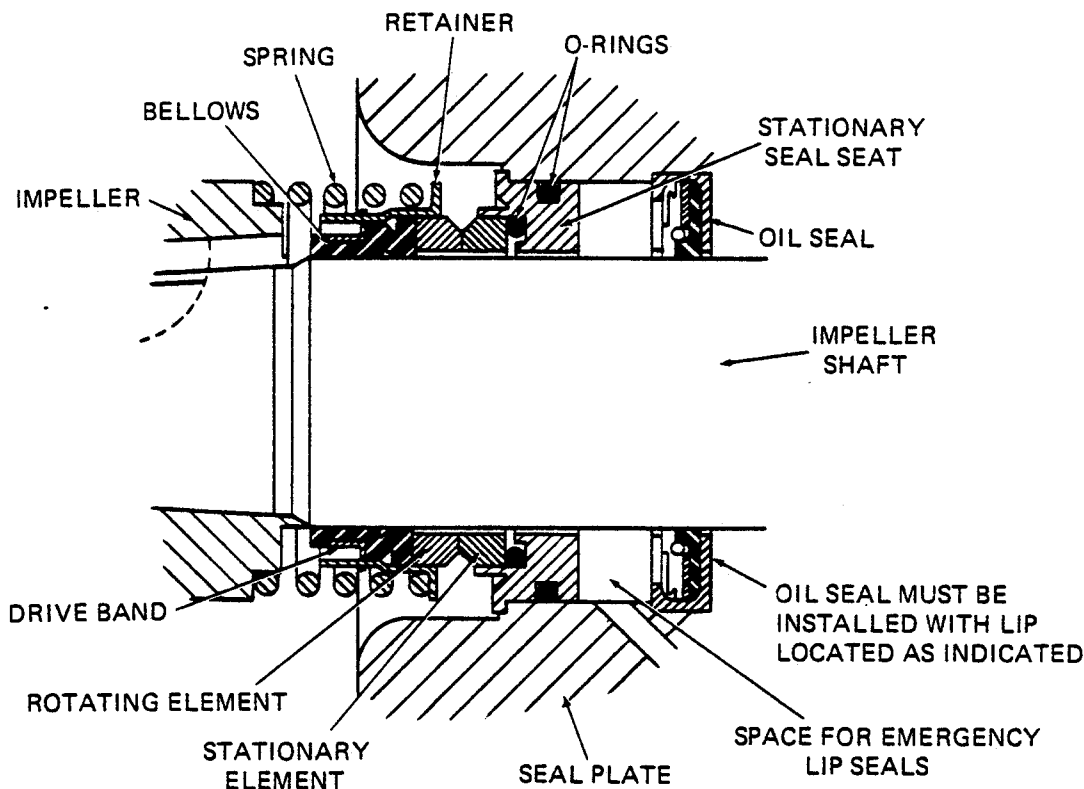


Figure 3. 12590-B Seal Assembly



Pump Reassembly

Before reinstalling the impeller, inspect the adjustable wear ring (37), and replace it if the interior surface is scored or worn. If the adjustable wear ring is replaced, replace the O-ring (36).

Inspect the impeller, and replace it if cracked or badly worn. Replace the impeller wear ring if scored or worn.

Reinstall the impeller shaft woodruff key, and slide the impeller onto the shaft. Use "Never-Seez" or equivalent on the threads of the impeller shaft nut, and torque the nut to 300 ft. lbs. Use "Loctite" No. 35 or equivalent on the impeller nut setscrews, and torque the screws to 18 ft. lbs.

Reinstall the hex head capscrews, lockwashers, and spacers to reassemble the check valve flange and suction plate to the volute casing. Replace the suction plate O-ring (41) and gasket (74).

Impeller Face Clearance

A clearance of approximately .015 inch between the impeller wear ring and the adjustable wear ring is necessary for maximum pump efficiency.

If the seal assembly, impeller, or wear rings **was not** replaced, this clearance should be correct after reassembling the pump.

If the seal assembly, impeller, or wear rings **was** replaced, this clearance must be reset. Loosen all the adjustable wear ring hex nuts (39). Tighten all the jam nuts (40) until the adjustable wear ring is completely in contact with the suction plate face. Next, tighten all the hex nuts evenly, maintaining each in the same position relative to the others.

To eliminate interference with adjustment, back off the jam nuts until they are in contact with the volute casing. Now tighten all the hex nuts evenly, no more than one-half turn at a time, while rotating the impeller by hand. When the adjustable wear ring makes contact with the impeller wear ring, back off each hex nut one-half turn. This will set the proper clearance. Tighten all the jam nuts to secure the adjustable wear ring.

Before starting the pump, clean and reinstall the volute drain plug, and fill the volute with liquid.

LUBRICATION

Bearings

When shipped from the factory, the pump contains sufficient grease to lubricate the bearings for approximately 5,000 operating hours. Do not lubricate sooner than required. When additional grease is required, remove the vented pedestal plug (16) and fill the cavity with No. 0 pressure gun grease until the cavity is one third full, or just below the shaft. Clean and reinstall the vented pedestal plug.



TROUBLESHOOTING

WARNING

Before attempting to open or service the pump:


1. Consult pump service manual.
2. Disconnect the power source to ensure that the pump will remain inoperative.
3. Allow the pump to cool if overheated.
4. Close suction and discharge valves.
5. Drain pump.

Trouble	Possible Cause	Probable Remedy
PUMP FAILS TO PRIME	Air leak in suction line.	Correct leak.
	Lining of suction hose collapsed.	Replace suction hose.
	Suction check valve clogged or binding.	Clean valve.
	Leaking or worn seal or pump gasket.	Check pump vacuum. Replace leaking or worn seal or gasket.
	Suction lift or discharge head too high.	Check piping installation and install bypass line if needed. See INSTALLATION.
	Suction strainer clogged.	Clean suction strainer.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Air leak in suction line.	Correct leak.
	Suction intake not submerged at proper level or sump too small.	Check installation and correct as needed. Check submergence chart (Section B, page 4).
	Lining of suction hose collapsed.	Replace suction hose.
	Impeller or other wearing parts worn or damaged.	Check impeller clearance. Replace worn parts as needed.
	Impeller clogged.	Free impeller of debris.
	Pump speed too slow.	Check driver output.
	Discharge head too high.	Install bypass line.
	Suction lift too high.	Reduce suction lift.

Trouble	Possible Cause	Probable Remedy
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE (cont)	Leaking or worn seal or pump gaskets. Suction strainer clogged.	Check pump vacuum. Replace leaking or worn seal or pump gaskets. Clean suction strainer.
PUMP REQUIRES TOO MUCH POWER	Pump speed too high. Discharge head too low. Liquid solution too thick.	Reduce speed of power source. Adjust discharge valve. Dilute if possible.
PUMP CLOGS FREQUENTLY	Discharge flow too slow. Suction check valve clogged or binding.	Open discharge valve fully to increase flow rate, and run engine at maximum governed speed. Free valve, and clean or replace it.
EXCESSIVE NOISE	Cavitation in pump. Pumping entrained air. Pump or drive not securely mounted. Impeller clogged or damaged.	Reduce suction lift and/or friction losses in suction line. Locate and eliminate source of air bubble. Secure mounting hardware. Clean out debris; replace damaged parts.
BEARINGS RUN TOO HOT	Bearing temperature is high, but within limits. Low or incorrect lubricant. Suction and discharge lines not properly supported. Drive misaligned.	Check bearing temperature frequently to monitor any increase. Check for proper type and level of lubricant. Check piping installation for proper support. Align drive properly.

MAINTENANCE AND REPAIR

MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.

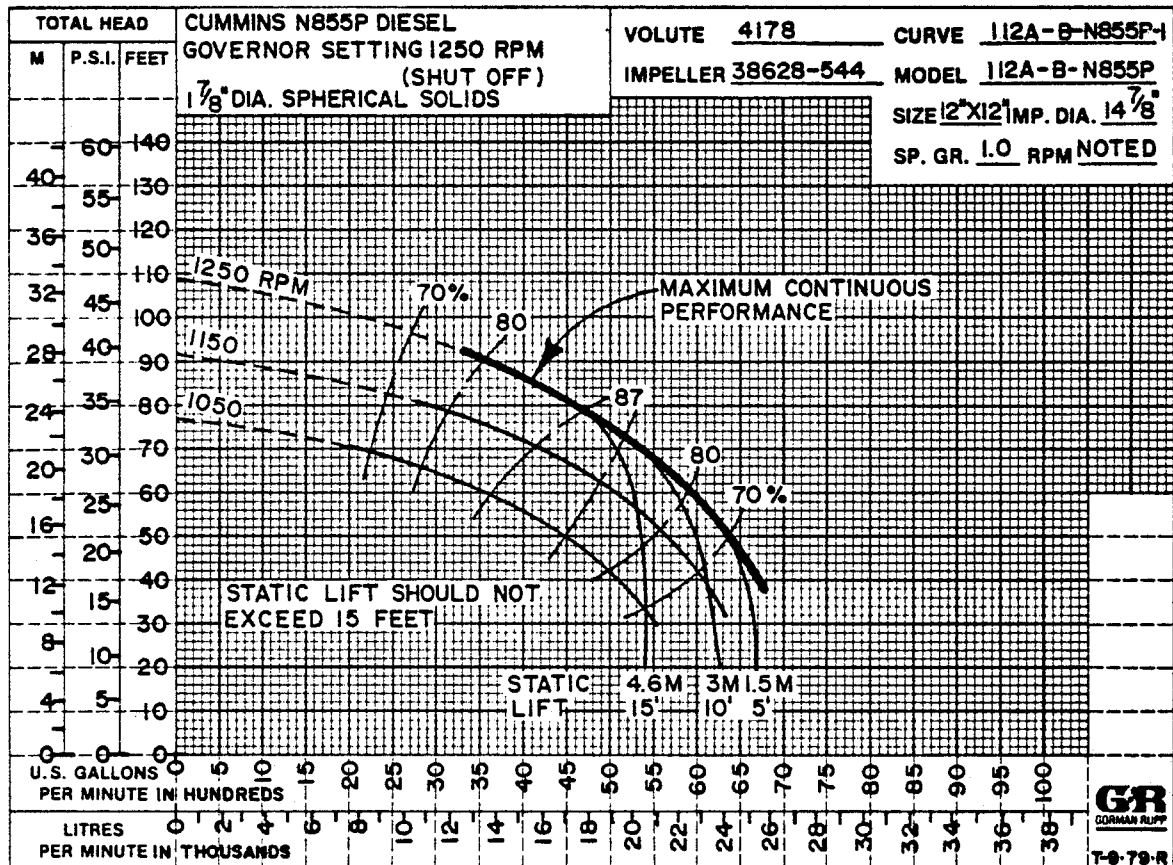

* STANDARD PERFORMANCE FOR PUMP MODEL 112A20-B-N855P

* Based on 70°F clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N" or if you have a question on performance, contact The Gorman-Rupp Company.

SECTIONAL DRAWING

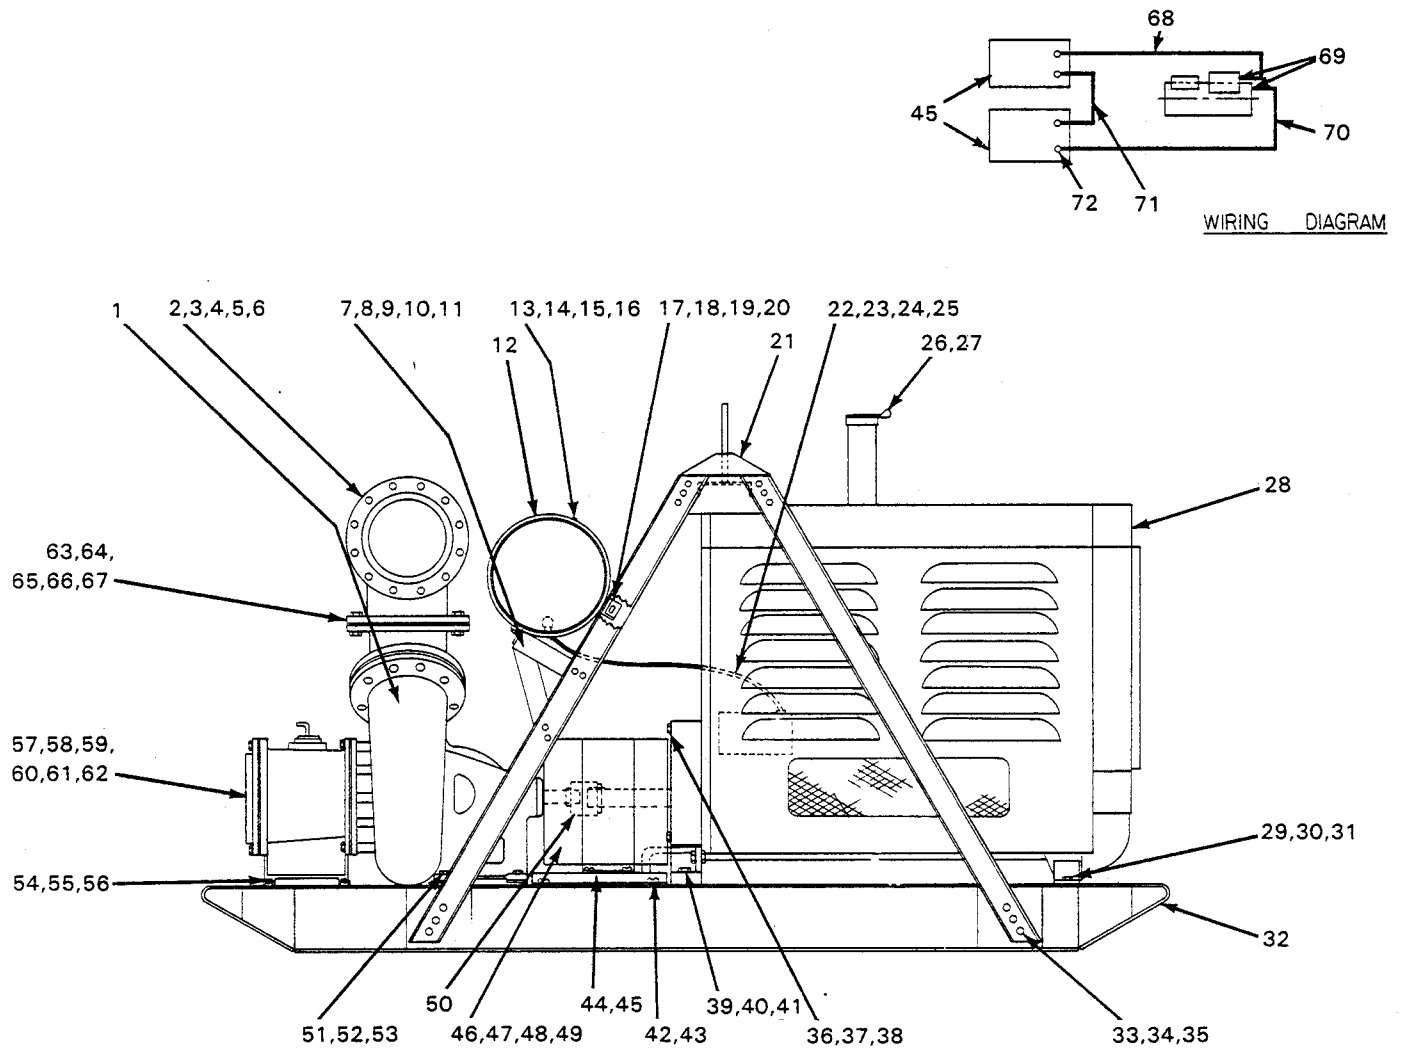


Figure 1. Pump Model 112A20-B-N855P



PARTS LIST

PUMP MODEL 112A20-B-N855P

(From S/N 733442 up)

ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY
1	PUMP (See Figure 2)	112A20-B	—	1	37	HEX HEAD CAPSCREW	B-0703	15991	10
2	DISCHARGE FLANGE	4991-A	10010	1	38	LOCKWASHER	J-07	15991	10
3	★DISCHARGE FLNG GSKT	4991-G	18000	1	39	HEX HEAD CAPSCREW	B-1414	15991	2
4	HEX NUT	D-14	15991	12	40	HEX NUT	D-14	15991	2
5	HEX HEAD CAPSCREW	B-1415	15991	12	41	LOCKWASHER	J-14	15991	2
6	LOCKWASHER	J-14	15991	12	42	WING NUT	BB-06	15990	8
7	FUEL TANK SUPPORT	41441-401	—	1	43	FLAT WASHER	K-06	15991	8
8	HEX HEAD CAPSCREW	B-0805	15991	10	44	BATTERY COVER	14301	24000	2
9	HEX NUT	D-08	15991	10	45	BATTERY - 12 VOLT	S-2287	—	2
10	LOCKWASHER	J-08	15991	10	46	FLAT WASHER	K-04	15991	4
11	FLAT WASHER	K-08	15991	2	47	LOCKWASHER	J-04	15991	4
12	FUEL TANK	S-0562	—	1	48	WING NUT	BB-04	15991	4
13	FUEL TANK STRAP	41121-007	—	2	49	COUPLING GUARD	42342-048	24150	1
14	HEX HEAD CAPSCREW	B-0808	15991	2	50	COUPLING, 1 1/4 x 3	24341-016	—	1
15	HEX NUT	D-08	15991	2	51	LOCKWASHER	J-12	15991	4
16	LOCKWASHER	J-08	15991	2	52	HEX NUT	D-12	15991	4
17	FLAT WASHER	K-08	15991	4	53	HEX HEAD CAPSCREW	B-1210	15991	4
18	LOCKWASHER	J-08	15991	4	54	LOCKWASHER	J-12	15991	4
19	HEX NUT	D-08	15991	4	55	HEX NUT	D-12	15991	4
20	FUEL TANK SUPPORT	41441-402	—	1	56	HEX HEAD CAPSCREW	B-1207	15991	4
21	HOISTING BAIL	14288	24000	1	57	SUCTION FLANGE	4991-A	10010	1
22	★FLEXIBLE HOSE ASSY	26543-445	—	1	58	★SUCTION FLANGE GSKT	4991-G	18000	1
23	CONDUIT CLAMP	22811-257	—	1	59	HEX HEAD CAPSCREW	B-1410	15991	6
24	REDUCER PIPE BUSHING	AP-1208	11990	1	60	HEX HEAD CAPSCREW	B-1414	15991	6
25	STREET ELBOW	RS-12	11990	1	61	HEX NUT	D-14	15991	6
26	4" NIPPLE TOE	31471-045	—	1	62	LOCKWASHER	J-14	15991	12
27	WEATHER CAP	S-0900	—	1	63	FLANGED ELBOW	RF-0192	10990	1
28	CUMMINS N855P ENGINE	29216-271	—	1	64	★DISCHARGE FLNG GSKT	4991-G	18000	1
29	HEX HEAD CAPSCREW	B-1410	15991	2	65	HEX HEAD CAPSCREW	B-1416	15991	12
30	HEX NUT	D-14	15991	2	66	HEX NUT	D-14	15991	12
31	LOCKWASHER	J-14	15991	2	67	LOCKWASHER	J-14	15991	12
32	BASE	14286	24000	1	68	★BATTERY CABLE #00 x 66	38741-507	—	1
33	HEX HEAD CAPSCREW	B-1206	15991	12	69	SOLDER LUG	S-1725	—	2
34	HEX NUT	D-12	15991	12	70	★BATTERY CABLE #00 x 56	38741-506	—	1
35	LOCKWASHER	J-12	15991	12	71	★BATTERY CABLE #00 x 38	38741-505	—	1
36	HOUSING COVER	14276	15990	1	72	BATTERY TERMINAL	S-1726	—	4

★INDICATED PARTS RECOMMENDED FOR STOCK

CANADIAN SERIAL NO. AND UP

SECTIONAL DRAWING

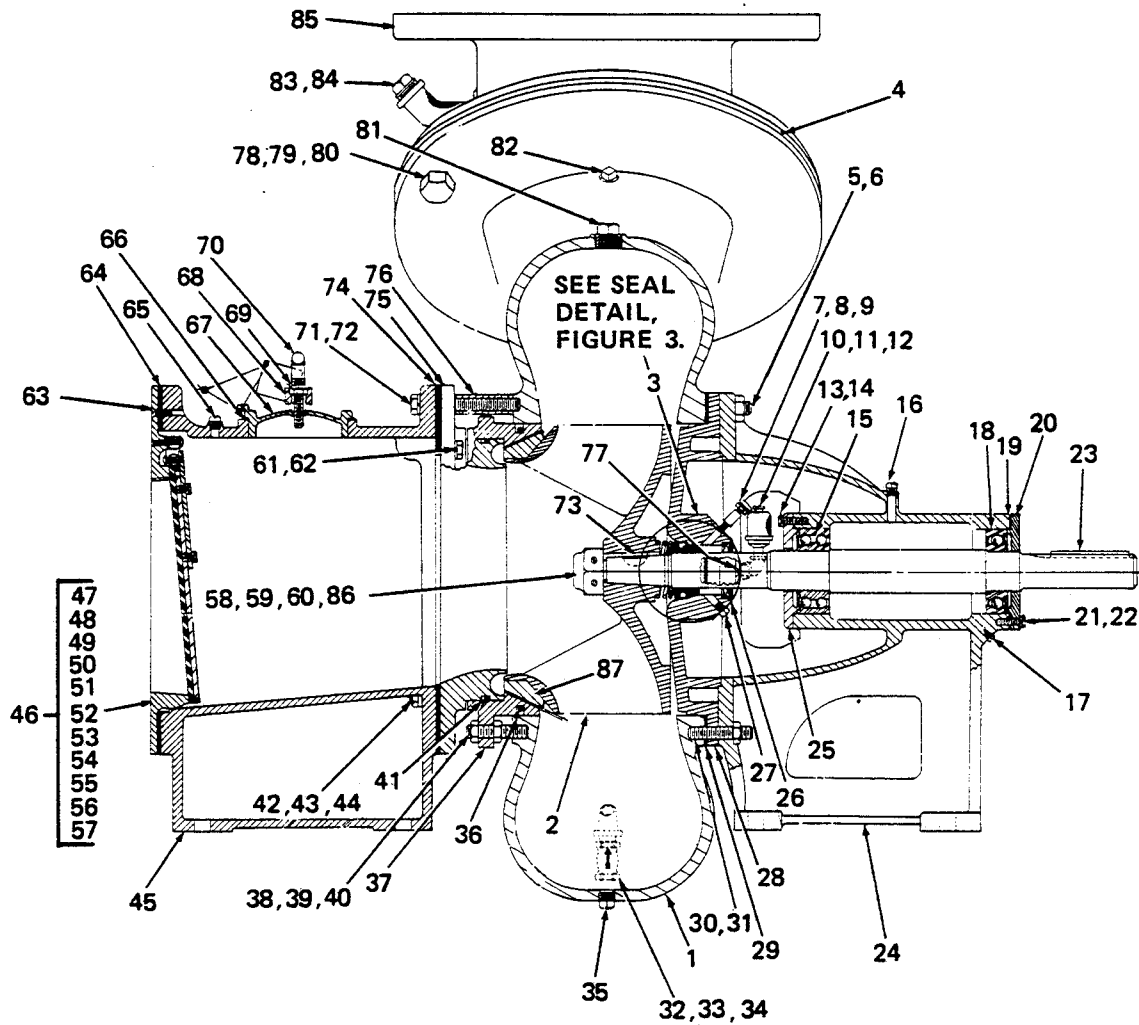


Figure 2. Pump End Only Model 112A20-B-N855P



PARTS LIST

PUMP END ONLY MODEL 112A20-B-N855P

ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY
1	VOLUTE CASING	4178	10010	1	49	DRY SLEEVE BEARING	S-2282	—	4
2	† IMPELLER ASSY	46151-012	—	1	50	GROOVED PIN	21142-433	—	4
3	★ SEAL ASSEMBLY	12590-B	—	1	51	FLANGED SEAT	14273-A	10010	1
4	★ DISCHARGE FLNG GSKT	4991-G	18000	1	52	BUTTON HD CAPSCREW	CM-0404	15990	2
5	STUD	C-1011	15991	10	53	BUTTON HD CAPSCREW	CM-0403	15990	2
6	HEX NUT	D-10	15991	10	54	LOCKWASHER	J-04	15991	4
7	AIR VENT FITTING	S-2162	—	1	55	HEX HEAD CAPSCREW	B-0402	15991	4
8	PIPE COUPLING	AE-02	11990	1	56	CHECK VALVE PLATE	14283	15990	1
9	CLOSE NIPPLE	T-02	15070	1	57	CHECK VALVE ASSY	14281	24010	1
10	BOTTLE OILER	S-1933	—	1	58	★ IMPELLER SHAFT	38516-202	—	1
11	PIPE ELBOW	R-02	11990	1	59	SCKT HDLESS SETSCREW	GA-0601½	17090	2
12	PIPE NIPPLE	T-0212	15070	1	60	NYLON INSERT	31111-003	—	2
13	HEX HEAD CAPSCREW	B-0605	15991	6	61	HEX HEAD CAPSCREW	B-1006	15991	2
14	LOCKWASHER	J-06	15991	6	62	LOCKWASHER	J-10	15991	2
15	★ BALL BEARING	S-1032	—	1	63	FLT SCH CAPSCREW	F-0404	15990	2
16	PEDESTAL VENTED PLUG	4823	11990	1	64	★ CHECK VALVE GASKET	14273-G	20000	1
17	PEDESTAL DRAIN PLUG	P-04	11990	1	65	PIPE PLUG	P-04	11990	1
18	★ BALL BEARING	S-0616	—	1	66	★ COVER PLATE GASKET	12369-G	20000	1
19	★ BEARING CAP GASKET	5413-G	18000	1	67	COVER PLATE ASSEMBLY	48271-020	—	1
20	BEARING CAP	4185	10010	1	68	CLAMP BAR	12370	11000	1
21	HEX HEAD CAPSCREW	B-0605	15991	4	69	HEX HEAD CAPSCREW	B-0808	15991	2
22	LOCKWASHER	J-06	15991	4	70	CLAMP BAR SCREW	8618	24000	1
23	★ DRIVE SHAFT KEY	N-0616	15990	1	71	HEX HEAD CAPSCREW	14432	15990	8
24	PEDESTAL	3233-B	10010	1	72	LOCKWASHER	J-10	15991	8
25	BEARING CAP	4184	10010	1	73	★ WOODRUFF KEY	AV-1210	15990	1
26	★ OIL SEAL	S-1917	—	1	74	★ CHECK VALVE FLNG GSKT	4991-G	18000	1
27	SEAL ASSY DRAIN PLUG	P-02	11990	1	75	SUCTION PLATE	12737-A	11010	1
28	SEAL PLATE	4179-E	10010	1	76	SPACER	14278	15020	8
29	★ VOLUTE GASKET	4180-G	18000	1	77	ROUND HEAD SETSCREW	X-0404	17090	2
30	STUD	C-1013	15991	2	78	HEX HEAD CAPSCREW	B-1414	15991	12
31	HEX NUT	D-10	15991	2	79	HEX NUT	D-14	15991	12
32	★ VOLUTE CHECK VALVE	S-2283	—	1	80	LOCKWASHER	J-14	15991	12
33	PIPE NIPPLE	T-12	15070	1	81	VOLUTE FILL PLUG	P-24	11990	1
34	STREET ELBOW	RS-12	11990	1	82	PIPE PLUG	P-06	11990	1
35	VOLUTE DRAIN PLUG	P-12	11990	1	83	STREET ELBOW	AGS-32	11990	1
36	★ WEAR RING O-RING	S-1914	—	1	84	PIPE PLUG	P-32	11990	1
37	★ ADJUSTABLE WEAR RING	12736	11010	1	85	ADAPTER FLANGE	14275	10010	1
38	STUD	12739	15010	4	86	IMPELLER SHAFT NUT	4190-B	10090	1
39	HEX NUT	D-10	15991	4	87	† WEAR RING	NOT AVAILABLE		
40	JAM NUT	AT-10	15991	4	NOT SHOWN:				
41	★ SUCTION PLATE O-RING	S-1991	—	1		STRAINER, 12"	4990-A	—	1
42	HEX HEAD CAPSCREW	B-1009	15991	2		NAME PLATE	2613-D	13990	1
43	LOCKWASHER	J-10	15991	2		DRIVE SCREW	BM#04-03	—	4
44	HEX NUT	D-10	15991	2		ROTATION DECAL	2613-CU	00000	1
45	CHECK VALVE FLANGE	14270	10010	1	OPTIONAL:				
46	★ CHECK VALVE ASSEMBLY	14284	—	1		4-WHEEL TRUCK ASSY	GRP30-10A	—	1
47	CHECK VALVE SHAFT	14282	17010	2		TRUCK BASE	14286-A	—	1
48	BEARING PIVOT	14274	17070	2					

† NOTE: ITEMS 2 AND 87 ARE WELDED INTO A SINGLE ASSEMBLY.

★ INDICATES PARTS RECOMMENDED FOR STOCK

**For U.S. and International Warranty Information,
Please Visit www.grpumps.com/warranty
or call:
U.S.: 419–755–1280
International: +1–419–755–1352**

**For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519–631–2870**