

A C E

OM-01614-OE01

January 20, 1981

Rev. B

50SERIES

INSTALLATION, OPERATION, PARTS LIST, AND MAINTENANCE MANUAL



THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA

Printed in U.S.A.

Copyright by the Gorman-Rupp Company

TABLE OF CONTENTS

INTRODUCTION	I-1
WARNINGS - SECTION A	A-1
INSTALLATION - SECTION B	B-1
Pump Dimensions	B-1
PREINSTALLATION INSPECTION	B-2
POSITIONING PUMP	B-3
Lifting	B-3
Mounting	B-3
SUCTION AND DISCHARGE PIPING	B-4
Materials	B-4
Line Configuration	B-4
Connections to Pump	B-4
Gauges	B-4
SUCTION LINES	B-4
Fittings	B-5
Strainers	B-5
Sealing	B-5
Suction Lines In Sumps	B-5
Suction Line Positioning	B-6
DISCHARGE LINES	B-6
Siphoning	B-6
Valves	B-7
ALIGNMENT	B-7
OPERATION - SECTION C	C-1
PRIMING	C-1
Exhaust Primer	C-1
STARTING	C-2
OPERATION	C-2
Leakage	C-3
Liquid Temperature And Overheating	C-3
Strainer Check	C-3
Pump Vacuum Check	C-3
STOPPING	C-4
Cold Weather Preservation	C-4
BEARING TEMPERATURE CHECK	C-4
PUMP TROUBLESHOOTING - SECTION D	D-1
PUMP MAINTENANCE AND REPAIR - SECTION E	E-1
PERFORMANCE CURVE	E-1
PUMP MODEL - PARTS LIST	E-3
PUMP END ASSY - PARTS LIST	E-5
DRIVE ASSY - PARTS LIST	E-7
PUMP AND SEAL DISASSEMBLY AND REASSEMBLY	E-8
Cover Plate Removal	E-8
Impeller And Wear Ring Removal	E-9
Seal Removal And Disassembly	E-9
Separating Pump And Intermediate From Engine	E-10
Shaft And Bearing Removal And Disassembly	E-10
Shaft and Bearing Reassembly And Installation	E-11
Securing Pump And Intermediate To Engine	E-13
Seal Reassembly And Installation	E-13
Impeller And Wear Ring Installation	E-15
Cover Plate Installation	E-16
Final Pump Reassembly	E-17
LUBRICATION	E-17
Seal Assembly	E-17
Bearings	E-18
Engine	E-18

INTRODUCTION

This Installation, Operation, and Maintenance Manual is designed to help you achieve the best performance and longest life from your Gorman-Rupp pump.

This pump is a 50 Series, centrifugal model with an enclosed impeller. This pump is designed for pumping clean liquids at high heads and high discharge pressures. The basic materials of construction for wetted parts are gray iron, with gray iron impeller and brass wear ring. Be sure the liquid being pumped is compatible with these materials.

If there are any questions regarding the pump or its application which are not covered in this manual or in other literature accompanying this unit, please contact your Gorman-Rupp distributor, or write:

The Gorman-Rupp Company
P.O. Box 1217
Mansfield, Ohio 44901-1217

or

Gorman-Rupp of Canada Limited
70 Burwell Road
St. Thomas, Ontario N5P 3R7

For information or technical assistance on the engine, contact the engine manufacturer's local dealer or representative.

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:

NOTE

Instructions to aid in installation, operation, and maintenance or which clarify a procedure.

CAUTION

Instructions which must be followed to avoid causing damage to the product or other equipment incidental to the installation. These instructions describe the requirements and the possible damage which could result from failure to follow the procedures.

WARNING

```
////////////////////////////////////  
//  
// These instructions must be followed to avoid causing in- //  
// jury or death to personnel, and describe the procedure //  
// required and the injury which could result from failure //  
// to follow the procedure. //  
//  
////////////////////////////////////
```


WARNINGS

WARNINGS - SECTION A

THESE WARNINGS APPLY TO 50 SERIES ENGINE DRIVEN PUMPS. REFER TO THE MANUAL ACCOMPANYING THE ENGINE BEFORE ATTEMPTING TO BEGIN OPERATION.

WARNING

```
//////////////////////////////////////  
//  
// Before attempting to open or service the pump: //  
//  
// 1. Familiarize yourself with this manual. //  
// 2. Switch off the engine ignition and remove the key //  
// to ensure that the pump will remain inoperative. //  
// 3. Allow the pump to cool if overheated. //  
// 4. Vent the pump slowly and cautiously. //  
// 5. Close the suction and discharge valves. //  
// 6. Check the temperature before opening any covers, //  
// plates, or plugs. //  
// 7. Drain the pump. //  
//  
//////////////////////////////////////
```

WARNING

```
//////////////////////////////////////  
//  
// This pump is designed to handle clean liquids. Do not //  
// attempt to pump volatile, corrosive, or flammable liq- //  
// uids which may damage the pump or endanger personnel as //  
// a result of pump failure. //  
//  
//////////////////////////////////////
```

WARNING

```
//////////////////////////////////////  
//  
// After the pump has been installed, make certain that the //  
// pump and all piping connections are tight, properly sup- //  
// ported and secure before operation. //  
//  
//////////////////////////////////////
```

WARNING

```
//////////////////////////////////////  
//  
// Do not operate the pump against a closed discharge valve //  
// for long periods of time. This could bring the liquid //  
// to a boil, build pressure, and cause the pump to rupture //  
// or explode. //  
//  
//////////////////////////////////////
```

WARNINGS

WARNING

```
////////////////////////////////////  
//  
// Fuel used by internal combustion engines presents an ex- //  
// treme explosion and fire hazard. Make certain that all //  
// fuel lines are securely connected and free of leaks. //  
// Never refuel a hot or running engine. Avoid overfilling //  
// the fuel tank. Always use the correct type of fuel. //  
//  
////////////////////////////////////
```

WARNING

```
////////////////////////////////////  
//  
// Do not operate an internal combustion engine in an ex- //  
// plosive atmosphere. When operating internal combustion //  
// engines in an enclosed area, make certain that exhaust //  
// fumes are piped to the outside. These fumes contain //  
// carbon monoxide, a deadly gas that is colorless, //  
// tasteless, and odorless. //  
//  
////////////////////////////////////
```

WARNING

```
////////////////////////////////////  
//  
// Overheated pumps can cause severe burns and injury. If //  
// overheating of the pump occurs: //  
//  
// 1. Stop the pump immediately. //  
// 2. Allow the pump to cool. //  
// 3. Refer to instructions in this manual before re- //  
// starting the pump. //  
//  
////////////////////////////////////
```

WARNING

```
////////////////////////////////////  
//  
// Do not remove plates, covers, gauges, pipe plugs, or //  
// fittings from an overheated pump. Vapor pressure within //  
// the pump can cause parts being disengaged to be ejected //  
// with great force. Allow the pump to cool before servic- //  
// ing. //  
//  
////////////////////////////////////
```


WARNINGS

WARNING

```
////////////////////////////////////  
//  
// Never tamper with the governor to gain more power. The //  
// governor establishes safe operating limits that should //  
// not be exceeded. The maximum continuous operating speed //  
// is 2800 RPM. //  
//  
////////////////////////////////////
```


INSTALLATION

INSTALLATION - SECTION B

Since pump installations are seldom identical, this section offers only general recommendations and practices required to inspect, position, and arrange the pump and piping.

Most of the information pertains to a standard **static lift application** where the pump is positioned above the free level of liquid to be pumped.

If installed in a **flooded suction application** where the liquid is supplied to the pump under pressure, some of the information such as mounting, line configuration, and priming must be tailored to the specific application. Since the pressure supplied to the pump is critical to performance and safety, **be sure** to limit the incoming pressure to 50% of the maximum permissible operating pressure as shown on the pump performance curve. (See Section E, Page 1). If the pump is fitted with a Gorman-Rupp double grease lubricated seal, the maximum incoming pressure must be reduced to 10 p.s.i..

For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

Pump Dimensions

See Figure 1 for the approximate physical dimensions of this pump.

OUTLINE DRAWING

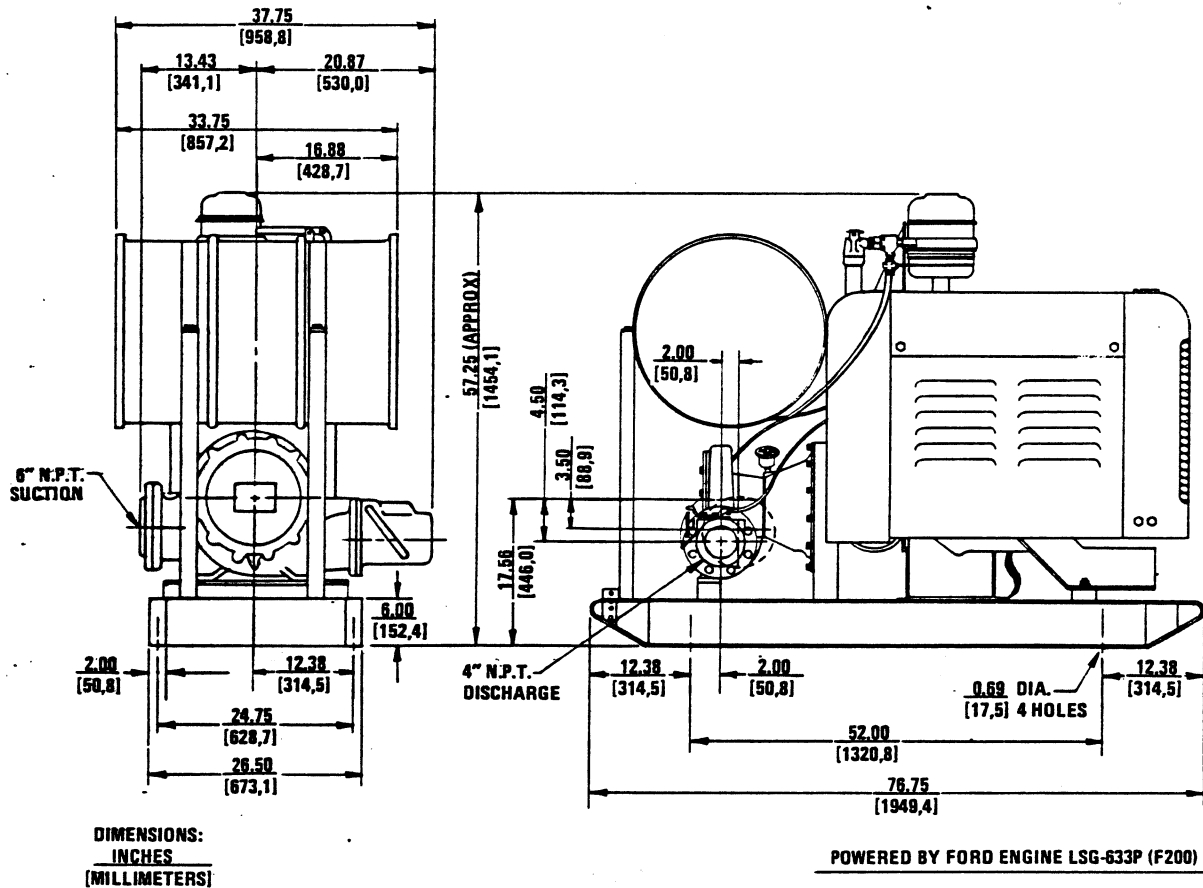


Figure 1. Pump Model 54B2-F200

PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before shipment from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- Inspect the pump assembly for cracks, dents, damaged threads, and other obvious damage.
- Check for and tighten loose bolts, nuts, capscrews, and other attaching hardware. Since gaskets tend to shrink after drying, check for and tighten loose nuts and capscrews securing mating surfaces.
- Carefully read all tags, decals, and markings on the pump assembly, and follow the instructions indicated.

INSTALLATION

- d. Check all lubricant levels and lubricate as necessary. Refer to LUBRICATION in the MAINTENANCE AND REPAIR section of this manual and perform duties as instructed.
- e. If the pump and engine have been stored for more than 12 months, some of the components or lubricants may have exceeded their maximum shelf life. These **must be inspected or replaced** to ensure maximum pump service.

If the maximum shelf life has been exceeded, or if anything appears to be abnormal, contact your Gorman-Rupp distributor or the factory to determine the repair or updating policy. **Do not** put the pump into service until appropriate action has been taken.

POSITIONING PUMP

Lifting

Use lifting equipment with a capacity of at least **6,250 pounds**. This pump weighs approximately **1,250 pounds**, not including the weight of accessories and customer installed options. Customer installed equipment such as suction and discharge piping **must** be removed before attempting to lift.

CAUTION

The pump assembly can be seriously damaged if the cables or chains used to lift and move the unit are improperly wrapped around the pump.

Mounting

Locate the pump in an accessible place as close as practical to the liquid being pumped. Level mounting is essential for proper operation. The pump may have to be supported or shimmed to provide for level operation or to eliminate vibration.

To ensure sufficient lubrication and fuel supply to the engine, **do not** position the pump and engine more than 15° off horizontal for continuous operation. The pump and engine may be positioned up to 30° off horizontal for **intermittant operation only**; however, the engine manufacturer should be consulted for continuous operation at angles greater than 15°.

If the pump has been mounted on a moveable base, make certain the base is stationary by setting the brake and blocking the wheels before attempting to operate the pump.

SUCTION AND DISCHARGE PIPING

Materials

Either pipe or hose may be used for suction and discharge lines; however, the materials must be compatible with the liquid being pumped. If hose is used in suction lines, it must be the rigid-wall, reinforced type to prevent collapse under suction. Using piping couplings in suction lines is not recommended.

Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

Connections to Pump

Before tightening a connecting flange, align it exactly with the pump port. Never pull a pipe line into place by tightening the flange bolts and/or couplings.

Lines near the pump must be independently supported to avoid strain on the pump which could cause excessive vibration, decreased bearing life, and increased shaft and seal wear. If hose-type lines are used, they should have adequate support to secure them when filled with liquid and under pressure.

Gauges

Most pumps are drilled and tapped for installing discharge pressure and vacuum suction gauges. If these gauges are desired for pumps that are not tapped, drill and tap the suction and discharge lines not less than 18 inches from the suction and discharge ports and install the lines. Installation closer to the pump may result in erratic readings.

SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem horizontal to avoid air pockets.

Strainers

If a strainer is furnished with the pump, be certain to use it; any spherical solids which pass through a strainer furnished with the pump will also pass through the pump itself.

If a strainer is not furnished with the pump, but is installed by the pump user, make certain that the total area of the openings in the strainer is at least three or four times the cross section of the suction line, and that the openings will not permit passage of solids larger than the solids handling capability of the pump.

This pump is designed to handle up to 3/8-inch diameter spherical solids.

Sealing

Since even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift, all connections in the suction line should be sealed with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

Suction Lines In Sumps

If a single suction line is installed in a sump, it should be positioned away from the wall of the sump at a distance equal to one and one-half times the diameter of the suction line.

If there is a liquid flow from an open pipe into the sump, the flow should be kept away from the suction inlet because the inflow will carry air down into the sump, and air entering the suction line will reduce pump efficiency.

If it is necessary to position inflow close to the suction inlet, install a baffle between the inflow and the suction inlet at a distance one and one-half times the diameter of the suction pipe. The baffle will allow entrained air to escape from the liquid before it is drawn into the suction inlet.

If two suction lines are installed in a single sump, the flow paths may interact, reducing the efficiency of one or both pumps. To avoid this, position the suction inlets so that they are separated by a distance equal to at least three times the diameter of the suction pipe.

Suction Line Positioning

The depth of submergence of the suction line is critical to efficient pump operation. Figure 2 shows recommended minimum submergence vs. velocity.

NOTE

The pipe submergence required may be reduced by installing a standard pipe increaser fitting at the end of the suction line. The larger opening size will reduce the inlet velocity. Calculate the required submergence using the following formula based on the increased opening size (area or diameter).

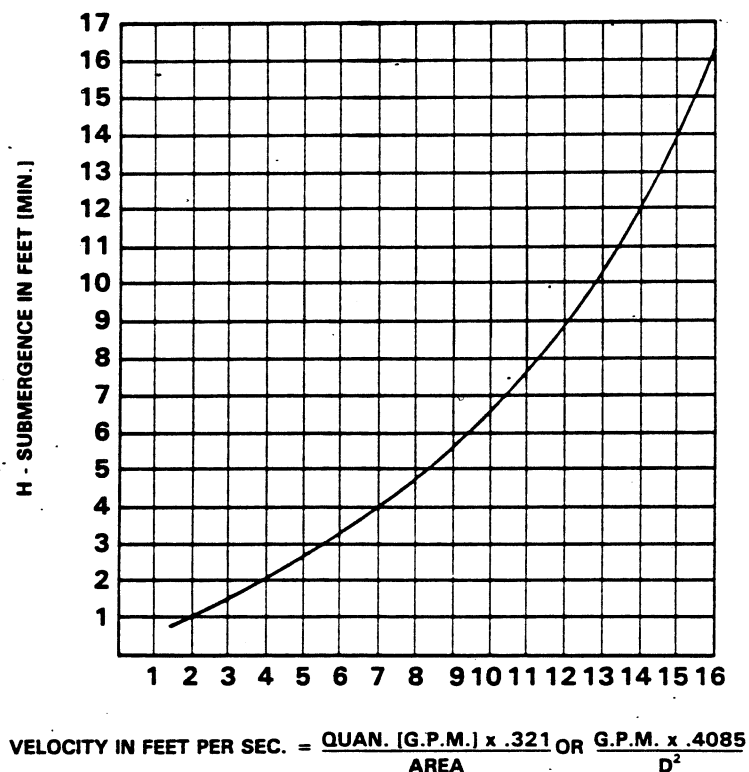


Figure 2. Recommended Minimum Suction Line Submergence Vs. Velocity

DISCHARGE LINES

Siphoning

Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action causing damage to the pump could result.

Valves

The spring loaded check valve provided with this pump will **not** function as a discharge check valve in system piping. It is intended to prevent recirculation of air during the priming cycle.

If a throttling valve is desired in the discharge line, use a valve as large as the largest pipe to minimize friction losses. Never install a throttling valve in a suction line.

With high discharge heads, it is recommended that a throttling valve and a system check valve be installed in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.

CAUTION

If application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

ALIGNMENT

The alignment of the pump and the engine is critical for trouble free mechanical operation. See Section E, **Securing Pump And Intermediate To Engine** for detailed information.

OPERATION - SECTION C

WARNING

```
////////////////////////////////////  
//  
// This pump is designed to pump clean liquids. Do not at- //  
// tempt to pump volatile, corrosive, or flammable liquids //  
// which may damage the pump or endanger personnel as a re- //  
// sult of pump failure. //  
// //  
////////////////////////////////////
```

WARNING

```
////////////////////////////////////  
//  
// Never tamper with the governor to gain more power. The //  
// governor establishes safe operating limits that should //  
// not be exceeded. The maximum continuous operating speed //  
// is 2800 RPM. //  
// //  
////////////////////////////////////
```

PRIMING

Install the pump and piping as described in INSTALLATION. Make sure that the piping connections are tight, and that the pump is securely mounted. Check that the pump is properly lubricated (see LUBRICATION in MAINTENANCE AND REPAIR).

Exhaust Primer

Since this pump is not self-priming, it is equipped with an exhaust primer assembly (Figure 1).

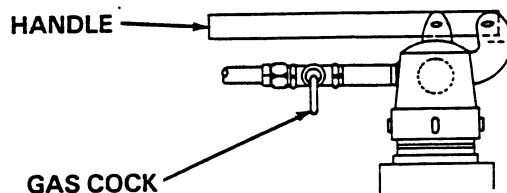


Figure 1. Exhaust Primer Assembly

The exhaust primer utilizes engine exhaust gases, directed through a venturi, to create a vacuum and draw air out of the suction line and pump casing.

OPERATION

The exhaust primer is capable of priming a pump with a 20 foot suction lift in about two minutes; less time will be required for priming at a lesser lift. If the pump does not prime in a reasonable length of time, check the suction line for leaks.

To prime the pump, close the spring loaded check valve and throttling valve in the discharge line.

NOTE

For installation and operating instructions on the discharge check valve, see the separate check valve manual accompanying this literature.

Close the exhaust primer handle (see Figure 1), and open the cock in the priming line. Consult the starting instructions in this manual as well as the engine operating manual, and start the engine. Operate the engine at maximum governed speed and allow the pump to prime until liquid flows continuously from the exhaust primer nozzle. When the pump is fully primed, open the exhaust primer handle, and close the cock in the priming line.

Once fully primed, reduce engine speed and partially open the discharge throttling valve. The discharge line should be filled slowly to prevent damage to the piping, gaskets, and other devices, resulting from the initial shock of liquid filling the lines. When the discharge line is completely filled, adjust the discharge throttling valve to the desired flow rate.

STARTING

Consult the operations manual furnished with the engine.

NOTE

This pump is equipped with a safety shut down device to terminate engine operation if pump discharge pressure falls below 30 psi. During engine start up, the button on the discharge pressure gauge must be depressed to over-ride this safety feature.

OPERATION

CAUTION

Pump speed and operating condition points must be within the continuous performance range shown on the curve. See Section E, Page 1.

OPERATION

Leakage

No leakage should be visible at pump mating surfaces, or at pump connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

Liquid Temperature And Overheating

The **maximum** liquid temperature for this pump is 110°F. Do not apply it at a higher operating temperature.

Overheating can occur if operated with the valves in the suction or discharge lines closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump and allow it to cool before servicing it. Refill the pump casing with cool liquid.

WARNING

```
////////////////////////////////////  
//  
// Do not remove plates, covers, gauges, pipe plugs, or //  
// fittings from an overheated pump. Vapor pressure within //  
// the pump can cause parts being disengaged to be ejected //  
// with great force. Allow the pump to cool before servic- //  
// ing. //  
//  
////////////////////////////////////
```

Strainer Check

If a suction strainer has been shipped with the pump or installed by the user, check the strainer regularly, and clean it as necessary. The strainer should also be checked if pump flow rate begins to drop. If a vacuum suction gauge has been installed, monitor and record the readings regularly to detect strainer blockage.

Never introduce air or steam pressure into the pump casing or piping to remove a blockage. This could result in personal injury or damage to the equipment. If backflushing is absolutely necessary, **liquid pressure** must be limited to 50% of the maximum permissible operating pressure shown on the pump performance curve. (See Section E, Page 1). If the pump is fitted with a Gorman-Rupp double grease lubricated seal, the maximum incoming pressure must be reduced to 10 p.s.i..

Pump Vacuum Check

Since this pump does not have a suction check valve, the discharge line must be fitted with a check valve if a pump vacuum reading is to be taken.

With the pump inoperative, install a vacuum gauge in the system, using pipe dope on the threads. Block the suction line and start the pump. At operating speed

OPERATION

the pump should pull a vacuum of 20 inches or more of mercury. If it does not, check for air leaks in the seal, gasket, or discharge valve.

Open the suction line, and read the vacuum gauge with the pump primed and at operating speed. Shut off the pump. The vacuum gauge reading will immediately drop proportionate to static suction lift, and should then stabilize. If the vacuum reading falls off rapidly after stabilization, an air leak exists. Before checking for the source of the leak, check the point of installation of the vacuum gauge.

STOPPING

Never halt the flow of liquid suddenly. If the liquid being pumped is stopped abruptly, damaging shock waves can be transmitted to the pump and piping system. Close all connecting valves slowly. On engine driven pumps, reduce the throttle speed slowly and allow the engine to idle briefly before stopping.

CAUTION

If application involves a high discharge head, gradually close the discharge throttling valve before stopping the pump.

After stopping the pump, switch off the engine ignition and remove the key to ensure that the pump will remain inoperative.

Cold Weather Preservation

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts.

If the pump will be idle for more than a few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump from completely draining, insert a rod or stiff wire in the drain port, and agitate the liquid during the draining process. Clean out any remaining solids by flushing with a hose.

BEARING TEMPERATURE CHECK

Bearings normally run at higher than ambient temperatures because of heat generated by friction. Temperatures up to 160°F are considered normal for bearings, and they can operate safely to at least 180°F.

OPERATION

Checking bearing temperatures by hand is inaccurate. Bearing temperatures can be measured accurately by placing a contact-type thermometer against the housing. Record this temperature for future reference.

A sudden increase in bearing temperatures is a warning that the bearings are at the point of failing to operate properly. Make certain that the bearing lubricant is of the proper viscosity and at the correct level (see LUBRICATION in MAINTENANCE AND REPAIR). Bearing overheating can also be caused by shaft misalignment and/or excessive vibration.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.

PUMP TROUBLESHOOTING - SECTION D

WARNING

```

////////////////////////////////////
//
// Before attempting to open or service the pump:
//
// 1. Familiarize yourself with this manual.
// 2. Switch off the engine ignition and remove the key
//    to ensure that the pump will remain inoperative.
// 3. Allow the pump to cool if overheated.
// 4. Vent the pump slowly and cautiously.
// 5. Close the suction and discharge valves.
// 6. Check the temperature before opening any covers,
//    plates, or plugs.
// 7. Drain the pump.
//
////////////////////////////////////

```

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP FAILS TO PRIME	Auxiliary priming device faulty or improperly installed.	Repair priming device or check installation.
	Air leak in suction line.	Correct leak.
	Lining of suction hose collapsed.	Replace suction hose.
	Leaking or worn seal or pump gasket.	Check pump vacuum. Replace leaking or worn seal or gasket.
	Suction lift or discharge head to high.	Check piping installation and reduce suction lift and/or discharge head.
	Strainer clogged.	Check strainer and clean if necessary.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Air leak in suction line.	Correct leak.
	Pump speed too high.	Check engine output.
	Lining of suction hose collapsed.	Replace suction hose.
	Impeller or other wearing parts worn or damaged.	Replace worn or damaged parts. Check that impeller is properly centered and rotates freely.


TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE(cont.)	<p>Impeller clogged.</p> <p>Pump speed too slow.</p> <p>Suction lift too high.</p> <p>Strainer clogged.</p> <p>Discharge throttling valve partially closed; check valve installed improperly.</p> <p>Discharge pressure at or below safety shutdown limit.</p> <p>Discharge check valve locked closed.</p>	<p>Free impeller of debris.</p> <p>Check engine output; consult engine operation manual.</p> <p>Measure lift w/vacuum gauge. Reduce lift and/or friction losses in suction line.</p> <p>Check strainer and clean if necessary.</p> <p>Open discharge valve fully; check piping installation.</p> <p>Check starting instructions; increase pressure.</p> <p>Check position of handle; open valve.</p>
PUMP REQUIRES TOO MUCH POWER	<p>Discharge head too low.</p> <p>Liquid solution too thick.</p> <p>Pump speed too high.</p>	<p>Adjust discharge valve.</p> <p>Dilute if possible.</p> <p>Check engine output.</p>
PUMP CLOGS FREQUENTLY	<p>Discharge flow too slow.</p> <p>Suction check valve or foot valve clogged or binding.</p>	<p>Open discharge valve fully to increase flow rate, and run engine at maximum governed speed.</p> <p>Clean valve.</p>
EXCESSIVE NOISE	<p>Cavitation in pump.</p> <p>Pumping entrained air.</p> <p>Pump or drive not securely mounted.</p> <p>Impeller clogged or damaged.</p>	<p>Reduce suction lift and/or friction losses in suction line. Record vacuum and pressure gauge readings and consult local representative or factory.</p> <p>Locate and eliminate source of air bubble.</p> <p>Secure mounting hardware.</p> <p>Clean out debris; replace damaged parts.</p>

TROUBLESHOOTING

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
BEARINGS RUN TOO HOT	Bearing temperature is high, but within limits. Low or incorrect lubricant. Suction and discharge lines not properly supported. Drive misaligned.	Check bearing temperature regularly to monitor any increase. Check for proper type and level of lubricant. Check piping installation for proper support. Align drive properly.

MAINTENANCE AND REPAIR - SECTION E

MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.

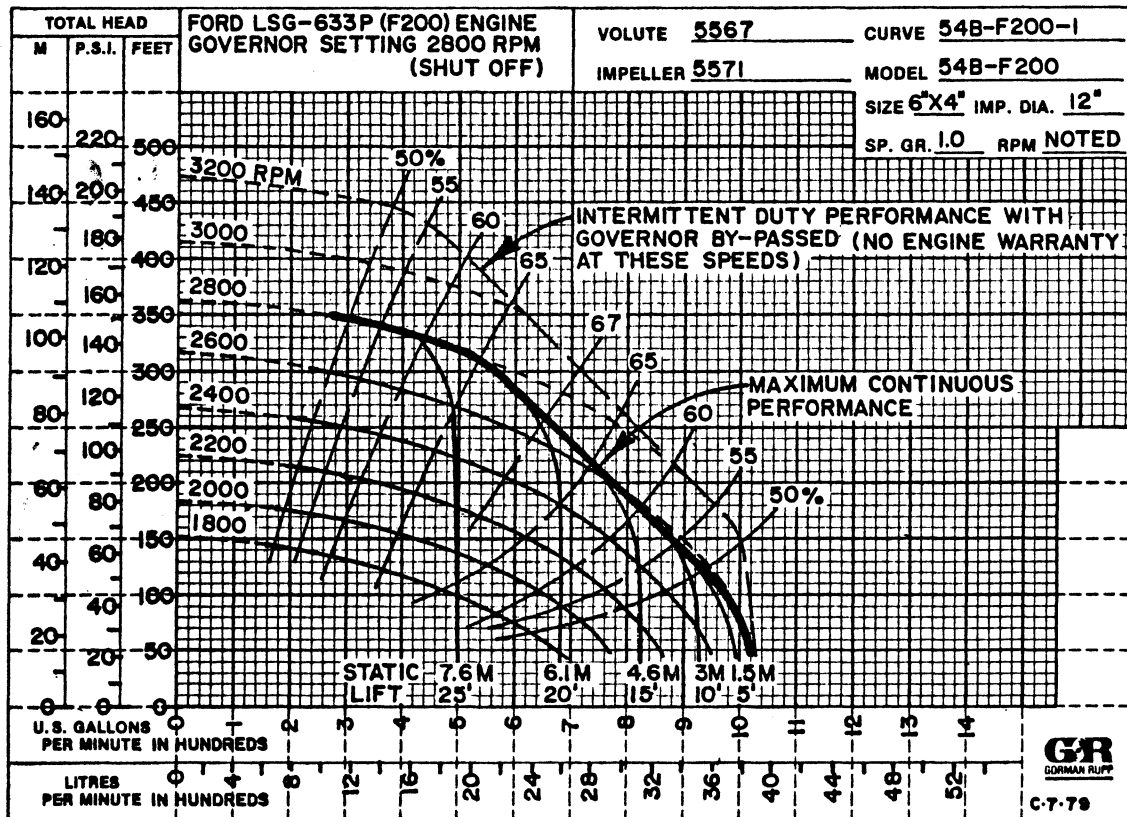

*STANDARD PERFORMANCE FOR PUMP MODEL 54B2-F200

*Based on 70°F clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify performance or part numbers.

SECTIONAL DRAWING

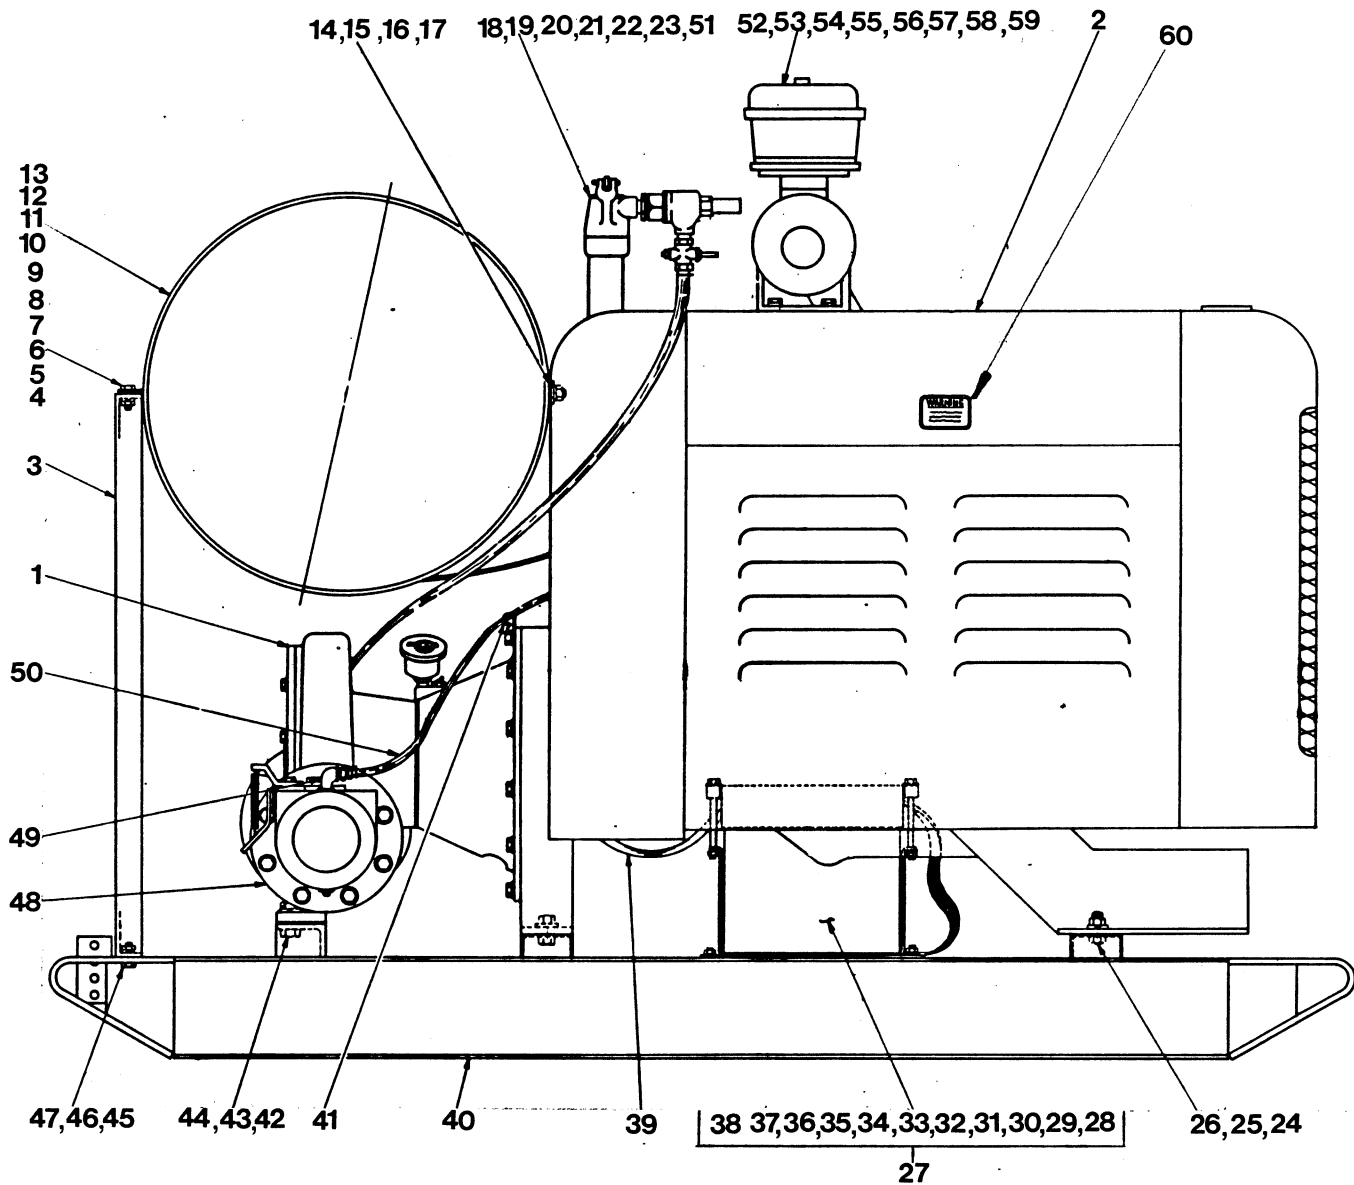


Figure 1. Pump Model Assembly 54B2-F200

PARTS LIST
Pump Model Assembly 54B2-F200
 (From S/N 719087 up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY
1	PUMP END ASSY	54B2 (SEE FIG 2)		1	34 *	-GRND CABLE ASSY	5795-AC	24040	1
2	FORD LSG-633P ENG	29118-181	-----	1	35	-HEX HD CAPSCREW	B00604	15991	2
3	TANK SUPPORT	6559-H	24000	2	36	-LOCKWASHER	J00006	15991	2
4	HEX NUT	D00008	15991	2	37	-HEX NUT	D00006	15991	2
5	LOCKWASHER	J00008	15991	2	38 *	-12V BATTERY	S01338	-----	1
6	HEX HD CAPSCREW	B00808	15991	2	39 *	CABLE ASSY - POS	6926-K	24040	1
7	SADDLE STRAP	4062	24000	2	40	BASE	41566-093	24150	1
8	FELT STRIP	9490-B	18030	2	41	CLIP	6006	15990	1
9	FUEL TANK	S00562	-----	1	42	HEX NUT	D00010	15991	2
10	*HOSE ASSY	12504	-----	1	43	LOCKWASHER	J00010	15991	2
11	BRASS ANGLE	S00401-A	-----	1	44	HEX HD CAPSCREW	B01008	15991	2
12	RED PIPE BUSHING	AP01202	11990	1	45	HEX NUT	D00008	15991	2
13	CLAMP	S00804	-----	1	46	LOCKWASHER	J00008	15991	2
14	FLAT WASHER	K00010	15991	2	47	HEX HD CAPSCREW	B00805	15991	2
15	LOCKWASHER	J00008	15991	2	48	CHECK VALVE ASSY	GRP14-04-A	-----	1
16	FLAT WASHER	K00008	15991	4	(SEE ACCOMPANYING LITERATURE)				
17	HEX NUT	D00008	15991	2	49	STREET ELBOW	RS00004	11990	1
18**	EP7C EXHAUST PRIMER	GRP15-13	-----	1	50**	PRESS GAUGE ASSY	48312-002	-----	1
19	PIPE NIPPLE	2434	15070	2	51	RED PIPE BUSHING	AP00806	11990	1
20	HOSE CLAMP	S00887	-----	2	52 *	AIR CLEANER HOSE	31417-046	19190	1
21	STREET ELBOW	RS00006	11990	1	53	HOSE CLAMP	26518-671	-----	4
22	EXHAUST ADAPTOR	31615-011	15990	1	54 *	AIR CLEANER HOSE	31417-045	19190	1
23	*HOSE 5/8 X 37	31412-110	19360	1	55	AIR CLEANER PIPE	41363-044	24150	1
24	HEX NUT	D00008	15991	1	56	WELL NUT	21757-036	-----	4
25	LOCKWASHER	J00008	15991	4	57	HEX HD CAPSCREW	B00405	15991	4
26	HEX HD CAPSCREW	B00805	15991	4	58	FLAT WASHER	K00004	15991	4
27	BATTERY BOX ASSY	GRP40-02	-----	1	59	PLATE	33243-029	15990	4
28	-BATTERY FRAME	8355-B	24000	1	60	WARNING DECAL	38816-132	-----	2
29	-BATTERY BOX	8356-B	24000	1	NOT SHOWN:				
30	-HEX HD CAPSCREW	B00612	15991	2	BATTERY TAG				
31	-FLAT WASHER	K00006	15991	2	OPTIONAL:				
32	-LOCKWASHER	J00006	15991	2	WHEEL KIT				
33	-HEX NUT	D00006	15991	2					

**CONSULT YOUR LOCAL DISTRIBUTOR OR THE FACTORY FOR INDIVIDUAL PARTS.

*INDICATES PARTS RECOMMENDED FOR STOCK

Above Serial Numbers Do Not Apply To Pumps Made In Canada.

CANADIAN SERIAL NO AND UP

SECTIONAL DRAWING

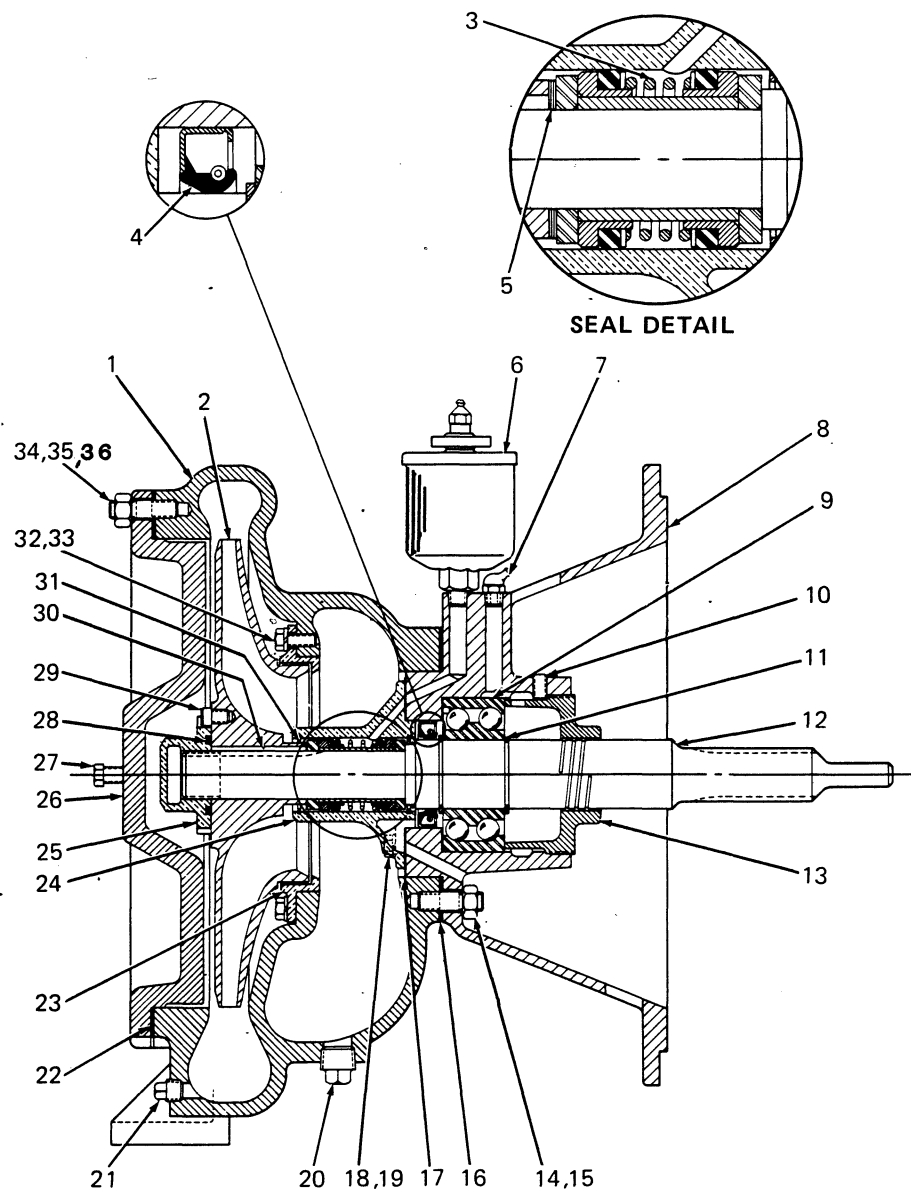


Figure 2. Pump End Assembly Model 54B2-F200

PARTS LIST
Pump End Assembly Model 54B2-F200

ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY
1	PUMP CASING	5567	10010	1	25	CAP NUT	2177-A	14000	1
2	*IMPELLER ASSY	5571	10010	1	26	COVER PLATE	1215-C	10010	1
3	*SEAL ASSY	GS01250	-----	1	27	HEX HD CAPSCREW	B00604	15991	2
4	*OIL SEAL	S00181	-----	1	28	*O-RING	S00461	-----	1
5	*ADJ SHIM SET	37-J	17090	REF	29	FIL HD SCREW	AW00602	14990	1
6	*SEAL GREASE CUP	S01509	-----	1	30	*IMPELLER KEY	N00408	15990	1
7	*LUBE FITTING	S00194	-----	1	31	*LOCK SPRING	947-A	16030	2
8	INTERMEDIATE	5551-B	10010	REF	32	HEX HD CAPSCREW	B00603	14990	4
9	*BALL BEARING	S01034	-----	1	33	LOCKWASHER	J00006	15991	4
10	SQ HD SETSCREW	G00604	15990	1	34	STUD	C00807	15991	10
11	BRG RETAINING RING	S00442	10010	2	35	HEX NUT	D00008	15991	12
12	*IMPELLER SHAFT	6821	16040	REF	36	STUD	C00809	15991	2
13	BRG RETAINING NUT	5566	10010	1	NOT SHOWN:				
14	STUD	C00807	15991	8		NAME PLATE	2613-D	13990	1
15	HEX NUT	D00008	15991	8		DRIVE SCREW	BM#04-03	15990	4
16	*CASING GSKT	5567-G	18000	1		STRAINER	S01529	-----	1
17	*SEAL HOUSING GSKT	956-AG	18000	1		SUCTION FLANGE	2616	10010	1
18	HEX HD CAPSCREW	B00603	14990	4		SUCT FLANGE GSKT	1678-G	18000	1
19	LOCKWASHER	J00006	15991	4		HEX HD CAPSCREW	B01010	15991	8
20	PIPE PLUG	P00008	11990	3		HEX NUT	D00010	15991	8
21	CASING DRAIN PLUG	P00006	11990	1	OPTIONAL:				
22	*COVER PLATE GSKT	1215-G	18000	1		SUCTION FLANGE	1757	10010	1
23	*WEAR RING	5570	14000	1		DISCHARGE FLANGE	1756	10010	1
24	SEAL HOUSING	5902	14000	1		DISCH FLANGE GSKT	1676-G	18000	1

*INDICATES PARTS RECOMMENDED FOR STOCK

SECTIONAL DRAWING

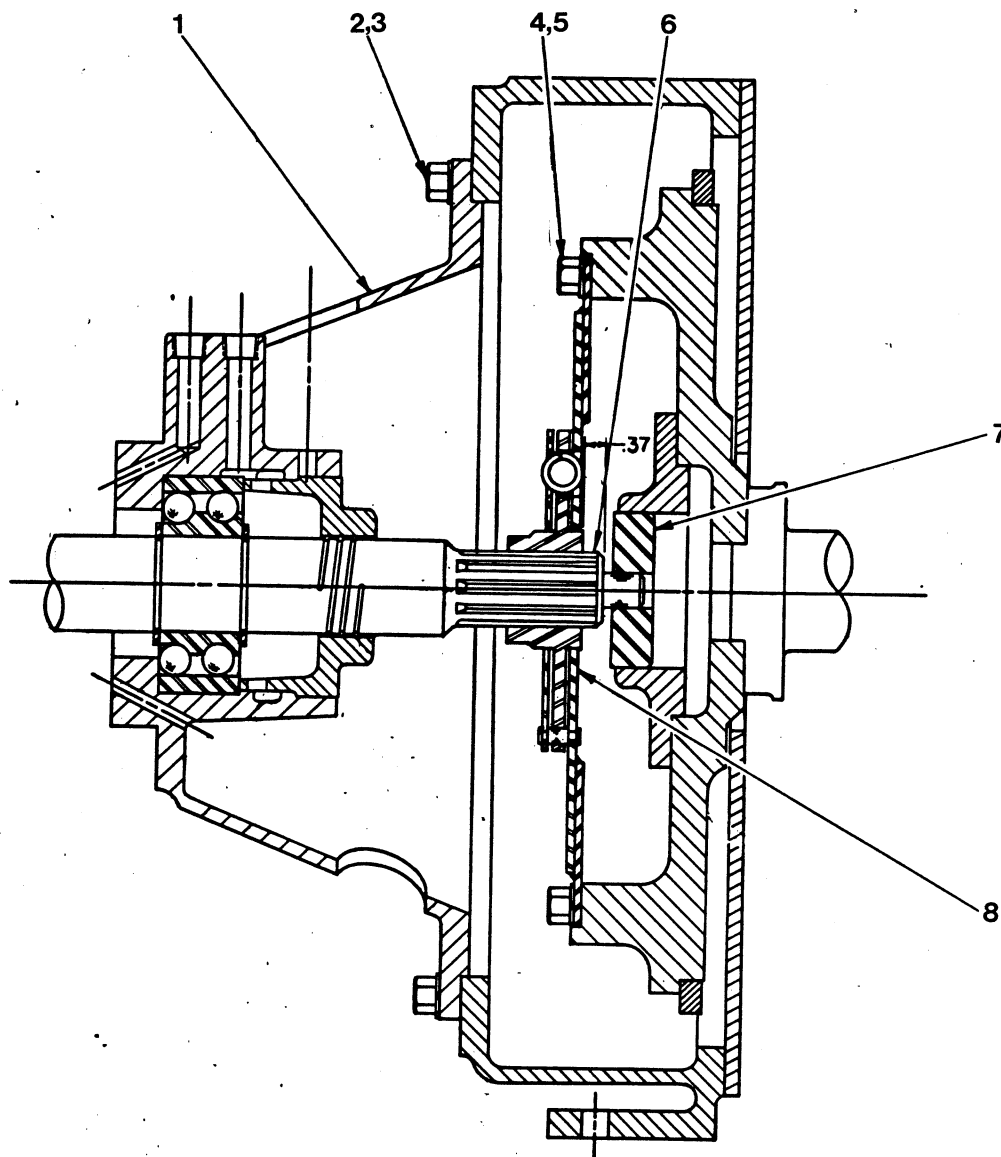


Figure 3. 44162-049 Drive Assembly

PARTS LIST
44162-409 Drive Assembly

ITEM NO.	PART NAME	PART NUMBER	MATL CODE	QTY
1	INTERMEDIATE	5551-B	10010	REF
2	HEX HD CAPSCREW	B00603	15991	12
3	LOCKWASHER	J00006	15991	12
4	HEX HD CAPSCREW	B00603	15991	8
5	LOCKWASHER	J00006	15991	8
6	IMPELLER SHAFT	6821	16040	REF
7	* PILOT BUSHING	31142-005	-----	1
8	DRIVE PLATE ASSY	44134-209	24150	1

*INDICATES PARTS RECOMMENDED FOR STOCK

PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

This pump requires little service due to its rugged, minimum-maintenance design. However, if it becomes necessary to inspect or replace the wearing parts, follow these instructions, which are keyed to the sectional views (see Figures 1, 2, and 3) and the accompanying parts lists.

See the accompanying literature for Installation, Operation and Maintenance of the GRP14-04-A Discharge Check Valve.

Most service functions may be performed by draining the pump and removing the cover plate. If major repair is required, the piping and/or engine must be disconnected.

Before attempting to service the pump, switch off the engine ignition and remove the key to ensure that it will remain inoperative, and close all valves in the suction and discharge lines.

This pump is powered by a six cylinder, 200 cubic inch displacement, Ford gasoline engine, model LSG-633P. For engine disassembly and repair, consult the literature supplied with the engine or contact your local Ford representative.

WARNING

```
////////////////////////////////////  
//  
// Before attempting to open or service the pump: //  
//  
// 1. Familiarize yourself with this manual. //  
// 2. Switch off the engine ignition and remove the key //  
// to ensure that the pump will remain inoperative. //  
// 3. Allow the pump to cool if overheated. //  
// 4. Vent the pump slowly and cautiously. //  
// 5. Close the suction and discharge valves. //  
// 6. Check the temperature before opening any covers, //  
// plates, or plugs. //  
// 7. Drain the pump. //  
//  
////////////////////////////////////
```

WARNING

```
////////////////////////////////////  
//  
// Use lifting and moving equipment in good repair and with //  
// adequate capacity to prevent injuries to personnel or //  
// damage to equipment. //  
//  
////////////////////////////////////
```

Cover Plate Removal

(Figure 2)

The impeller, wear ring, and seal assembly can be serviced after the cover plate (26) has been removed. Before removing the cover plate, remove the pump casing drain plugs (20 and 21) and drain the pump. Clean and reinstall the drain plugs.

Loosen the nuts (35), and use the jacking screws (27) to force the cover plate from the pump casing (1). Remove the cover plate gasket (22).

Impeller And Wear Ring Removal

(Figure 2)

Turn the cross arm on the automatic lubricating seal grease cup (6) clockwise until it rests against the cover (see Figure 6). This will prevent the grease in the cup from escaping when the impeller is removed.

Remove the fillister head screw (29), and unscrew the cap nut (25) from the impeller shaft (12). Remove the cap nut O-ring (28).

Install two 3/8-16 UNC x 2 1/2-inch long capscrews (not supplied) in the tapped holes in the impeller and use a wheel puller to remove the impeller from the shaft. Retain the impeller key (30).

Slide the impeller adjusting shims (5) off the shaft. Tie and tag the shims, or measure and record their thickness for ease of reassembly.

Inspect the wear ring (23) for excessive wear or damage. If replacement is required, remove the hardware (32 and 33), and insert two 5/16-18 UNC x 2 1/2-inch jacking screws (not supplied) in the threaded holes in the wear ring. Turn the jacking screws evenly (to prevent binding) until the wear ring separates from the pump casing.

Seal Removal And Disassembly

(Figure 2)

The seal assembly (3) may be serviced as a bench operation by removing the seal housing (24) and seal assembly as a single unit. Remove the hardware (18 and 19) and install 3/8-16 UNC jacking screws in the threaded holes in the seal housing. Tighten the jacking screws evenly to prevent binding.

When the seal housing separates from the intermediate, slide the seal housing and seal assembly off the shaft as a unit. Remove the seal housing gasket (17).

Remove the outboard seal lock spring (31). Use caution when removing the lock spring; tension on the seal spring will be released when the lock spring is removed.

Carefully remove the stationary and rotating seal elements, packing rings, stationary washers, seal spring and the spacer sleeve from the seal housing. Use a stiff wire with a hooked end if necessary.

NOTE

It is not necessary to remove the inboard seal lock spring from the seal housing.

If no further disassembly is required, see **Seal Reassembly And Installation**.

Separating Pump And Intermediate From Engine

(Figure 3)

To service the intermediate, bearings, or drive assembly, the pump and intermediate must be separated from the base. See Figure 1, and remove the hardware (42, 43, and 44) securing the pump casing to the base.

NOTE

If desired, disengage the hardware securing the discharge check valve assembly (48, Figure 1), and separate the check valve assembly from the pump casing.

Support the pump and intermediate using a suitable hoist and sling, and remove the hardware (2 and 3) securing the intermediate to the engine bellhousing. Separate the assemblies by pulling the intermediate straight away from the engine. As the assemblies are separated, the impeller shaft (6) will disengage from the drive plate assembly (8).

Tie and tag any leveling shims used under the pump casing mounting feet.

It is not necessary to remove the drive plate assembly from the engine flywheel unless the assembly or the pilot bushing (7) must be replaced. To remove the drive plate assembly, disengage the hardware (4 and 5).

Inspect the pilot bushing and, if replacement is required, use a suitable puller to remove it from the engine flywheel.

Shaft And Bearing Removal And Disassembly

(Figure 2)

When the pump is properly operated and maintained, the shaft and bearing should not require disassembly. Disassemble the shaft and bearing **only** when there is evidence of wear or damage.

CAUTION

Shaft and bearing disassembly in the field is not recommended. These operations should be performed only in a properly-equipped shop by qualified personnel.

After separating the pump end from the engine, reach through the back of the intermediate and remove the nuts (15). Separate the pump casing (1) from the intermediate (8) and remove the gasket (16).

Loosen the setscrew (10), and unscrew the bearing retaining nut (13) from the intermediate.

NOTE

There are no provisions for draining the grease from the intermediate cavity. Place a drip pan under the intermediate before removing the shaft and bearing.

Place a block of wood against the impeller end of the shaft (12), and tap the shaft and assembled bearing out of the intermediate.

Remove the outboard bearing retaining ring (11), and use a bearing puller to remove the bearing from the shaft. It is not necessary to remove the inboard bearing retaining ring from the shaft unless replacement is required.

Inspect the oil seal (4) for wear or damage and, if replacement is required, use an arbor (or hydraulic) press to remove it from the intermediate bore.

Shaft and Bearing Reassembly And Installation

(Figure 2)

Clean the intermediate, shaft and all component parts (except the bearing) with a soft cloth soaked in cleaning solvent. Inspect the parts for wear or damage and replace as necessary.

WARNING

```
////////////////////////////////////  
//  
// Most cleaning solvents are toxic and flammable. Use //  
// them only in a well-ventilated area free from excessive //  
// heat, sparks, and flame. Read and follow all prec- //  
// autions printed on solvent containers. //  
//  
////////////////////////////////////
```

Inspect the shaft for distortion, nicks or scratches or thread damage on the impeller end. Dress small nicks and burrs with a fine file or emery cloth. Replace the shaft if defective.

Clean the bearing thoroughly in **fresh** cleaning solvent. Dry the bearing with filtered compressed air and coat with light oil.

Rotate the bearing by hand to check for roughness or binding and inspect the bearing balls. If rotation is rough or the bearing balls are discolored, replace the bearing.

CAUTION

Bearings must be kept free of all dirt and foreign material. Failure to do so will greatly shorten bearing life. DO NOT spin dry bearings. This may scratch the balls or races and cause premature bearing failure.

The bearing tolerances provide a tight press fit onto the shaft and a snug slip fit into the intermediate. Replace the shaft or intermediate if the proper bearing fit is not achieved.

Pre-pack the bearing by hand (or use a bearing packer if available) with No. 0 lithium base grease until the bearing balls are thoroughly lubricated.

Position the bearing on the shaft with the loading groove facing **toward** the impeller end of the shaft. Press the bearing onto the shaft until it seats squarely against the inboard bearing retaining ring.

CAUTION

When installing the bearings onto the shaft, NEVER press or hit against the outer race, balls, or ball cage. Press ONLY on the inner race.

Install the outboard bearing retaining ring.

Press the oil seal (4) into the intermediate bore with the lip positioned as shown in Figure 2.

Slide the shaft and assembled bearing into the intermediate bore until the bearing seats squarely against the intermediate shoulder. **Be careful** not to damage the oil seal lip on the shaft threads.

CAUTION

When installing the shaft and bearings into the bearing bore, push against the outer race. NEVER hit the balls or ball cage.

Screw the retaining nut (13) into the intermediate and secure it with the setscrew (10).

NOTE

Shaft end play should be between .002 and .010 inch. Adjust the retaining nut to establish the correct end play.

Replace the pump casing gasket (16) and secure the casing to the intermediate with the nuts (15).

Lubricate the bearing as indicated in LUBRICATION.

Securing Pump And Intermediate To Engine

(Figure 3)

Apply 'Never-Seez' (or equivalent compound) to the inside diameter of the pilot bushing, and press the bushing into the engine flywheel as shown in Figure 3. Be sure the bushing does not protrude and preload the shaft and bearing.

CAUTION

If the pilot bushing and drive plate are not properly positioned on the shaft, a preload condition could cause excessive wear and/or premature bearing failure.

Secure the drive plate assembly to the engine flywheel with the attaching hardware (4 and 5).

Slide the shaft splines into the drive plate and secure the intermediate to the engine bellhousing with the hardware (2 and 3).

Be sure to install any leveling shims used under the pump casing mounting feet before installing the pump casing mounting hardware (42, 43 and 44, Figure 1).

Seal Reassembly And Installation

(Figures 2 and 4)

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent.

WARNING

```
////////////////////////////////////  
//  
// Most cleaning solvents are toxic and flammable. Use //  
// them only in a well-ventilated area free from excessive //  
// heat, sparks, and flame. Read and follow all prec- //  
// autions printed on solvent containers. //  
// //  
////////////////////////////////////
```

The seal is not normally reused because wear patterns on the finished faces cannot be realigned during reassembly. This could result in premature failure. If necessary to reuse an old seal in an emergency, **carefully** wash all metallic parts in fresh cleaning solvent and allow to dry thoroughly.

Handle the seal parts with extreme care to prevent damage. Be careful not to contaminate precision finished faces; even fingerprints on the faces can shorten seal life. If necessary, clean the faces with a non-oil based solvent and a clean lint free tissue. Wipe **lightly** in a concentric pattern to avoid scratching the faces.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage. Clean and polish the seal spacer sleeve, or replace it if

there are nicks or cuts on either end. If any components are worn, replace the complete seal; **never mix old and new seal parts.**

If a replacement seal is being used, remove it from the container and inspect the precision finished faces to ensure that they are free of any foreign matter.

To ease installation of the seal, lubricate the packing rings and seal housing bore with water or a very **small** amount of oil, and apply a drop of light lubricating oil on the finished faces. Assemble the seal as follows, (see Figure 4).

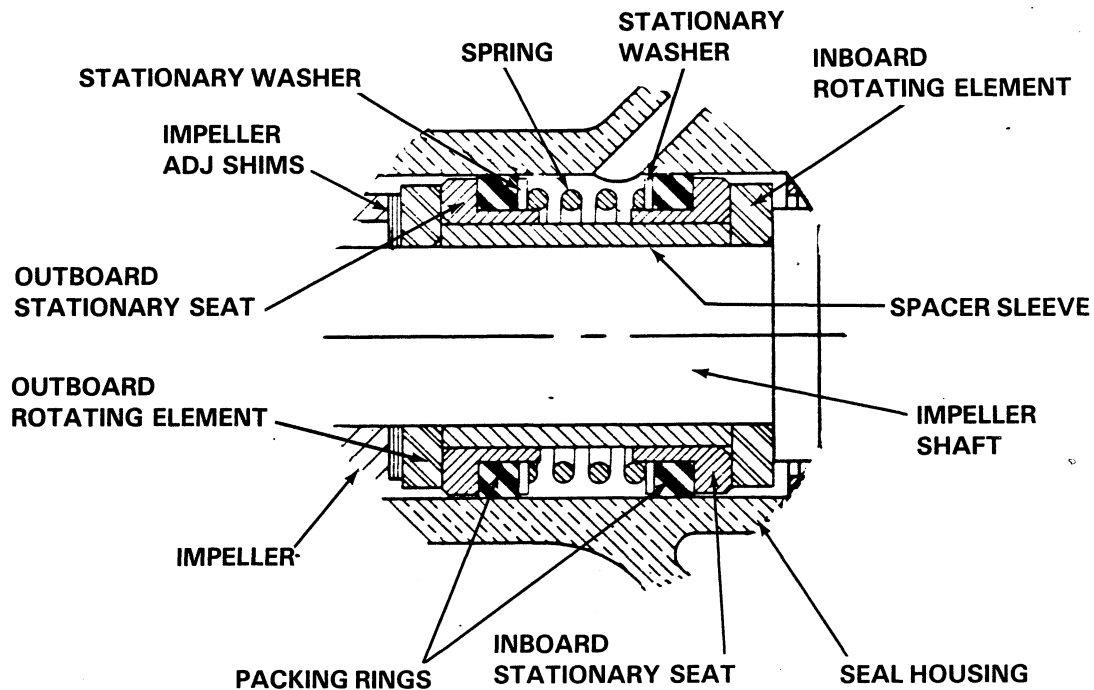


Figure 4. GS01250 Seal Assembly.

CAUTION

This seal is not designed for operation at temperatures above 110°F. Do not use at higher operating temperatures.

Remove the jacking screws from the seal housing.

Slide the inboard rotating element into the seal housing with the chamfered side toward the lock spring.

Subassemble the inboard stationary seat, packing ring and stationary washer. Press this subassembly into the lubricated seal housing. A push tube cut from a length of plastic pipe would aid this installation. The O.D. of the pipe should be approximately the same diameter as the O.D. of the seal spring.

Position the spacer sleeve in the I.D. of the inboard stationary element and install the seal spring.

Subassemble the outboard stationary seat, packing ring and stationary washer. Press this subassembly into the lubricated seal housing.

Install the outboard rotating element with the chamfered side toward the inside of the seal housing. Carefully compress the seal assembly and install the outer lock spring.

Position the seal housing gasket on the seal housing, making sure the slotted hole in the gasket aligns with the grease passage in the housing. Slide the assembled seal housing, seal and gasket onto the shaft. **Be careful** not to damage the rotating elements on the shaft threads.

Align the grease passages in the seal housing and intermediate, and tighten the hardware (18 and 19) evenly (to prevent binding) until the seal housing is fully seated in the intermediate.

Lubricate the seal assembly as indicated in LUBRICATION after the impeller is installed.

Impeller And Wear Ring Installation

(Figure 2)

If the wear ring (23) was removed, remove the jacking screws from the wear ring, align the mounting holes, and secure it to the pump casing with the hardware (32 and 33).

Inspect the impeller and replace it if cracked or badly worn.

Slide the same number of impeller adjusting shims (5) as previously removed onto the shaft. Install the impeller key (30) and press the impeller completely onto the shaft.

For maximum pump efficiency, the impeller should be centered within the volute scroll of the pump casing. Center the impeller by adding or removing adjusting shims.

To verify the impeller positioning, measure the pump casing and impeller as shown in Figure 5. Use these measurements to calculate the required impeller location (dimension E). Add or remove impeller adjusting shims until dimension E is obtained.

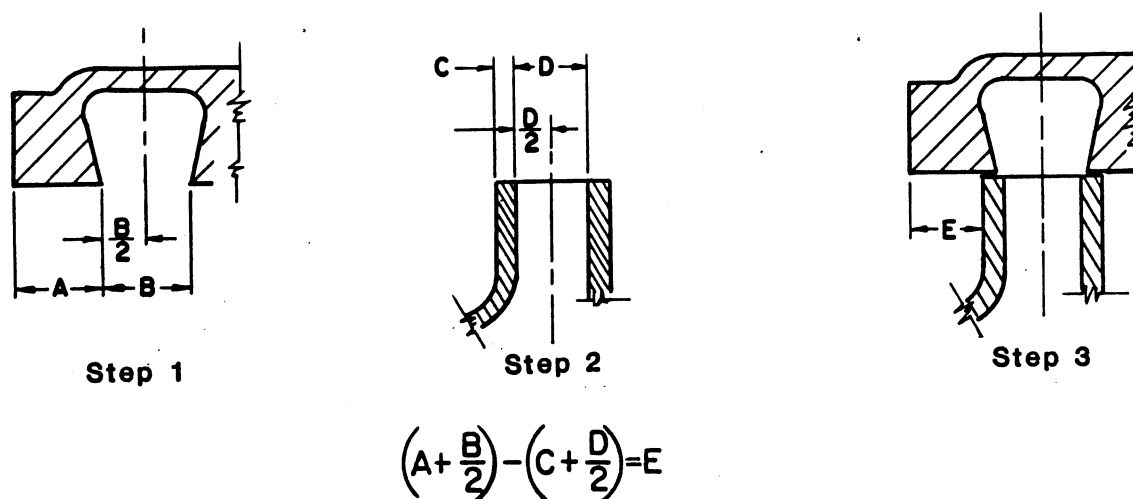


Figure 5. Centering Impeller Within Volute Scroll

NOTE

After the impeller has been properly positioned, check for free rotation. Correct any scraping binding before further reassembly.

Replace the cap nut O-ring (28), and screw the cap nut (25) onto the shaft until tight. Secure the cap nut with the fillister head screw (29).

Cover Plate Installation**(Figure 2)**

Clean any scale or debris that might prevent a good seal from the cover plate shoulder and pump casing.

NOTE

To ease future disassembly, apply a film of grease or 'Never-Seez' on the back cover shoulder, or any surface that contacts the pump casing. This action will reduce rust and scale build-up.

Replace the cover plate gasket (22), and secure the cover plate (26) to the pump casing with the nuts (35). Make sure the jacking screws (27) do not interfere with the cover plate seating.

Final Pump Reassembly

(Figure 1)

Be sure the pump assembly is secured to the base and engine.

If removed, secure the discharge check valve to the pump casing discharge port. Reconnect any instrumentation lines or fittings removed from the check valve.

Install the suction and discharge lines and open all valves in the lines. Make certain that all piping connections are tight, properly supported, and secure.

Be sure the pump end and engine have been properly lubricated; see LUBRICATION.

Refer to **OPERATION**, Section C, and start the pump.

LUBRICATION

Seal Assembly

(Figure 2)

Fill the grease cup through the grease fitting with No. 2 lithium base grease until it escapes from the relief hole. Turn the grease cup arm counterclockwise until it is at the top of the stem; this will release the spring to apply grease to the seal (see Figure 6).

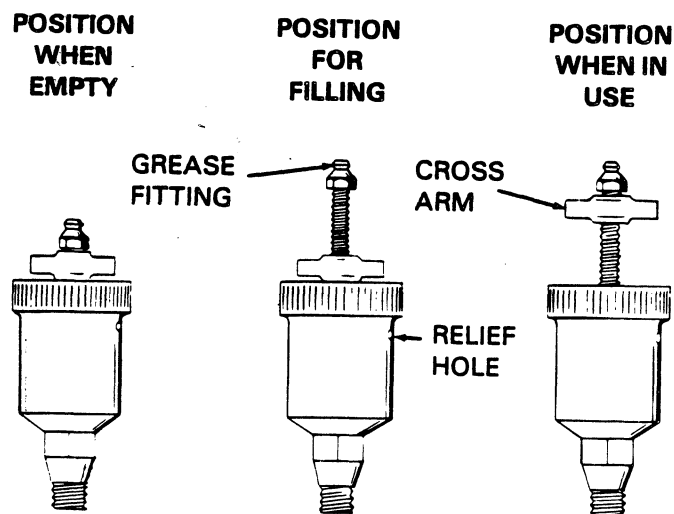


Figure 6. Automatic Lubricating Grease Cup

Bearings

The intermediate was fully lubricated when shipped from the factory. Under normal conditions, add three shots of No. 0 lithium base grease from a grease gun through the grease fitting (7) after each 250 hours of operation or once each month, whichever comes first. **Do not** over-lubricate. Over-lubrication can cause the bearings to over-heat, resulting in premature bearing failure.

CAUTION

If grease is forced out around the shaft as new grease is added, the bearing cavity is full and should be disassembled and cleaned immediately.

There are no provisions in the bearing cavity to drain or flush the lubricant. The pump and intermediate must be disassembled to completely clean and maintain this cavity.

Under normal conditions, change the grease after each 5000 hours of operation, or at 12 month intervals, whichever comes first. Change the grease more frequently if the pump is operated continuously or installed in an environment where variable hot and cold temperatures are common.

When lubricating a dry (overhauled) intermediate, fill the cavity through the lubrication fitting with approximately one-quarter of a pound of grease (approximately one-third full).

For cold weather operation, consult the factory or a lubricant supplier for the recommended grade of lubricant.

Engine

Consult the literature supplied with the engine, or contact your local Ford representative.

**THE GORMAN-RUPP COMPANY AND
GORMAN-RUPP OF CANADA LIMITED
12 MONTH LIMITED WARRANTY**

EXTENT AND DURATION OF WARRANTY

Coverage: The Gorman-Rupp Company or Gorman-Rupp of Canada Limited (herein individually referred to as "GR") each individually warrant that its products and parts shall be free from defects in material and workmanship for twelve (12) months from the date of purchase by the original end user.

Exceptions: This Limited Warranty shall not apply to the following products and parts: engines, motors, trade accessories and other products, components or materials not manufactured by GR. With respect to submersible pumps, the pump and motor are an integral unit and are therefore warranted as a unit. However, with respect to the electrical components in submersible pumps, this warranty is valid **only** when electrical controls for the pump have been specified and/or provided by GR. Wear and tear on any product resulting from normal use is not covered by this Limited Warranty.

LIMITATIONS

GR'S SOLE AND EXCLUSIVE WARRANTY WITH RESPECT TO ITS PRODUCTS AND PARTS IS THIS LIMITED WARRANTY. THIS LIMITED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS AND/OR IMPLIED WARRANTIES, INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE.

EXCLUSIVE REMEDY AND DAMAGES

The sole and exclusive remedy for breach of this Limited Warranty by GR, and the entire extent of its liability for such breach or for damages arising and/or resulting from the use of the products and parts covered by this Limited Warranty shall be as follows:

1. **Repair or replacement:** If inspection shows that any GR product or part covered under this Limited Warranty is defective in materials or workmanship, GR shall repair or replace the defective product or part at its option, without charge. You must have properly installed, maintained and used the product or part claimed to be defective in accordance with the maintenance schedule and/or manual which comes with the product. *No allowance will be made for labor, transportation or other charges incurred by you in connection with such repair or replacement.*
2. **To obtain the above remedy:**
 - a) Immediately notify GR at the address below of the claimed defect in materials or workmanship and provide the serial number or date code of the product and/or part and provide a copy of the invoice or bill of sale referencing the product and/or part by no later than the expiration date of the Limited Warranty period.
 - b) GR will advise whether inspection of the product and/or part will be necessary and whether and how repair or replacement will be effected. If inspection by GR is necessary, the product or part must be sent freight prepaid to GR at the address stated below. Return shipment of the repaired product or part will be F.O.B. the address stated below.
3. **Damages:** GR's liability for damages for breach of this Limited Warranty shall not exceed the amount of the purchase price of the product or part in respect to which damages are claimed. **IN NO EVENT SHALL GR BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES FOR BREACH OF THIS LIMITED WARRANTY OTHER THAN AS STATED HEREIN.**

Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above may not apply to you. This Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province.

THE GORMAN-RUPP COMPANY
P.O. BOX 1217
MANSFIELD, OH 44901-1217
Phone: (419) 755-1011

GORMAN-RUPP OF CANADA LIMITED
70 Burwell Road
St. Thomas, Ontario N5P 3R7
Phone: (519) 631-2870