

# INSTALLATION, OPERATION, AND MAINTENANCE MANUAL

WITH PARTS LIST



## 10 SERIES PUMPS

MODEL
16D-F140

**THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO**

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA      Printed in U.S.A.

©Copyright by the Gorman-Rupp Company



# TABLE OF CONTENTS

INTRODUCTION .....	PAGE I – 1
--------------------	------------

WARNINGS – SECTION A .....	PAGE A – 1
----------------------------	------------

INSTALLATION – SECTION B .....	PAGE B – 1
--------------------------------	------------

Pump Dimensions .....	PAGE B – 1
PREINSTALLATION INSPECTION .....	PAGE B – 2
Battery Specifications And Installation .....	PAGE B – 2
POSITIONING PUMP .....	PAGE B – 2
Lifting .....	PAGE B – 2
Mounting .....	PAGE B – 2
Clearance .....	PAGE B – 3
SUCTION AND DISCHARGE PIPING .....	PAGE B – 3
Materials .....	PAGE B – 3
Line Configuration .....	PAGE B – 3
Connections to Pump .....	PAGE B – 3
Gauges .....	PAGE B – 3
SUCTION LINES .....	PAGE B – 3
Fittings .....	PAGE B – 3
Strainers .....	PAGE B – 3
Sealing .....	PAGE B – 4
Suction Lines In Sumps .....	PAGE B – 4
Suction Line Positioning .....	PAGE B – 4
DISCHARGE LINES .....	PAGE B – 5
Siphoning .....	PAGE B – 5
Valves .....	PAGE B – 5
Bypass Lines .....	PAGE B – 5

OPERATION – SECTION C .....	PAGE C – 1
-----------------------------	------------

PRIMING .....	PAGE C – 1
STARTING .....	PAGE C – 1
OPERATION .....	PAGE C – 1
Lines With a Bypass .....	PAGE C – 1
Lines Without a Bypass .....	PAGE C – 2
Leakage .....	PAGE C – 2
Liquid Temperature And Overheating .....	PAGE C – 2
Strainer Check .....	PAGE C – 2
Pump Vacuum Check .....	PAGE C – 2
STOPPING .....	PAGE C – 2
Cold Weather Preservation .....	PAGE C – 3

TROUBLESHOOTING – SECTION D .....	PAGE D – 1
-----------------------------------	------------

PUMP MAINTENANCE AND REPAIR – SECTION E .....	PAGE E – 1
---	------------

PERFORMANCE CURVE .....	PAGE E – 1
-------------------------	------------

# TABLE OF CONTENTS (continued)

## PARTS LISTS

Pump Model 16D-F140 .....	PAGE E - 3
Pump End Assy 16D2-(F140) .....	PAGE E - 5
Drive Assembly 44162-074 .....	PAGE E - 7

## PUMP AND SEAL DISASSEMBLY AND REASSEMBLY .....

Back Cover Removal .....	PAGE E - 8
Suction Check Valve Removal .....	PAGE E - 8
Pump Casing Removal .....	PAGE E - 8
Impeller Removal .....	PAGE E - 9
Seal Removal and Disassembly .....	PAGE E - 9
Separating Intermediate And Drive Assembly From Engine .....	PAGE E - 9
Shaft and Bearing Removal and Disassembly .....	PAGE E - 10
Shaft and Bearing Reassembly and Installation .....	PAGE E - 11
Securing Intermediate And Drive Assembly To Engine .....	PAGE E - 11
Seal Reassembly and Installation .....	PAGE E - 12
Impeller Installation And Adjustment .....	PAGE E - 14
Pump Casing Installation .....	PAGE E - 14
Suction Check Valve Installation .....	PAGE E - 14
Back Cover Installation .....	PAGE E - 15
Final Pump Assembly .....	PAGE E - 15

## LUBRICATION .....

Seal Assembly .....	PAGE E - 15
Bearings .....	PAGE E - 16
Engine .....	PAGE E - 16

## INTRODUCTION

This Installation, Operation, and Maintenance manual is designed to help you achieve the best performance and longest life from your Gorman-Rupp pump.

This pump is a 10 Series, semi-open impeller, self-priming centrifugal model with a suction check

valve. The pump is powered by a Ford liquid cooled gasoline engine, model LSGP-423 (F140). The pump is designed for handling liquids containing specified entrained solids. The basic material of construction for wetted parts is aluminum, with cast iron impeller and steel wearing parts.

If there are any questions regarding the pump or its application which are not covered in this manual or in other literature accompanying this unit, please contact your Gorman-Rupp distributor, or write:

**The Gorman-Rupp Company**  
P.O. Box 1217  
Mansfield, Ohio 44901-1217

or

**Gorman-Rupp of Canada Limited**  
70 Burwell Road  
St. Thomas, Ontario N5P 3R7

For information or technical assistance on the engine, contact the engine manufacturer's local dealer or representative.


The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:

### NOTE

*Instructions to aid in installation, operation, and maintenance or which clarify a procedure.*



INSTRUCTIONS WHICH MUST BE FOLLOWED TO AVOID CAUSING DAMAGE TO THE PRODUCT OR OTHER EQUIPMENT INCIDENTAL TO THE INSTALLATION. THESE INSTRUCTIONS DESCRIBE THE REQUIREMENTS AND THE POSSIBLE DAMAGE WHICH COULD RESULT FROM FAILURE TO FOLLOW THE PROCEDURES.



THESE INSTRUCTIONS MUST BE FOLLOWED TO AVOID CAUSING INJURY OR DEATH TO PERSONNEL, AND DESCRIBE THE PROCEDURE REQUIRED AND THE INJURY WHICH COULD RESULT FROM FAILURE TO FOLLOW THE PROCEDURE.



## WARNINGS – SECTION A

THESE WARNINGS APPLY TO 10 SERIES ENGINE DRIVEN PUMPS. REFER TO THE MANUAL ACCOMPANYING THE ENGINE BEFORE ATTEMPTING TO BEGIN OPERATION.



BEFORE ATTEMPTING TO OPEN OR SERVICE THE PUMP:

1. FAMILIARIZE YOURSELF WITH THIS MANUAL.
2. SWITCH OFF THE ENGINE IGNITION AND REMOVE THE KEY TO ENSURE THAT THE PUMP WILL REMAIN INOPERATIVE.
3. ALLOW THE PUMP TO COOL IF OVERHEATED.
4. CHECK THE TEMPERATURE BEFORE OPENING ANY COVERS, PLATES, OR PLUGS.
5. CLOSE THE SUCTION AND DISCHARGE VALVES.
6. VENT THE PUMP SLOWLY AND CAUTIOUSLY.
7. DRAIN THE PUMP.



THIS PUMP IS DESIGNED TO HANDLE LIQUIDS CONTAINING SPECIFIED ENTRAINED SOLIDS. DO NOT ATTEMPT TO PUMP VOLATILE, CORROSIVE, OR FLAMMABLE MATERIALS, OR ANY LIQUIDS WHICH MAY DAMAGE THE PUMP OR ENDANGER PERSONNEL AS A RESULT OF PUMP FAILURE.



USE LIFTING AND MOVING EQUIPMENT IN GOOD REPAIR AND WITH ADEQUATE CAPACITY TO PREVENT INJURIES TO PERSONNEL OR DAMAGE TO EQUIPMENT. THE BAIL IS INTENDED FOR USE IN LIFTING THE PUMP AS-

SEMBLY ONLY. SUCTION AND DISCHARGE HOSES AND PIPING MUST BE REMOVED FROM THE PUMP BEFORE LIFTING.




AFTER THE PUMP HAS BEEN POSITIONED, MAKE CERTAIN THAT THE PUMP AND ALL PIPING OR HOSE CONNECTIONS ARE TIGHT, PROPERLY SUPPORTED AND SECURE BEFORE OPERATION.



DO NOT OPERATE THE PUMP AGAINST A CLOSED DISCHARGE VALVE FOR LONG PERIODS OF TIME. IF OPERATED AGAINST A CLOSED DISCHARGE VALVE, PUMP COMPONENTS WILL DETERIORATE, AND THE LIQUID COULD COME TO A BOIL, BUILD PRESSURE, AND CAUSE THE PUMP CASING TO RUPTURE OR EXPLODE.




DO NOT REMOVE PLATES, COVERS, GAUGES, PIPE PLUGS, OR FITTINGS FROM AN OVERHEATED PUMP. VAPOR PRESSURE WITHIN THE PUMP CAN CAUSE PARTS BEING DISENGAGED TO BE EJECTED WITH GREAT FORCE. ALLOW THE PUMP TO COOL BEFORE SERVICING.




DO NOT OPERATE AN INTERNAL COMBUSTION ENGINE IN AN EXPLOSIVE ATMOSPHERE. WHEN OPERATING INTERNAL COMBUSTION ENGINES IN AN ENCLOSED AREA, MAKE CERTAIN THAT EXHAUST FUMES ARE PIPED TO THE OUTSIDE. THESE FUMES CONTAIN CAR-

**BON MONOXIDE, A DEADLY GAS THAT IS COLORLESS, TASTELESS, AND ODORLESS.**



**FUEL USED BY INTERNAL COMBUSTION ENGINES PRESENTS AN EXTREME EXPLOSION AND FIRE HAZARD. MAKE CERTAIN THAT ALL FUEL LINES ARE SECURELY CONNECTED AND FREE OF LEAKS. NEVER REFUEL A HOT OR RUNNING ENGINE. AVOID OVERFILLING THE**

**FUEL TANK. ALWAYS USE THE CORRECT TYPE OF FUEL.**



**NEVER TAMPER WITH THE GOVERNOR TO GAIN MORE POWER. THE GOVERNOR ESTABLISHES SAFE OPERATING LIMITS THAT SHOULD NOT BE EXCEEDED. THE MAXIMUM CONTINUOUS OPERATING SPEED FOR THIS PUMP IS 2800 RPM.**



## INSTALLATION - SECTION B

Review all **WARNINGS** in Section A.

Since pump installations are seldom identical, this section offers only general recommendations and practices required to inspect, position, and arrange the pump and piping.

Most of the information pertains to a standard **static lift application** where the pump is positioned **above the free level** of liquid to be pumped.

If installed in a **flooded suction application** where the liquid is supplied to the pump under pressure, some of the information such as mounting, line configuration, and priming must be tailored to the specific application. Since the pressure supplied to the


pump is critical to performance and safety, be sure to limit the incoming pressure to **50%** of the maximum permissible operating pressure as shown on the pump performance curve. (See Section E, Page 1.) If the pump is fitted with a Gorman-Rupp double grease lubricated seal, the maximum incoming pressure must be reduced to 10 p.s.i.

For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

### Pump Dimensions

See Figure 1 for the approximate physical dimensions of this pump and engine.

### OUTLINE DRAWING

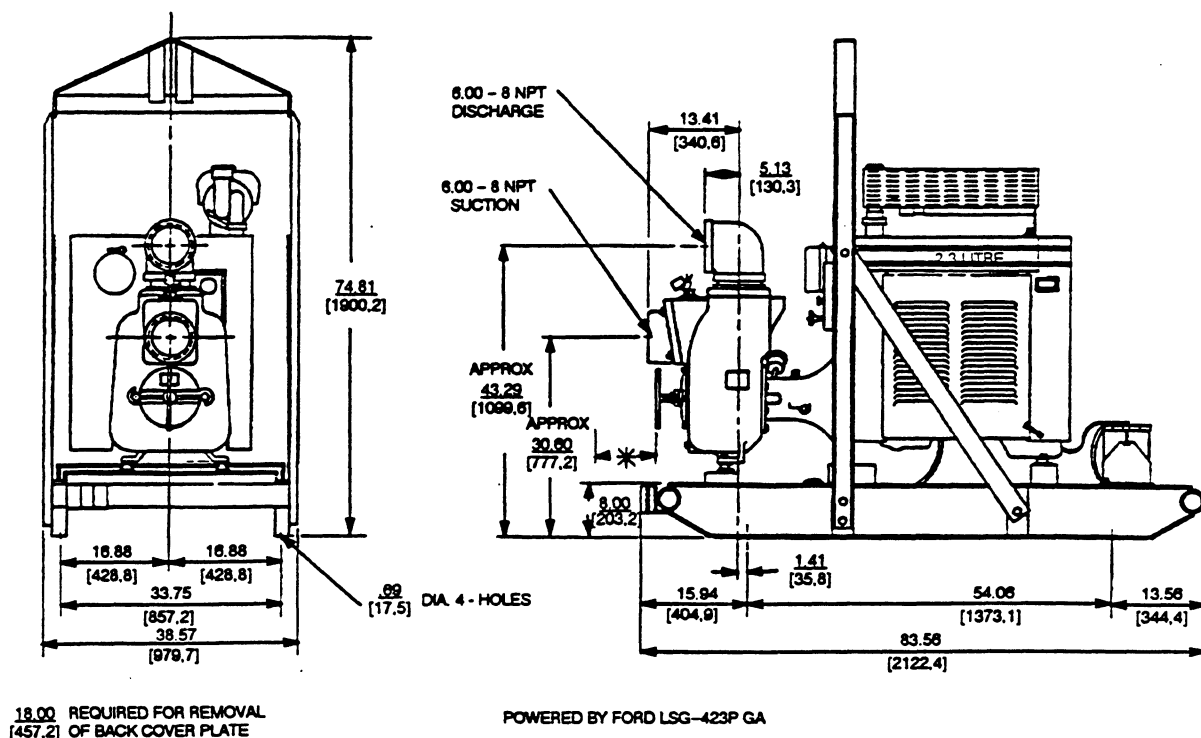

DIMENSIONS: INCHES  
[MILLIMETERS]

Figure 1. Pump Model 16D-F140

## PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before shipment from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- Inspect the pump for cracks, dents, damaged threads, and other obvious damage.
- Check for and tighten loose attaching hardware. Since gaskets tend to shrink after drying, check for loose hardware at mating surfaces.
- Carefully read all warnings and cautions contained in this manual or affixed to the pump, and perform all duties indicated.
- Check levels and lubricate as necessary. Refer to LUBRICATION in the MAINTENANCE AND REPAIR section of this manual and perform duties as instructed.
- If the pump and engine have been stored for more than 12 months, some of the components or lubricants may have exceeded their maximum shelf life. These must be inspected or replaced to ensure maximum pump service.

If the maximum shelf life has been exceeded, or if anything appears to be abnormal, contact your Gorman-Rupp distributor or the factory to determine the repair or updating policy. Do not put the pump into service until appropriate action has been taken.

### Battery Specifications And Installation

Unless otherwise specified on the pump order, the engine battery was not included with the unit. Refer to the following specifications when selecting a battery.


Voltage	Cold Crank Amps @ 0° F	Reserve Capacity @ 80° F (Minutes)	Amp/ Hr. Rating	Approx. Overall Dims. (Inches)
12 Volts	350-385	76	57	10.25L x 6.75W x 8.88H

Table 1. Battery Specifications

Refer to the information accompanying the battery and/or electrolyte solution for activation and charging instructions.

Before installing the battery, clean the positive and negative cable connectors, and the battery terminals. Secure the battery by tightening the holddown brackets. The terminals and clamps may be coated with petroleum jelly to retard corrosion. Connect and tighten the positive cable first, then the negative cable.

## POSITIONING PUMP



**USE LIFTING AND MOVING EQUIPMENT IN GOOD REPAIR AND WITH ADEQUATE CAPACITY TO PREVENT INJURIES TO PERSONNEL OR DAMAGE TO EQUIPMENT. THE BAIL IS INTENDED FOR USE IN LIFTING THE PUMP ASSEMBLY ONLY. SUCTION AND DISCHARGE HOSES AND PIPING MUST BE REMOVED FROM THE PUMP BEFORE LIFTING.**

### Lifting

Use lifting equipment with a capacity of at least **7,640 pounds (3465,5 kg)**. This pump weighs approximately **1,528 pounds (693,1 kg)**, not including the weight of accessories and customer installed options and accessories. Customer installed equipment such as suction and discharge piping **must** be removed before attempting to lift.



**THE PUMP ASSEMBLY CAN BE SERIOUSLY DAMAGED IF THE CABLES OR CHAINS USED TO LIFT AND MOVE THE UNIT ARE IMPROPERLY WRAPPED AROUND THE PUMP.**

### Mounting

Locate the pump in an accessible place as close as practical to the liquid being pumped. Level mounting is essential for proper operation.

The pump may have to be supported or shimmed to provide for level operation or to eliminate vibration.

To ensure sufficient lubrication and fuel supply to the engine, **do not** position the pump and engine more than 15° off horizontal for continuous operation. The pump and engine may be positioned up to 30° off horizontal for **intermittent operation only**; however, the engine manufacturer should be consulted for continuous operation at angles greater than 15°.

### Clearance

When positioning the pump, allow a minimum clearance of **18 inches (457 mm)** in front of the back cover to permit removal of the cover and easy access to the pump interior.

## SUCTION AND DISCHARGE PIPING

Pump performance is adversely effected by increased suction lift, discharge elevation, and friction losses. See the performance curve and operating range shown on Page E-1 to be sure your overall application allows pump to operate within the safe operation range.

### Materials

Either pipe or hose may be used for suction and discharge lines; however, the materials must be compatible with the liquid being pumped. If hose is used in suction lines, it must be the rigid-wall, reinforced type to prevent collapse under suction. Using piping couplings in suction lines is not recommended.

### Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

### Connections to Pump

Before tightening a connecting flange, align it exactly with the pump port. Never pull a pipe line into place by tightening the flange bolts and/or couplings.

Lines near the pump must be independently supported to avoid strain on the pump which could cause excessive vibration, decreased bearing life, and increased shaft and seal wear. If hose-type lines are used, they should have adequate support to secure them when filled with liquid and under pressure.

### Gauges

Most pumps are drilled and tapped for installing discharge pressure and vacuum suction gauges. If these gauges are desired for pumps that are not tapped, drill and tap the suction and discharge lines not less than 18 inches (457,2 mm) from the suction and discharge ports and install the lines. Installation closer to the pump may result in erratic readings.

## SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

### Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem horizontal to avoid air pockets.

### Strainers

If a strainer is furnished with the pump, be certain to use it; any spherical solids which pass through a strainer furnished with the pump will also pass through the pump itself.

If a strainer is not furnished with the pump, but is installed by the pump user, make certain that the total area of the openings in the strainer is at least three or four times the cross section of the suction line, and

that the openings will not permit passage of solids larger than the solids handling capability of the pump.

This pump is designed to handle up to 2 5/8 inch (66,7 mm) diameter spherical solids.

### Sealing

Since even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift, all connections in the suction line should be sealed with pipe dope to ensure an airtight seal. Follow the sealant manufacturer's recommendations when selecting and applying the pipe dope. The pipe dope should be compatible with the liquid being pumped.

### Suction Lines In Sumps

If a single suction line is installed in a sump, it should be positioned away from the wall of the sump at a distance equal to 1 1/2 times the diameter of the suction line.

If there is a liquid flow from an open pipe into the sump, the flow should be kept away from the suction inlet because the inflow will carry air down into the sump, and air entering the suction line will reduce pump efficiency.

If it is necessary to position inflow close to the suction inlet, install a baffle between the inflow and the suction inlet at a distance 1 1/2 times the diameter of the suction pipe. The baffle will allow entrained air to escape from the liquid before it is drawn into the suction inlet.

If two suction lines are installed in a single sump, the flow paths may interact, reducing the efficiency of one or both pumps. To avoid this, position the suction inlets so that they are separated by a distance equal to at least 3 times the diameter of the suction pipe.


### Suction Line Positioning

The depth of submergence of the suction line is critical to efficient pump operation. Figure 2 shows recommended minimum submergence vs. velocity.

#### NOTE

*The pipe submergence required may be reduced by installing a standard pipe increaser fitting at the end of the suction line. The larger opening size will reduce the inlet velocity. Calculate the required submergence using the following formula based on the increased opening size (area or diameter).*

---

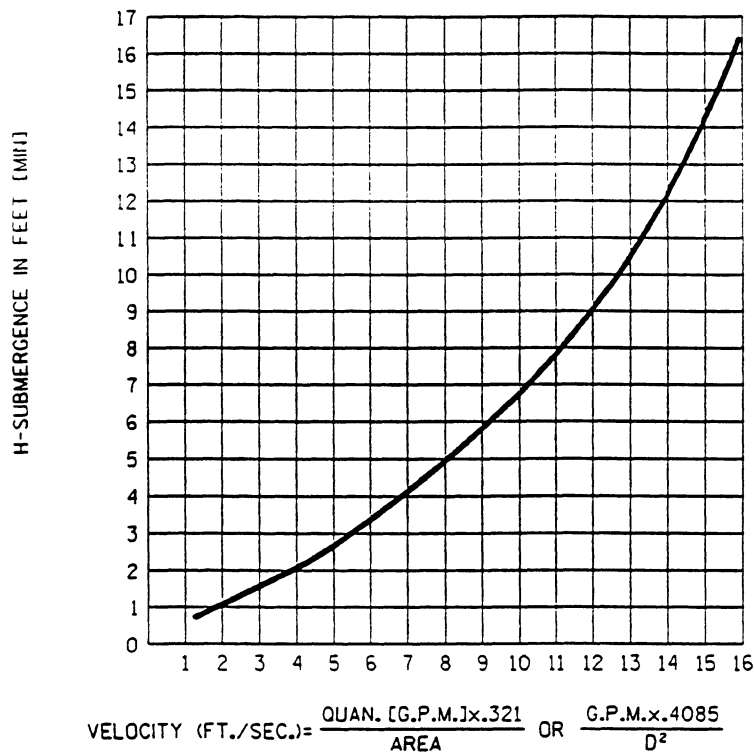

**Figure 2. Recommended Minimum Suction Line Submergence vs. Velocity**

## DISCHARGE LINES



### Siphoning

Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action causing damage to the pump could result.

IF THE APPLICATION INVOLVES A HIGH DISCHARGE HEAD, GRADUALLY CLOSE THE DISCHARGE THROTTLING VALVE BEFORE STOPPING THE PUMP.

### Valves

If a throttling valve is desired in the discharge line, use a valve as large as the largest pipe to minimize friction losses. Never install a throttling valve in a suction line.

With high discharge heads, it is recommended that a throttling valve and a system check valve be installed in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.

### Bypass Lines

If a system check valve is used due to high discharge head, it may be necessary to vent trapped air from the top of the pump during the priming process. This may be accomplished by installing a bypass line from the top of the pump, back to the source of liquid. The end of the bypass line must be submerged. The line must be large enough to prevent clogging, but not so large as to affect pump discharge capacity.



## OPERATION – SECTION C

Review all warnings in Section A.

Follow the instructions on all tags, labels and decals attached to the pump.



**THIS PUMP IS DESIGNED TO HANDLE MOST NON-VOLATILE, NON-FLAMMABLE LIQUIDS CONTAINING SPECIFIED ENTRAINED SOLIDS. DO NOT ATTEMPT TO PUMP VOLATILE, CORROSIVE, OR FLAMMABLE LIQUIDS WHICH MAY DAMAGE THE PUMP OR ENDANGER PERSONNEL AS A RESULT OF PUMP FAILURE.**




**NEVER TAMPER WITH THE GOVERNOR TO GAIN MORE POWER. THE GOVERNOR ESTABLISHES SAFE OPERATING LIMITS THAT SHOULD NOT BE EXCEEDED. THE MAXIMUM CONTINUOUS OPERATING SPEED FOR THIS PUMP IS 2800 RPM.**

### PRIMING

Install the pump and piping as described in **INSTALLATION**. Make sure that the piping connections are tight, and that the pump is securely mounted. Check that the pump is properly lubricated (see **LUBRICATION** in **MAINTENANCE AND REPAIR**).

This pump is self-priming, but the pump should never be operated unless there is liquid in the pump casing.



**NEVER OPERATE THIS PUMP UNLESS THERE IS LIQUID IN THE PUMP CASING. THE PUMP WILL NOT PRIME WHEN DRY. EXTENDED OPERATION**

**OF A DRY PUMP WILL DESTROY THE SEAL ASSEMBLY.**

Add liquid to the pump casing when:

1. The pump is being put into service for the first time.
2. The pump has not been used for a considerable length of time.
3. The liquid in the pump casing has evaporated.

Once the pump casing has been filled, the pump will prime and reprime as necessary.



**AFTER FILLING THE PUMP CASING, REINSTALL AND TIGHTEN THE FILL PLUG. DO NOT ATTEMPT TO OPERATE THE PUMP UNLESS ALL CONNECTING PIPING IS SECURELY INSTALLED. OTHERWISE, LIQUID IN THE PUMP FORCED OUT UNDER PRESSURE COULD CAUSE INJURY TO PERSONNEL.**

To fill the pump, remove the pump casing fill cover or fill plug in the top of the casing, and add clean liquid until the casing is filled. Replace the fill cover or fill plug before operating the pump.

### STARTING

Consult the operations manual furnished with the engine.

### OPERATION



**PUMP SPEED AND OPERATING CONDITION POINTS MUST BE WITHIN THE CONTINUOUS PERFORMANCE RANGE SHOWN ON THE CURVE. (SEE SECTION E, PAGE 1.)**

#### Lines With a Bypass

Close the discharge throttling valve (if so equipped) so that the pump will not have to prime against the

weight of the liquid in the discharge line. Air from the suction line will be discharged through the bypass line back to the wet well during the priming cycle. When the pump is fully primed and liquid is flowing steadily from the bypass line, open the discharge throttling valve. Liquid will then continue to circulate through the bypass line while the pump is in operation.

### Lines Without a Bypass

Open all valves in the discharge line and start the engine. Priming is indicated by a positive reading on the discharge pressure gauge or by a quieter operation. The pump may not prime immediately because the suction line must first fill with liquid. If the pump fails to prime within five minutes, stop it and check the suction line for leaks.

After the pump has been primed, partially close the discharge line throttling valve in order to fill the line slowly and guard against excessive shock pressure which could damage pipe ends, gaskets, sprinkler heads, and any other fixtures connected to the line. When the discharge line is completely filled, adjust the throttling valve to the required flow rate.

### Leakage

No leakage should be visible at pump mating surfaces, or at pump connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

### Liquid Temperature And Overheating

The **maximum** liquid temperature for this pump is 110° F (43°C). Do not apply it at a higher operating temperature.

Overheating can occur if operated with the valves in the suction or discharge lines closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump and allow it to cool before servicing it. Refill the pump casing with cool liquid.



**DO NOT REMOVE PLATES, COVERS, GAUGES, PIPE PLUGS, OR FITTINGS FROM AN OVERHEATED PUMP. VAPOR PRESSURE WITHIN THE PUMP CAN CAUSE PARTS BEING DISENGAGED TO BE EJECTED WITH GREAT FORCE. ALLOW THE PUMP TO COOL BEFORE SERVICING.**

### Strainer Check

If a suction strainer has been shipped with the pump or installed by the user, check the strainer regularly, and clean it as necessary. The strainer should also be checked if pump flow rate begins to drop. If a vacuum suction gauge has been installed, monitor and record the readings regularly to detect strainer blockage.

**Never** introduce air or steam pressure into the pump casing or piping to remove a blockage. This could result in personal injury or damage to the equipment. If backflushing is absolutely necessary, **liquid pressure** must be limited to 50% of the maximum permissible operating pressure shown on the pump performance curve. (See Section E, Page 1.) If the pump is fitted with a Gorman-Rupp double grease lubricated seal, the maximum incoming pressure must be reduced to 10 p.s.i.

### Pump Vacuum Check

With the pump inoperative, install a vacuum gauge in the system, using pipe dope on the threads. Block the suction line and start the pump. At operating speed the pump should pull a vacuum of 20 inches (508,0 mm) or more of mercury. If it does not, check for air leaks in the seal, gasket, or discharge valve.

Open the suction line, and read the vacuum gauge with the pump primed and at operation speed. Shut off the pump. The vacuum gauge reading will immediately drop proportionate to static suction lift, and should then stabilize. If the vacuum reading falls off rapidly after stabilization, an air leak exists. Before checking for the source of the leak, check the point of installation of the vacuum gauge.

## STOPPING

**Never** halt the flow of liquid suddenly. If the liquid being pumped is stopped abruptly, damaging shock



waves can be transmitted to the pump and piping system. Close all connecting valves slowly.

On engine driven pumps, reduce the throttle speed slowly and allow the engine to idle briefly before stopping.



IF THE APPLICATION INVOLVES A HIGH DISCHARGE HEAD, GRADUALLY CLOSE THE DISCHARGE THROTTLING VALVE BEFORE STOPPING THE PUMP.

After stopping the pump, remove the engine ignition key to ensure that the pump will remain inoperative.

#### Cold Weather Preservation

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts. If the pump will be idle for more than a few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump

from completely draining, insert a rod or stiff wire in the drain port, and agitate the liquid during the draining process. Clean out any remaining solids by flushing with a hose.

#### BEARING TEMPERATURE CHECK

Bearings normally run at higher than ambient temperatures because of heat generated by friction. Temperatures up to 160°F (71,1°C) are considered normal for bearings, and they can operate safely to at least 180°F (82,2°C).

Checking bearing temperatures by hand is inaccurate. Bearing temperatures can be measured accurately by placing a contact-type thermometer against the housing. Record this temperature for future reference.


A sudden increase in bearing temperatures is a warning that the bearings are at the point of failing to operate properly. Make certain that the bearing lubricant is of the proper viscosity and at the correct level (see **LUBRICATION** in Section E). Bearing overheating can also be caused by shaft misalignment and/or excessive vibration.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.



## TROUBLESHOOTING – SECTION D

Review all WARNINGS in Section A.



### BEFORE ATTEMPTING TO OPEN OR SERVICE THE PUMP:

1. FAMILIARIZE YOURSELF WITH THIS MANUAL.
2. SWITCH OFF THE ENGINE IGNITION AND REMOVE THE KEY TO ENSURE THAT THE PUMP WILL REMAIN INOPERATIVE.
3. ALLOW THE PUMP TO COOL IF OVERHEATED.
4. CHECK THE TEMPERATURE BEFORE OPENING ANY COVERS, PLATES, OR PLUGS.
5. CLOSE THE SUCTION AND DISCHARGE VALVES.
6. VENT THE PUMP SLOWLY AND CAUTIOUSLY.
7. DRAIN THE PUMP.

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP FAILS TO PRIME	Not enough liquid in casing.	Add liquid to casing. See PRIMING.
	Suction check valve contaminated or damaged.	Clean or replace check valve.
	Air leak in suction line.	Correct leak.
	Lining of suction hose collapsed.	Replace suction hose.
	Leaking or worn seal or pump gasket.	Check pump vacuum. Replace leaking or worn seal or gasket.
	Suction lift or discharge head too high.	Check piping installation and install bypass line if needed. See INSTALLATION.
	Strainer clogged.	Check strainer and clean if necessary.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Suction check valve or foot valve clogged or binding.	Clean valve
	Air leak in suction line.	Correct leak.
	Lining of suction hose collapsed.	Replace suction hose.
	Leaking or worn seal or pump gasket.	Check pump vacuum. Replace leaking or worn seal or gasket.
	Strainer clogged.	Check strainer and clean if necessary.


TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE (cont.)	<p>Suction intake not submerged at proper level or sump too small.</p> <p>Impeller or other wearing parts worn or damaged.</p> <p>Impeller clogged.</p> <p>Pump speed too slow.</p> <p>Suction lift or discharge head too high.</p>	<p>Check installation and correct submergence as needed.</p> <p>Replace worn or damaged parts. Check that impeller is properly centered and rotates freely.</p> <p>Free impeller of debris.</p> <p>Check engine output; consult engine operation manual.</p> <p>Check piping installation and install bypass line if needed. See <b>INSTALLATION</b>.</p>
PUMP REQUIRES TOO MUCH POWER	<p>Pump speed too high.</p> <p>Discharge head too low.</p> <p>Liquid solution too thick.</p>	<p>Check engine output.</p> <p>Adjust discharge valve.</p> <p>Dilute if possible.</p>
PUMP CLOGS FREQUENTLY	<p>Liquid solution too thick.</p> <p>Discharge flow too slow.</p> <p>Suction check valve or foot valve clogged or binding.</p>	<p>Dilute if possible.</p> <p>Open discharge valve fully to increase flow rate, and run power source at maximum governed speed.</p> <p>Clean valve.</p>
EXCESSIVE NOISE	<p>Cavitation in pump.</p> <p>Pumping entrained air.</p> <p>Pump or drive not securely mounted.</p> <p>Impeller clogged or damaged.</p>	<p>Reduce suction lift and/or friction losses in suction line. Record vacuum and pressure gauge readings and consult local representative or factory.</p> <p>Locate and eliminate source of air bubble.</p> <p>Secure mounting hardware.</p> <p>Clean out debris; replace damaged parts.</p>

TROUBLE	POSSIBLE CAUSE	PROBABLE REMEDY
BEARINGS RUN TOO HOT	Bearing temperature is high, but within limits.  Low or incorrect lubricant.  Suction and discharge lines not properly supported.  Drive misaligned.	Check bearing temperature regularly to monitor any increase.  Check for proper type and level of lubricant.  Check piping installation for proper support.  Align drive properly.



## PUMP MAINTENANCE AND REPAIR - SECTION E


MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.

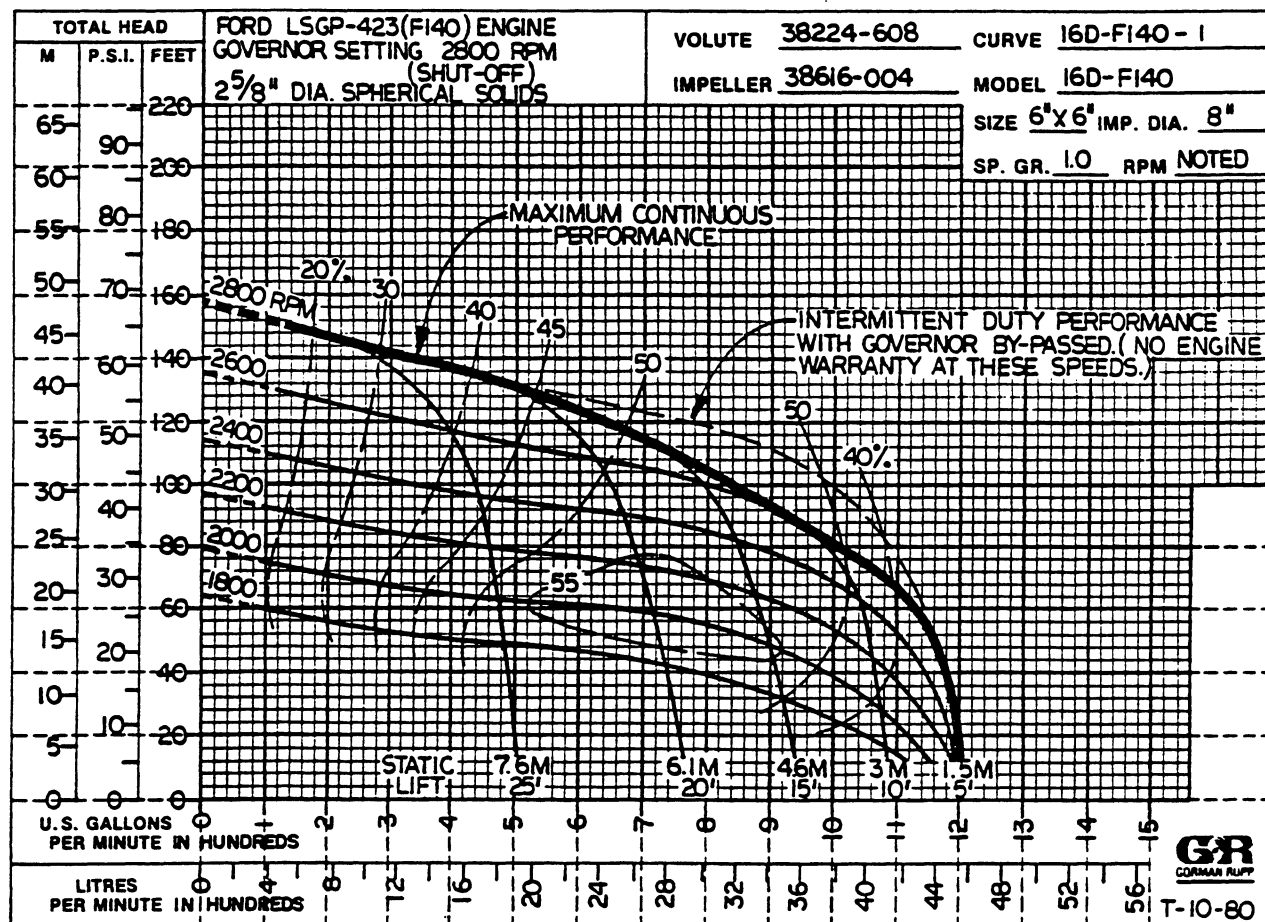

### \* STANDARD PERFORMANCE FOR PUMP MODEL 16D-F140

\* Based on 70° F (21° C) clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be difference due to such factors as viscosity, specific gravity, elevation, temperature, and impeller trim.

Contact the Gorman-Rupp Company to verify performance or part numbers.



If your pump serial number is followed by an "N", your pump is NOT a standard production model.

PUMP SPEED AND OPERATING CONDITION POINTS MUST BE WITHIN THE CONTINUOUS PERFORMANCE RANGE SHOWN ON THE CURVE.

## SECTION DRAWING

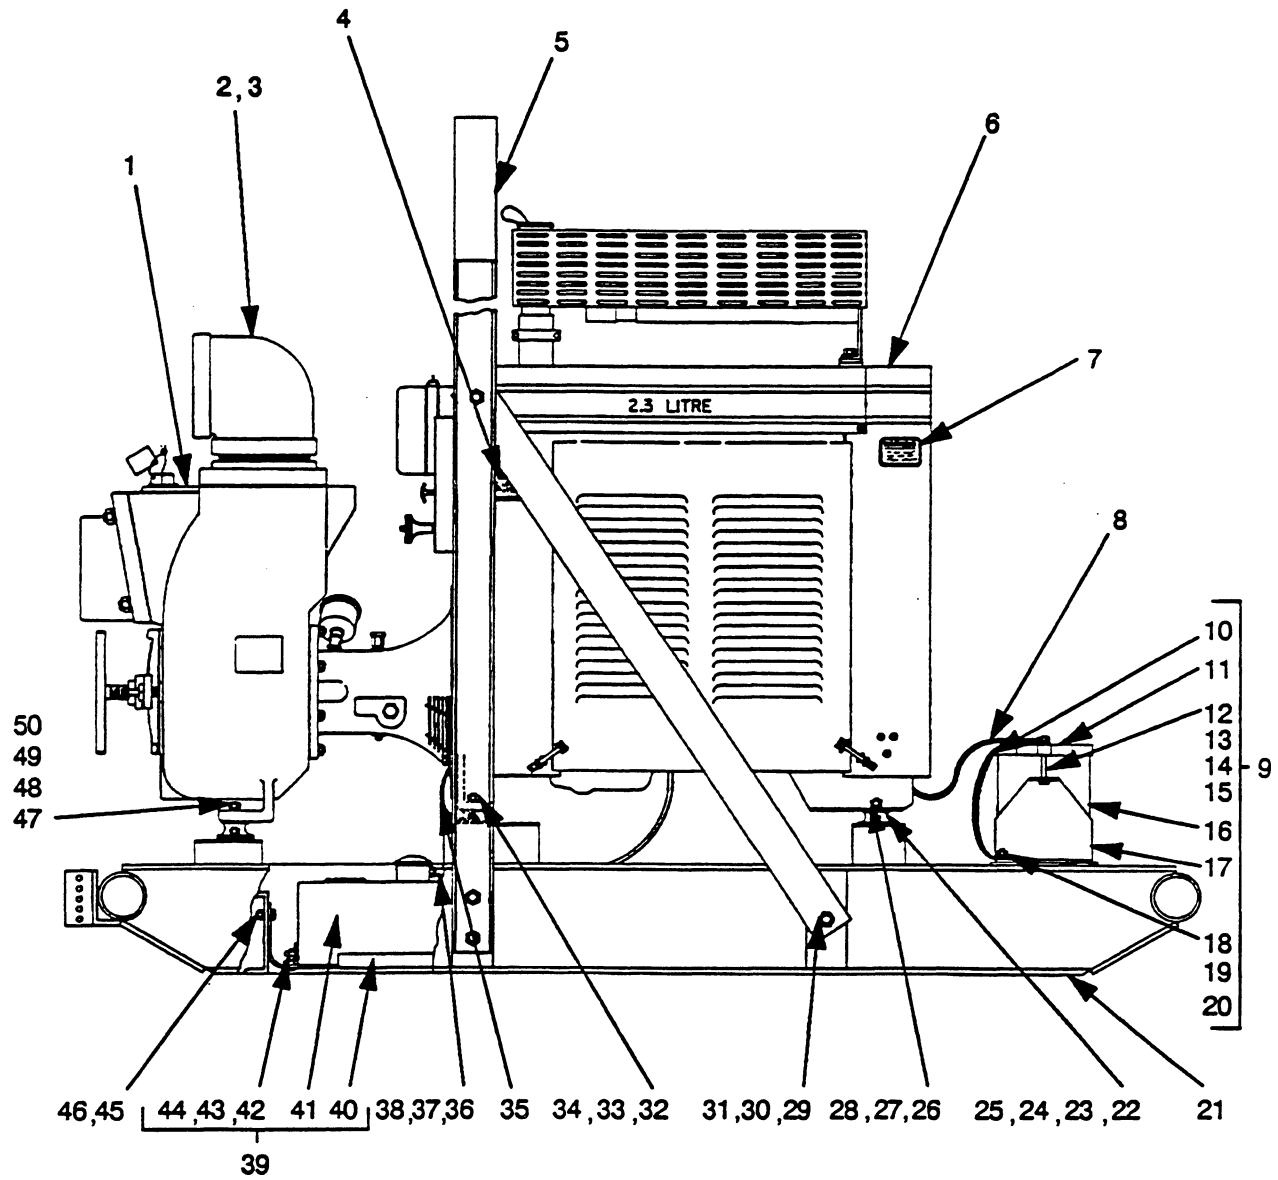


Figure 1. Pump Model 16D-F140



**PARTS LIST**  
**Pump Model 16D-F140**  
 (From S/N 940608 up)

If your pump serial number is followed by an "N", your pump is **NOT** a standard production model. Contact the Gorman-Rupp Company to verify part numbers.

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP END	16D	-----	1	28	HEX NUT	D08	15991	2
2	PIPE NIPPLE	T96	15070	1	29	HEX HD CAPSCREW	B1006	15991	8
3	PIPE ELBOW	R96	11990	1	30	LOCKWASHER	J10	15991	8
4	WARNING DECAL	2613-FE	-----	1	31	HEX NUT	D10	15991	8
5	HOISTING BAIL	13351-BA	24000	1	32	HEX HD CAPSCREW	B0812	15991	2
6	FORD ENGINE	29118-022	-----	1	33	LOCKWASHER	J08	15991	2
7	WARNING DECAL	38816-132	-----	1	34	HEX NUT	D08	15991	2
8	POS CABLE ASSY	6926-Q	24040	1	35	CABLE ASSY	5795-AS	24040	1
9	BATTERY BOX ASSY	GRP40-02	-----	1	36	MALE CONNECTOR	S1344	-----	1
10	-GROUND CABLE ASSY	5795-AC	24040	1	37	HOSE ASSY	12618-F	-----	1
11	-BATTERY FRAME	8355-B	24000	1	38	PIPE PLUG	P08	11990	1
12	-HEX HD CAPSCREW	B0612	15991	2	39	FUEL TANK & GRD ASSY	46711-041	-----	1
13	-FLAT WASHER	K06	15991	2	40	-FUEL TANK GRD	34851-178	15080	1
14	-LOCKWASHER	J06	15991	2	41	-FUEL TANK	46711-042	24150	1
15	-HEX NUT	D06	15991	2	42	-FLAT WASHER	K06	15991	6
16	-BATTERY	SEE OPTIONS		REF	43	-CARRIAGE BOLT	AB0604	15991	6
17	-BATTERY BOX	8356-B	24000	1	44	-HEX NUT W/ FLANGE	21765-314	-----	6
18	-HEX HD CAPSCREW	B0604	15991	2	45	HEX HD CAPSCREW	B0604	15991	10
19	-LOCKWASHER	J06	15991	2	46	HEX NUT W/FLANGE	21765-314	-----	10
20	-HEX NUT	D06	15991	2	47	HEX HD CAPSCREW	B0814	15991	2
21	COMBINATION BASE	41566-646	24150	1	48	LOCKWASHER	J08	15991	2
22	MOUNTING ISOLATOR	24631-601	-----	6	49	HEX NUT	D08	15991	2
23	HEX HD CAPSCREW	B0604	15991	12	50	FLAT WASHER	K08	15991	2
24	LOCKWASHER	J06	15991	12	OPTIONAL:				
25	HEX NUT	D06	15991	12	* BATTERY	S1338	-----		1
26	HEX HD CAPSCREW	B0812	15991	2	WHEEL KIT	GRP30-248F	-----		1
27	LOCKWASHER	J08	15991	2					

\* INDICATES PARTS RECOMMENDED FOR STOCK

Above Serial Numbers Do Not Apply To Pumps Made In Canada.

CANADIAN SERIAL NO. .... AND UP

## SECTION DRAWING

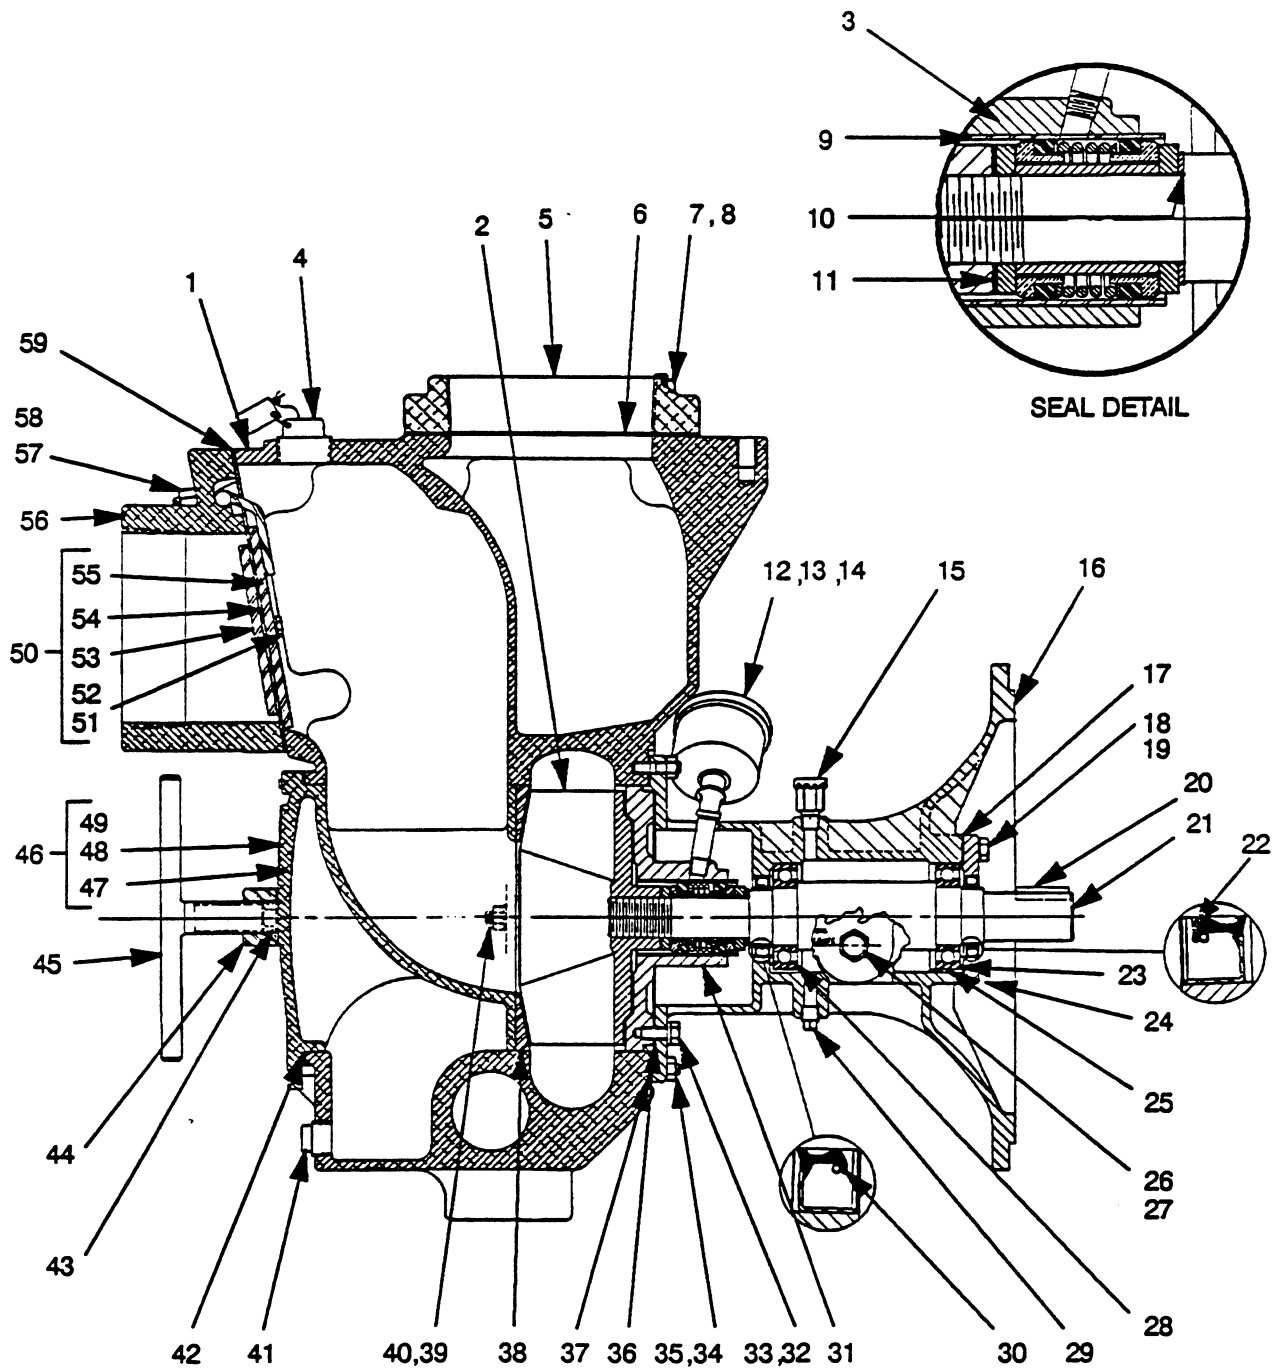


Figure 2. Pump End Assy 16D-(F140)

# **PARTS LIST** **Pump End Assy 16D-(F140)**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY	ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	PUMP CASING	38224-608	13040	1	36 *	SEAL PLATE GSKT	6568	18000	1
2 *	IMPELLER	38616-004	10010	1	37 *	CASING GSKT SET	2474-G	18000	1
3 *	SEAL ASSEMBLY	GS1250	-----	1	38 *	WEAR PLATE ASSY	46451-324	24150	1
4	FILL PLUG ASSY	48271-065	-----	1	39	HEX NUT	D06	15991	2
5	DISCHARGE FLANGE	38641-505	13040	1	40	LOCKWASHER	J06	15991	2
6 *	DISCH FLANGE GSKT	38687-010	20000	1	41	CASING DRAIN PLUG	P12	11990	1
7	STUD	C1011	15991	4	42 *	BACK COVER GSKT	38682-215	20000	1
8	HEX NUT	D10	15991	4	43	MACHINE BOLT	A1009	15991	2
9 *	SEAL LINER	2205-B	14080	REF	44	COVER PLT CLAMP	38111-309	11000	1
10	SEAL WASHER	37-H	15990	1	45	COVER CLAMP SCREW	2536	24000	1
11 *	IMPELLER SHIM SET	37-J	17090	REF	46	BACK COVER ASSY	42111-942	-----	1
12	HEAVY PIPE NIPPLE	THA0406	15070	1	47	-COVER PLATE	NOT AVAILABLE	-----	1
13	PIPE ELBOW	AG04	11990	1	48	-WARNING PLATE	2613-EV	13990	1
14	SEAL GREASE CJP	S1509	-----	1	49	-DRIVE SCREW	BM#04-03	15990	4
15	AIR VENT	S1703	-----	1	50	CHECK VALVE ASSY	46411-070	-----	1
16	INTERMEDIATE	38263-616	10010	1	51	-HEX HD CAPSCREW	B0403	17000	2
17 *	BEARING CAP GSKT	6404-G	18000	1	52	-LOCKWASHER	J04	17000	2
18	HEX HD CAPSCREW	B0604	15991	4	53 *	-VALVE WEIGHT	7263	15990	1
19	LOCKWASHER	J06	15991	4	54 *	-CHECK VALVE GSKT	38671-412	19140	1
20	SHAFT KEY	N0607	15990	1	55 *	-VALVE WEIGHT	7262	24000	1
21	IMPELLER SHAFT	38514-812	15010	1	56	SUCTION FLANGE	38645-802	13040	1
22 *	OIL SEAL	25258-575	-----	1	57	STUD	C1011	15991	4
23 *	BRG CAP SHIM SET	48261-037	-----	1	58	HEX NUT	D10	15991	4
24	BEARING CAP	38324-408	10010	1	59 *	SUCT FLANGE GSKT	38687-048	20000	1
25 *	BALL BEARING	23251-209	-----	1	NOT SHOWN:				
26	PIPE PLUG	P12	11990	1		NAME PLATE	38818-021	13990	1
27	OIL LEVEL SIGHT GAUGE	S1471	-----	1		DRIVE SCREW	BM#04-03	15990	4
28 *	BALL BEARING	23251-209	-----	1		STRAINER	7823	24000	1
29	INTERM DRAIN PLUG	P06	11990	1		SUCTION STICKER	6588-AG	-----	1
30 *	OIL SEAL	25258-575	-----	1		DISCHARGE STICKER	6588-BJ	-----	1
31	SEAL PLATE ASSY	42111-067	-----	1	OPTIONAL:				
32	HEX HD CAPSCREW	B0604	15991	4		BACK COVER FIELD	48228-001	-----	1
33	LOCKWASHER	J06	15991	4		CONVERSION KIT			
34	STUD	C0606	15991	8					
35	HEX NUT	D06	15991	8					

\* INDICATES PARTS RECOMMENDED FOR STOCK

## SECTION DRAWING

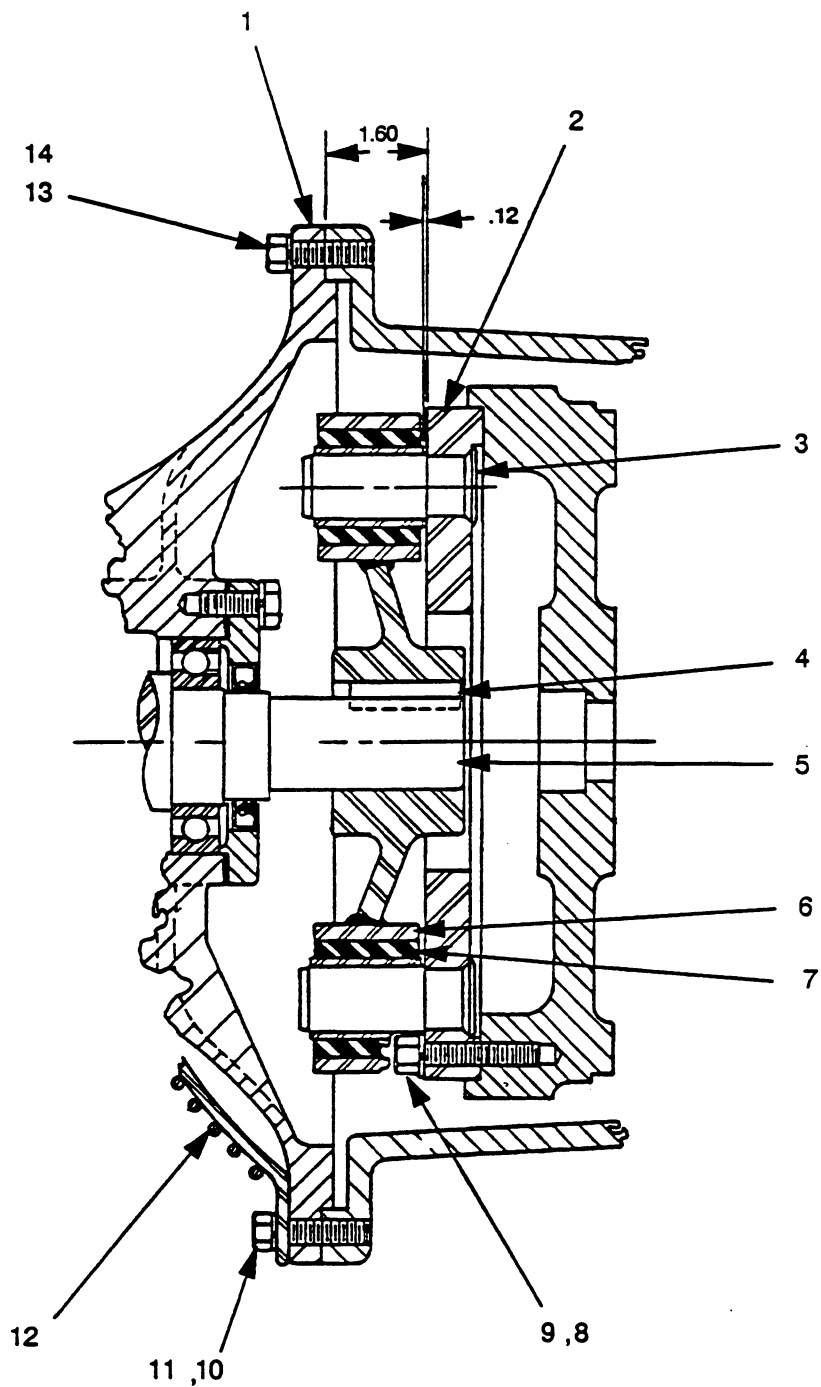


Figure 3. Drive Assembly 44162-074

**PARTS LIST**  
**Drive Assembly 44162-074**

ITEM NO.	PART NAME	PART NUMBER	MAT'L CODE	QTY
1	INTERMEDIATE	38263-616	10010	REF
2	DRIVE PLATE ASSEMBLY	44131-007	24150	1
3	-DRIVE PIN	13819	15030	2
4	* SHAFT KEY	N0607	15990	REF
5	* IMPELLER SHAFT	38514-812	15010	REF
6	DRIVE ARM ASSEMBLY	13817-C	-----	1
7	* -DYNA FLEX JOINT	S2110	-----	2
8	HEX HD CAPSCREW	B0606	15991	6
9	LOCKWASHER	J06	15991	6
10	HEX HD CAPSCREW	B0606	15991	4
11	LOCKWASHER	J06	15991	4
12	INTERMEDIATE GUARD	42381-038	24150	2
13	HEX HD CAPSCREW	B0605	15991	8
14	LOCKWASHER	J06	15991	8

\* INDICATES PARTS RECOMMENDED FOR STOCK

## PUMP AND SEAL DISASSEMBLY AND REASSEMBLY

Review all warnings in Section A.

Follow the instructions on all tags, label and decals attached to the pump.

This pump requires little service due to its rugged, minimum-maintenance design. However, if it becomes necessary to inspect or replace the wearing parts, follow these instructions which are keyed to the sectional views (see Figures 1, 2, and 3) and the accompanying parts lists.

Most service functions, such as wear plate, impeller, and seal replacement, may be performed by draining the pump and removing the back cover assembly. However, the following instructions assume complete disassembly is required.


Before attempting to service the pump, switch off the engine ignition and remove the key to ensure that it will remain inoperative. Close all valves in the suction and discharge lines.

For engine disassembly and repair, consult the literature supplied with the engine, or contact your local Ford engine representative.



### BEFORE ATTEMPTING TO OPEN OR SERVICE THE PUMP:

1. FAMILIARIZE YOURSELF WITH THIS MANUAL.
2. SWITCH OFF THE ENGINE IGNITION AND REMOVE THE KEY TO ENSURE THAT THE PUMP WILL REMAIN INOPERATIVE.
3. ALLOW THE PUMP TO COOL IF OVERHEATED.
4. CHECK THE TEMPERATURE BEFORE OPENING ANY COVERS, PLATES, OR PLUGS.
5. CLOSE THE SUCTION AND DISCHARGE VALVES.
6. VENT THE PUMP SLOWLY AND CAUTIOUSLY.
7. DRAIN THE PUMP.



**USE LIFTING AND MOVING EQUIPMENT IN GOOD REPAIR AND WITH ADEQUATE CAPACITY TO PREVENT INJURIES TO PERSONNEL OR DAMAGE TO EQUIPMENT. THE BAIL IS INTENDED FOR USE IN LIFTING THE PUMP ASSEMBLY ONLY. SUCTION AND DISCHARGE HOSES AND PIPING MUST BE REMOVED FROM THE PUMP BEFORE LIFTING.**

### Back Cover Removal

(Figure 2)

Before attempting to service the pump, remove the pump casing drain plug (41) and drain the pump. Clean and reinstall the drain plug. The wear plate (38) and check valve assembly (50) are easily accessible and may be serviced by removing the back cover assembly (46).

Remove the cover clamp screw (45) and cover clamp (44) securing the back cover. Pull the back cover and assembled wear plate from the pump casing (1). Inspect the back cover gasket (42) and replace it if damaged or worn.

Inspect the wear plate and replace it if badly scored and worn. To remove the wear plate, disengage the hardware (39 and 40).

### Suction Check Valve Removal

(Figure 2)

If the check valve assembly (50) is to be serviced, remove the suction piping. Remove the hex nuts (58) securing the suction flange (56) to the pump casing (1). Pull the check valve assembly (50) along with the suction flange gasket (59) from the suction port opening. Inspect the check valve assembly and replace any parts that worn or damaged. To disassemble, remove the hardware (51 and 52) securing the valve weights (53 and 55) to the valve gasket (54).

### Pump Casing Removal

(Figure 2)

To service the impeller (2) or seal assembly (3), disconnect the suction and discharge piping. Remove

the hardware (47, 48, 49, and 50, Figure 1) securing the casing to the base (21). Remove any leveling shims used under the casing mounting feet. Tie and tag the shims, or measure and record their thickness for ease of reassembly.

Remove the nuts (35) securing the pump casing to the seal plate (31). Install a standard 5/8-11 UNC lifting eye in the tapped hole in the top of the pump casing. **Be sure** to screw the eye into the casing until fully engaged. Use a hoist and sling of suitable capacity to separate the casing from the seal plate and intermediate (16).



**DO NOT ATTEMPT TO LIFT THE COMPLETE PUMP UNIT USING THE LIFTING EYE. IT IS DESIGNED TO FACILITATE REMOVAL OR INSTALLATION OF INDIVIDUAL COMPONENTS ONLY. ADDITIONAL WEIGHT MAY RESULT IN DAMAGE TO THE PUMP OR FAILURE OF THE EYE BOLT.**

Remove the pump casing gaskets (37). Tie and tag the gaskets, or measure and record their thickness for ease of reassembly.

### Impeller Removal

(Figure 2)

Turn the cross arm on the automatic lubricating grease cup (14) clockwise until it rests against the cover (see Figure 5). This will prevent the grease from escaping when the impeller is removed.

To remove the impeller (2), tap the vanes in counter-clockwise direction (when facing the impeller) with a block of wood or soft-faced mallet. **Be careful** not to damage the impeller. When the impeller breaks loose, unscrew it from the shaft. Use caution when removing the impeller; tension on the shaft seal spring will be released as the impeller is unscrewed. Inspect the impeller and replace if cracked or badly worn.

Slide the impeller adjusting shims (11) off the impeller shaft (21). Tie and tag the shims or measure and record their thickness for ease of reassembly.

### Seal Removal and Disassembly

(Figure 2)

To remove the seal assembly (3), remove the grease cup and piping (12, 13, and 14) from the seal plate (31). Remove the hardware (32 and 33) and slide the seal plate and seal parts off the shaft as a single unit. **Be careful** not to drop or damage any seal parts.

Carefully remove the stationary and rotating seal elements, packing rings, seal spring, and shaft sleeve from the seal plate.

### NOTE

*The seal assembly may be removed without completely disassembling the pump by removing the impeller through the back cover opening and using a stiff wire with a hooked end to pull the seal parts out of the seal plate.*

Inspect the seal liner (9) for wear or grooves which could cause leakage or damage to the seal packing rings. The seal liner is a press fit in the seal plate, and does not normally require replacement. If replacement is necessary, see **Seal Reassembly And Installation**.

If no further disassembly is required, refer to **Seal Reassembly And Installation**.

### Separating Intermediate And Drive Assembly From Engine

(Figure 3)

If it is necessary to separate the intermediate and drive assemblies from the engine, support the intermediate using a hoist and sling, and remove the hardware (10, 11, 13 and 14) securing the intermediate (1) and guards (12) to the engine bellhousing. Separate the assemblies by pulling the intermediate straight away from the engine.

As the assemblies are separated, the drive pins (3) will disengage from the drive arm assembly (6). The drive arm assembly and the impeller shaft key (4) are a tight press fit on the impeller shaft (5), and will remain on the shaft.

Use a bearing puller to remove the drive arm assembly from the impeller shaft. Remove the shaft key.

It is not necessary to remove the drive plate assembly (2) from the engine flywheel unless the drive pins are bent or worn and must be replaced. To remove the drive plate assembly, disengage the hardware (8 and 9) securing it to the flywheel.

The drive pins are secured into the drive plate by a tight press fit and peening. To remove the pins, drill through from the peened end and drive the pins out using a drift pin.

Inspect the dyna flex joints (7) in the drive arm assembly and replace them if worn. The dyna flex joints are a press fit in the drive arm.

### Shaft and Bearing Removal and Disassembly

(Figure 2)

When the pump is properly operated and maintained, the bearing housing should not require disassembly. Disassemble the shaft and bearings only when there is evidence of wear or damage.



SHAFT AND BEARING DISASSEMBLY IN THE FIELD IS NOT RECOMMENDED. THESE OPERATIONS SHOULD BE PERFORMED ONLY IN A PROPERLY-EQUIPPED SHOP BY QUALIFIED PERSONNEL.

Remove the intermediate drain plug (29) and drain the lubricant. Clean and reinstall the drain plug.

Disengage the hardware (18 and 19) and remove the bearing cap (24), gasket (17) and shim set (23). Tie and tag the shim set, or measure and record their thickness for ease of reassembly. Press the oil seal (22) from the bearing cap.


Place a block of wood against the impeller end of the shaft (21), and tap the shaft and assembled bearings (25 and 28) from the intermediate. Press the oil seal (30) from the intermediate.

After removing the shaft and bearings, clean and inspect the bearings in place as follows.




TO PREVENT DAMAGE DURING REMOVAL FROM THE SHAFT, IT IS RECOMMENDED THAT BEARINGS BE CLEANED AND INSPECTED IN PLACE. IT IS **STRONGLY RECOMMENDED** THAT THE BEARINGS BE REPLACED ANY TIME THE SHAFT AND BEARINGS ARE REMOVED.

Clean the intermediate, shaft and all component parts (except the bearings) with a soft cloth soaked in cleaning solvent. Inspect the parts for wear or damage and replace as necessary.



**MOST CLEANING SOLVENTS ARE TOXIC AND FLAMMABLE. USE THEM ONLY IN A WELL-VENTILATED AREA FREE FROM EXCESSIVE HEAT, SPARKS, AND FLAME. READ AND FOLLOW ALL PRECAUTIONS PRINTED ON SOLVENT CONTAINERS.**

Clean the bearings thoroughly in **fresh** cleaning solvent. Dry the bearings with filtered compressed air and coat with light oil.



BEARINGS MUST BE KEPT FREE OF ALL DIRT AND FOREIGN MATERIAL. FAILURE TO DO SO WILL GREATLY SHORTEN BEARING LIFE. **DO NOT SPIN DRY BEARINGS. THIS MAY SCRATCH THE BALLS OR RACES AND CAUSE PREMATURE BEARING FAILURE.**

Rotate the bearings by hand to check for roughness or binding and inspect the bearing balls. If rotation is rough or the bearing balls are discolored, replace the bearings.

The bearing tolerances provide a tight press fit onto the shaft and a snug slip fit into the bearing housing. Replace the bearings, shaft, or intermediate if the proper bearing fit is not achieved.

If bearing replacement is required, use a bearing puller to remove the bearings from the shaft.



## Shaft and Bearing Reassembly and Installation

### (Figure 2)

Inspect the shaft for distortion, nicks or scratches, or for thread damage on the impeller end. Dress small nicks and burrs with a fine file or emery cloth. Replace the shaft if defective.

Position the oil seal (30) in the intermediate housing bore with the lip positioned as shown in Figure 2.

Clean and inspect the bearings as indicated in **Shaft And Bearing Removal And Disassembly**.



TO PREVENT DAMAGE DURING REMOVAL FROM THE SHAFT, IT IS RECOMMENDED THAT BEARINGS BE CLEANED AND INSPECTED IN PLACE. IT IS **STRONGLY RECOMMENDED** THAT THE BEARINGS BE REPLACED ANY TIME THE SHAFT AND BEARINGS ARE REMOVED.

The bearings may be heated to ease installation. An induction heater, hot oil bath, electric oven, or hot plate may be used to heat the bearings. Bearings should **never** be heated with a direct flame or directly on a hot plate.

### NOTE


*If a hot oil bath is used to heat the bearings, both the oil and the container must be **absolutely clean**. If the oil has been previously used, it must be **thoroughly filtered**.*

Heat the bearings to a uniform temperature no higher than 250°F (120°C), and slide the bearings onto the shaft, one at a time, until they are fully seated. This should be done quickly, in one continuous motion, to prevent the bearings from cooling and sticking on the shaft.

After the bearings have been installed and allowed to cool, check to ensure that they have not moved away from the shaft shoulders in shrinking. If movement has occurred, use a suitable sized sleeve and

a press to reposition the bearings against the shaft shoulders.

If heating the bearings is not practical, use a suitable sized sleeve, and an arbor (or hydraulic) press to install the bearings on the shaft.



**WHEN INSTALLING THE BEARINGS ONTO THE SHAFT, NEVER PRESS OR HIT AGAINST THE OUTER RACE, BALLS, OR BALL CAGE. PRESS ONLY ON THE INNER RACE.**

Slide the shaft and assembled bearings into the intermediate bore until the inboard bearing is fully seated against the bore shoulder. **Be careful** not to damage the oil seal lip on the shaft threads.



**WHEN INSTALLING THE SHAFT AND BEARINGS INTO THE BEARING BORE, PUSH AGAINST THE OUTER RACE. NEVER HIT THE BALLS OR BALL CAGE.**

Apply a light coating of oil to the lip of the oil seal (22), and press it into the bearing cap (24) with the lip positioned as shown in Figure 2. The face of the oil seal should be just flush with the outer face of the bearing cap.

Install the bearing shim set (23) and bearing cap gasket (17), and secure the bearing cap to the intermediate with the hardware (18 and 19). Be careful not to damage the oil seal lip on the shaft keyway.

### NOTE

*Shaft endplay should be between .002 - .010 inches (0,05 to 0,25 mm). Add or remove bearing shims until the correct endplay is achieved.*

Lubricate the bearings as indicated in **LUBRICATION** at the end of this section.

## Securing Intermediate And Drive Assembly To Engine

### (Figure 3)

If the drive pins (3) were removed from the drive plate assembly (2), install the new pins by pressing them

into the drive plate and peening the ends. Secure the drive plate assembly to the engine flywheel with the hardware (8 and 9).

If the dyna flex joints (7) were removed from the drive arm assembly (6), lubricate the O.D. of the replacement dyna flex joints with a fine film of rubber lubricant (Parker-O-Lube or equivalent), and press them into the drive arm until centered.

Install the impeller shaft key (4), and press the drive arm assembly onto the impeller shaft (5) to the dimension shown in Figure 3.



MAKE CERTAIN THAT THE DRIVE PLATE AND DRIVE ARM ASSEMBLIES ARE MOUNTED IN ACCORDANCE WITH THE DIMENSION SHOWN IN FIGURE 3. THIS DIMENSION IS CRITICAL. IF THE DRIVE ARM ASSEMBLY IS NOT PROPERLY POSITIONED ON THE SHAFT, A PRELOAD CONDITION CAN CAUSE PREMATURE BEARING FAILURE.

Secure the intermediate (1) and guards (12) to the bellhousing using hardware (10, 11, 13 and 14).

#### Seal Reassembly and Installation

(Figures 2 and 4)

Clean the seal cavity and shaft with a cloth soaked in fresh cleaning solvent.



**MOST CLEANING SOLVENTS ARE TOXIC AND FLAMMABLE. USE THEM ONLY IN A WELL-**

**VENTILATED AREA FREE FROM EXCESSIVE HEAT, SPARKS, AND FLAME. READ AND FOLLOW ALL PRECAUTIONS PRINTED ON SOLVENT CONTAINERS.**

The seal is not normally reused because wear patterns on the finished faces cannot be realigned during reassembly. This could result in premature failure. If necessary to reuse an old seal in an emergency, carefully wash all metallic parts in fresh cleaning solvent and allow to dry thoroughly.

Handle the seal parts with extreme care to prevent damage. Be careful not to contaminate precision finished faces; even fingerprints on the faces can shorten seal life. If necessary, clean the faces with a non-oil based solvent and a clean, lint-free tissue. Wipe lightly in a concentric pattern to avoid scratching the faces.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause leakage. Clean and polish the shaft sleeve, or replace it if there are nicks or cuts on either end. If any components are worn, replace the complete seal; never mix old and new seal parts.

If a replacement seal is being used, remove it from the container and inspect the precision finished faces to ensure that they are free of any foreign matter.

To ease installation of the seal, lubricate the packing rings and seal liner with water or a very small amount of oil, and apply a drop of light lubricating oil on the finished faces. Assemble the seal as follows, (see Figure 4).


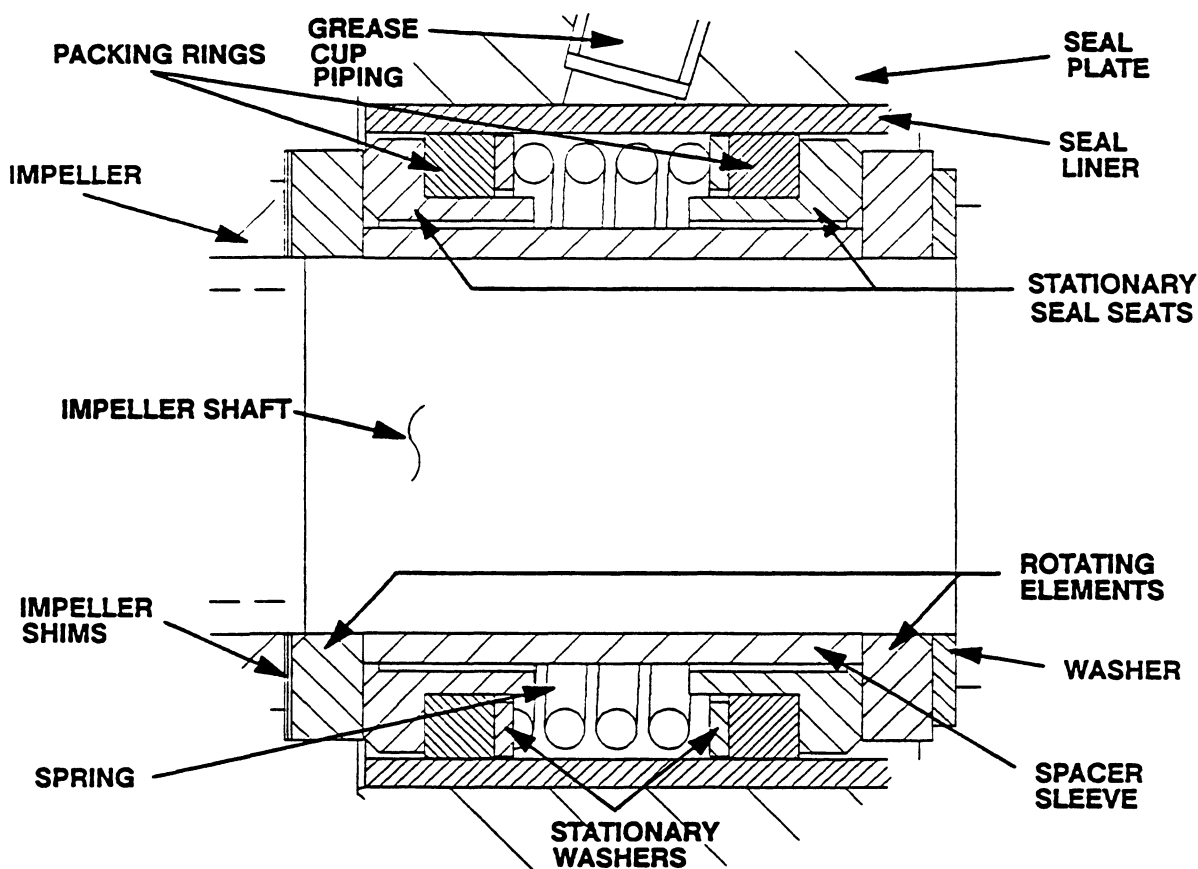


Figure 4. GS1250 Seal Assembly



THIS SEAL IS NOT DESIGNED FOR OPERATION AT TEMPERATURES ABOVE 110° F (43,3° C). DO NOT USE AT HIGHER OPERATING TEMPERATURES.

Inspect the seal plate, (31) seal liner (9), and the impeller shaft (21) for burrs or sharp corners, and remove any that exist. Replace the seal liner if wear or grooves exist which could cause leakage or damage to the seal packing rings. To replace the seal liner, position the seal plate on the bed of an arbor (or hydraulic) press and use a new sleeve to force the old one out. After the new liner is properly installed, a 1/4 inch diameter hole must be drilled through it to permit the flow of lubricant to the seal assembly. Be careful to center the drill in the threaded grease pipe hole and not damage the threads. Deburr the hole from the inside of the seal liner after drilling.

Install the seal plate gasket (36) and slide the seal plate onto the shaft until fully seated against the intermediate (16). Align the threaded seal lubricant hole with the intermediate opening and secure the

seal plate to the intermediate with hardware (32 and 33).

Install the spacer washer. Install the inboard rotating element with the chamfered side facing the shaft shoulder.

Subassemble the inboard stationary seat, packing ring, stationary washer, and spring. Apply a drop of light oil on the precision finished faces of the stationary seats; **never use grease**. Slide the entire subassembly into the lubricated seal liner until it bottoms against the inboard rotating element.

Subassemble the outboard stationary seat, packing ring and stationary washer. Press this unit into the lubricated seal liner.

Install the shaft spacer sleeve.

Slide the outboard rotating element onto the shaft with the chamfered side facing the impeller.

Reinstall the automatic grease cup and piping (12, 13 and 14).

Lubricate the seal as indicated in LUBRICATION, after the impeller has been installed.

## Impeller Installation And Adjustment

(Figure 2)

Inspect the impeller (2), and replace it if cracked or badly worn.



THE SHAFT AND IMPELLER THREADS MUST BE COMPLETELY CLEAN BEFORE REINSTALLING THE IMPELLER. EVEN THE SLIGHTEST AMOUNT OF DIRT ON THE THREADS CAN CAUSE THE IMPELLER TO SEIZE TO THE SHAFT, MAKING FUTURE REMOVAL DIFFICULT OR IMPOSSIBLE WITHOUT DAMAGE TO THE IMPELLER OR SHAFT.

Install the same thickness of impeller adjusting shims (11) as previously removed, and screw the impeller onto the shaft until tight.

### NOTE

*At the slightest sign of binding, immediately back the impeller off, and check the threads for dirt. Do not try to force the impeller onto the shaft.*

A clearance of .020 to .040 inch (0,5 mm to 1,0 mm) between the impeller and the seal plate is necessary for maximum pump efficiency. Measure this clearance, and add or remove impeller adjusting shims as required.

## Pump Casing Installation

(Figure 1)

Replace pump casing gasket set (37) and secure the pump casing to the intermediate with the nuts (35). Do not fully tighten the nuts until the impeller face clearance has been set.

### NOTE

*If the pump has been completely disassembled, it is recommended that the wear plate (38) and back cover assembly (46) be reinstalled at this point. The*

*back cover and wear plate must be in place to adjust the impeller face clearance.*

A clearance of .010 to .020 inch (0,25 mm to 0,51 mm) between the impeller and the wear plate is also recommended for maximum pump efficiency. This clearance must be set after installing the back cover, by adding or removing gaskets in the pump casing gasket set until the impeller binds against the wear plate when the shaft is turned. After the impeller binds, add approximately .010 inch (0,25 mm) of gaskets.

### NOTE

*An alternate method of adjusting this clearance is to reach through the discharge port with a feeler gauge and measure the gap. Add or subtract pump casing gaskets accordingly.*

If a lifting eye was used to move the pump casing, be sure to remove the lifting eye from the pump casing.



**DO NOT ATTEMPT TO LIFT THE COMPLETE PUMP UNIT USING THE LIFTING EYE. IT IS DESIGNED TO FACILITATE REMOVAL OR INSTALLATION OF INDIVIDUAL COMPONENTS ONLY. ADDITIONAL WEIGHT MAY RESULT IN DAMAGE TO THE PUMP OR FAILURE OF THE EYE BOLT.**

## Suction Check Valve Installation

(Figure 2)

Secure the check valve gasket (54) between the valve weights ((53 and 55) using the hardware (51 and 52).

Position the check valve pivot arm into the suction flange. Install the suction flange gasket (59) on the suction flange (56) and install the complete assembly onto the suction port. Secure using the hardware (58).

Check the operation of the suction check valve to ensure proper seating and free movement.

## Back Cover Installation

### (Figure 2)

If the wear plate (38) was removed for replacement, carefully center it on the back cover and secure it with the hardware (39 and 40). The wear plate **must** be concentric to prevent binding when the back cover is installed.

Clean any scale or debris from the contacting surfaces in the pump casing that might interfere or prevent a good seal with the back cover. Replace the back cover gasket (42), and slide the back cover assembly into the pump casing. Be sure the wear plate does not bind against the impeller.

### NOTE

*To ease future disassembly, apply a film of grease or 'Never-Seez' on the back cover shoulder, or any surface which contacts the pump casing. This action will reduce rust and scale build-up.*

Secure the back cover assembly by tightening the cover clamp screw (45) against the cover clamp (44). **Do not** over-tighten the clamp screw; it should be just tight enough to ensure a good seal at the back cover shoulder.

## Final Pump Assembly

### (Figure 1)

Install any leveling shims used under the pump casing mounting feet and secure the casing to the base (21) with the hardware (47, 48, 49 and 50). Be sure the pump is secured to the base and engine.

Install the suction and discharge lines, and open all valves. Make certain that all piping connections are tight, properly supported and secure.

**Be sure** the pump end and engine have been properly lubricated, see **LUBRICATION**.

Fill the pump casing with clean liquid. Reinstall the fill cover plate (4) and tighten it.

Refer to **OPERATION**, Section C, and start the pump.

## LUBRICATION

### Seal Assembly

#### (Figure 2)

Fill the grease cup (14) through the grease fitting with No. 2 lithium base grease until grease escapes from the relief hole. Turn the grease cup arm counter-clockwise until it is at the top of the stem; this will release the spring to apply grease to the seal (see Figure 5).

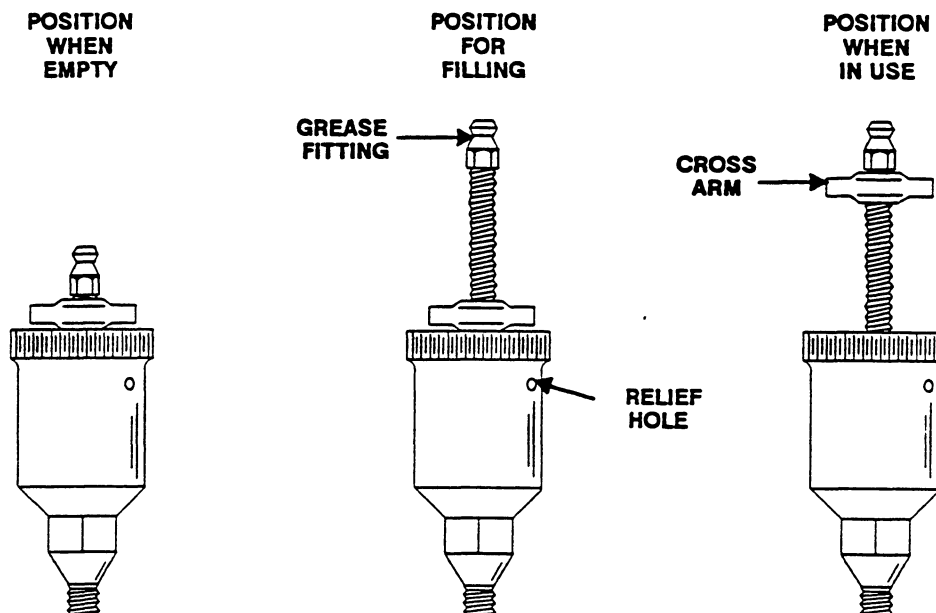


Figure 5. Automatic Lubricating Grease Cup

## Bearings

(Figure 2)

The intermediate was fully lubricated when shipped from the factory. Check the oil level regularly through the sight gauge (27) and maintain it at the middle of the gauge. When lubrication is required, remove the pedestal air vent (15) and fill the bearing housing with non-detergent SAE No. 30 motor oil. **Do not** over-lubricate. Over-lubrication can cause the bearings to over-heat, resulting in premature bearing failure.

Under normal conditions, drain the intermediate once each year and refill with approximately 6 ounces (0,2 liter) of a good grade of non-detergent SAE No. 30 motor oil. Change the oil more frequently if the pump is operated continuously or installed in an environment with rapid temperature change.



MONITOR THE CONDITION OF THE BEARING LUBRICANT REGULARLY FOR EVIDENCE OF RUST OR MOISTURE CONDENSATION. THIS IS ESPECIALLY IMPORTANT IN AREAS WHERE VARIABLE HOT AND COLD TEMPERATURES ARE COMMON.

For cold weather operation, consult the factory or a lubricant supplier for the recommended grade of oil.

## Engine

Consult the literature supplied with the power source, or contact your local Ford engine representative.



**For U.S. and International Warranty Information,  
Please Visit [www.grpumps.com/warranty](http://www.grpumps.com/warranty)  
or call:  
U.S.: 419–755–1280  
International: +1–419–755–1352**

**For Canadian Warranty Information,  
Please Visit [www.grcanada.com/warranty](http://www.grcanada.com/warranty)  
or call:  
519–631–2870**