
80 SERIES™

INSTALLATION, OPERATION, PARTS LIST, AND MAINTENANCE MANUAL



THE GORMAN-RUPP COMPANY • MANSFIELD, OHIO

GORMAN-RUPP OF CANADA LIMITED • ST. THOMAS, ONTARIO, CANADA

Printed in U.S.A.

This Installation, Operation, and Maintenance Manual is designed specifically to help you get the best performance and longest life from your Gorman-Rupp pump.

This pump is an 80 Series, semi-open impeller, self-priming centrifugal model designed for pumping liquids with specified entrained solids.

If there are any questions regarding the pump which are not covered in this manual or in other literature accompanying the unit, please contact your Gorman-Rupp distributor, or write:

The Gorman-Rupp Company	or	Gorman-Rupp of Canada Limited
P.O. Box 1217		70 Burwell Road
Mansfield, Ohio 44902		St. Thomas, Ontario N5P 3R7

For information or technical assistance on the power source, contact the power source manufacturer's local dealer or representative.

The following are used to alert maintenance personnel to procedures which require special attention, to those which could damage equipment, and to those which could be dangerous to personnel:

NOTE

Instructions to aid in installation, operation, or maintenance or which clarify a procedure.

CAUTION

Instructions which must be followed to avoid causing damage to the product or other equipment incidental to the installation. These describe the procedure required and the damage which could result from failure to follow the procedure.

WARNING

Instructions which must be followed to avoid causing injury or death to personnel. These describe the procedure required and the injury which could result from failure to follow the procedure.

TABLE OF CONTENTS

WARNINGS	Section A
INSTALLATION	Section B
OPERATION	Section C
TROUBLESHOOTING	Section D
MAINTENANCE AND REPAIR	Section E
WARRANTY	

WARNINGS

THESE WARNINGS APPLY TO ENGINE DRIVEN PUMPS. REFER TO THE MANUAL ACCOMPANYING THE ENGINE BEFORE ATTEMPTING TO START THE ENGINE.

Before attempting to open or service the pump:

1. Familiarize yourself with this manual.
2. Disconnect the power source to ensure that the pump will remain inoperative.
3. Allow the pump to cool if overheated.
4. Vent the pump slowly and cautiously.
5. Close the suction and discharge valves.
6. Check the temperature before opening any covers, plates, or plugs.
7. Drain the pump.

Do not attempt to pump volatile or flammable materials for which this pump has not been designed.

After the pump has been located in its operating position, make certain that the pump has been secured before attempting to operate it.

Do not operate the pump without shields and/or guards in place over drive shafts, belts and/or couplings, or other rotating parts. Exposed rotating parts can catch clothing, fingers, or tools, causing severe injury to personnel.

Do not operate the pump against a closed discharge valve for long periods of time. This could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode.



Overheated pumps can cause severe burns and injury. If overheating of the pump casing occurs:

1. Stop the pump immediately.
2. Allow the pump to cool.
3. Refer to instructions in this manual before restarting the pump.

Do not remove plates, covers, gauges, pipe plugs, or fittings from an overheated pump. Vapor pressure within the pump can cause parts being disengaged to be ejected with great force. Allow the pump to cool before servicing.

Do not operate an internal combustion engine in an explosive atmosphere. When operating internal combustion engines in an enclosed area, make certain that exhaust fumes are piped to the outside. These fumes contain carbon monoxide, a deadly gas that is colorless, tasteless, and odorless.

Fuel used by internal combustion engines presents an extreme explosion and fire hazard. Make certain that all fuel lines are securely connected and free of leaks. Never refuel a hot or running engine. Avoid overfilling the fuel tank. Always use the correct type of fuel.

Never tamper with the governor to gain more power. The governor establishes safe operating limits that should not be exceeded.

INSTALLATION

Seldom are two pump installations identical. The information presented in this section is a summary of the recommended installation practices related to inspection, pump positioning, hardware, suction and discharge piping, and sumps. For further assistance, contact your Gorman-Rupp distributor or the Gorman-Rupp Company.

PREINSTALLATION INSPECTION

The pump assembly was inspected and tested before it was shipped from the factory. Before installation, inspect the pump for damage which may have occurred during shipment. Check as follows:

- a. Inspect the pump assembly for cracks, dents, damaged threads, and other obvious damage.
- b. Check for and tighten loose bolts, nuts, capscrews, and other attaching hardware. Since gaskets tend to shrink after drying, check for and tighten loose nuts and capscrews securing mating surfaces.
- c. Carefully read all tags, decals, and markings on the pump assembly, and perform all duties indicated. Note the direction of rotation indicated on the pump.
- d. Check all lubricant levels and lubricate as necessary. Refer to the MAINTENANCE AND REPAIR section of this manual.

POSITIONING THE PUMP

Mounting

Locate the pump in an accessible place as close as practical to the liquid to be pumped. Level mounting is essential for proper operation. The pump may have to be supported to provide for level operation or to eliminate vibration.

Lifting

WARNING

Use lifting and moving equipment in good repair and with adequate capacity to prevent injuries to personnel or damage to equipment. The bail is intended for use in lifting the pump assembly **only**; disconnect suction and discharge hoses and piping from the pump when lifting the pump by the bail.



Make sure that hoists and other lifting equipment are of sufficient capacity to safely handle the pump assembly. If chains or cables are used, make certain that they are positioned so that they will not damage the pump, and so that the load will be balanced.

CAUTION

The pump assembly can be seriously damaged if the cables or chains used to lift and move the unit are improperly wrapped around it.

SUCTION AND DISCHARGE PIPING

Materials

Either pipe or hose may be used for suction and discharge lines, but hose used in suction lines must be the rigid-wall, reinforced type to prevent collapse under suction. Using pipe couplings in suction lines is not recommended.

Line Configuration

Keep suction and discharge lines as straight as possible to minimize friction losses. Make minimum use of elbows and fittings, which substantially increase friction loss. If elbows are necessary, use the long-radius type to minimize friction loss.

Connections to Pump

Never pull a pipe line into place by tightening the flange bolts. The connecting flange must be aligned exactly with the pump port. Lines near the pump must be independently supported to avoid strain on the pump which could cause serious vibration, decreased bearing life, and increased shaft and seal wear. Hose-type lines should have supports strong enough to secure the line when it is filled with liquid and under pressure.

Gauges

Most pumps are drilled and tapped for installing discharge pressure and vacuum suction gauges. If these gauges are desired for pumps that are not tapped, drill and tap the suction and discharge lines close to the pump before installing the lines.

SUCTION LINES

To avoid air pockets which could affect pump priming, the suction line must be as short and direct as possible. When operation involves a suction lift, the line must always slope upward to the pump from the source of the liquid being pumped; if the line slopes down to the pump at any point along the suction run, air pockets will be created.

Fittings

Suction lines should be the same size as the pump inlet. If reducers are used in suction lines, they should be the eccentric type, and should be installed with the flat part of the reducers uppermost to avoid creating air pockets. Valves are not normally used in suction lines, but if a valve is used, install it with the stem horizontal to avoid air pockets.

Strainers

Install a strainer at the end of the suction line to avoid possible clogging or damage to the pump. The total area of the openings in the strainer should be at least three or four times the cross section of the suction line, but no opening should be larger than the solids handling capability of the pump. Clean the strainer regularly during operation.

Sealing

All connections in the suction line should be sealed with pipe dope to ensure an airtight seal. Even a slight leak will affect priming, head, and capacity, especially when operating with a high suction lift. After installation, inspect the suction line carefully for potential leaks.

DISCHARGE LINES**Throttling Valves**

If a throttling valve is desired, install it in the discharge line. Use a valve as large as the largest pipe in the line to minimize friction losses. Never install a throttling valve in the suction line.

Check Valves

A check valve in the discharge line is normally recommended, but is not necessary in low discharge head applications.

With high discharge heads, install a throttling valve and a check valve in the discharge line to protect the pump from excessive shock pressure and reverse rotation when it is stopped.

Bypass Lines

If it is necessary to permit the escape of air to atmosphere during initial priming or in the repriming cycle, install a bypass line between the pump and the discharge check valve. The bypass line should be sized so that it does not affect pump discharge capacity.

Either a Gorman-Rupp automatic air release valve—which will automatically open to allow the pump to prime, and automatically close when priming is accomplished—or a hand-operated shutoff valve should be installed in the bypass line.

NOTE


The bypass line may clog frequently, particularly if the valve remains closed. If this condition occurs, either use a larger bypass line or leave the shutoff valve open during the pumping operation.

Do not terminate the discharge line at a level lower than that of the liquid being pumped unless a siphon breaker is used in the line. Otherwise, a siphoning action could result, causing damage to the pump.



SUCTION LINE POSITIONING

The depth of submergence of the suction line is critical to efficient pump operation. Figure 1 shows recommended minimum submergence vs. velocity.

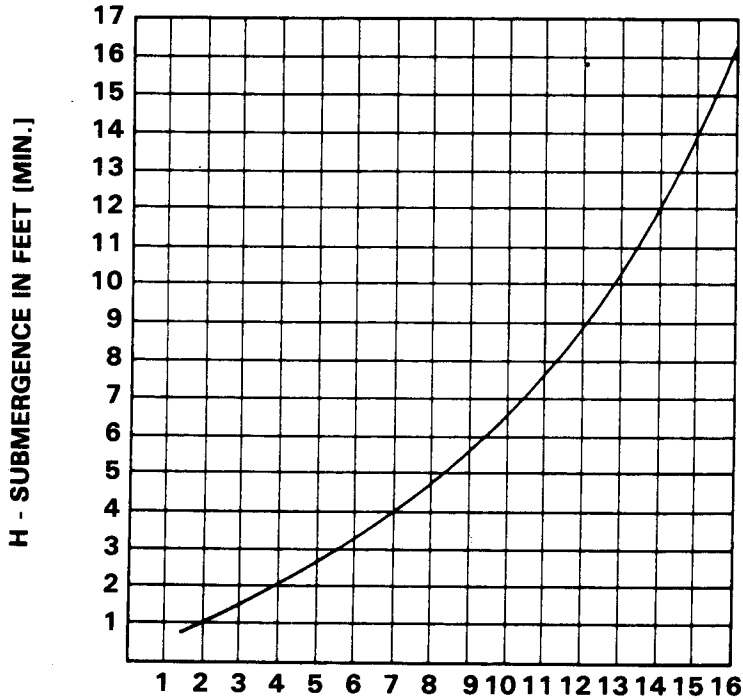

$$\text{VELOCITY IN FEET PER SEC.} = \frac{\text{QUAN. [G.P.M.] x .321}}{\text{AREA}} \text{ OR } \frac{\text{G.P.M. x .4085}}{D^2}$$

Figure 1. Recommended Minimum Suction Line Submergence Vs. Velocity

OPERATION

WARNING

Do not attempt to pump volatile or corrosive materials for which this pump has not been designed.

PRIMING

Install the pump and piping as described in INSTALLATION. Make sure that the piping connections are tight, and that the pump is securely mounted. Check that the pump is properly lubricated (see LUBRICATION in MAINTENANCE AND REPAIR).

This pump is self priming, but the pump volute casing must first be filled with liquid if:

1. The pump is being put into service for the first time.
2. The pump has not been used for a considerable length of time.
3. The liquid in the volute casing has evaporated.

Once the volute casing has been filled, the pump will prime and reprime as necessary.

CAUTION

Never operate a self-priming pump unless the volute is filled with liquid. The pump will not prime when dry. Extended operation of a dry pump will destroy the seal assembly.

To fill the pump, remove the volute fill cover or fill plug at the top of the casing and add clean liquid until the pump is filled. Replace the fill cover or fill plug before operating the pump.

STARTING

Consult the operating manual furnished with the power source.

OPERATION

Lines With a Bypass

Either a Gorman-Rupp automatic air release valve or a hand operated shutoff valve may be installed in a bypass line.

If a Gorman-Rupp automatic air release valve has been installed, close the throttling valve in the discharge line. The Gorman-Rupp valve will automatically open to allow the pump to prime, and automatically close when priming has been accomplished. After the pump has been primed, and liquid is flowing steadily from the bypass line, open the discharge throttling valve.

If a hand operated shutoff valve has been installed, close the throttling valve in the discharge line, and open the bypass shutoff valve so that the pump will not have to prime against the weight of the liquid in the discharge line. When the pump has been primed, and liquid is flowing steadily from the bypass line, close the bypass shutoff valve and open the discharge throttling valve.

Lines Without a Bypass

Open all valves in the discharge line and start the power source. Priming is indicated by a positive reading on the discharge pressure gauge or by quieter operation. The pump may not prime immediately because the suction line must first fill with liquid. If the pump fails to prime within five minutes, stop it and check the suction line for leaks.


After the pump has been primed, partially close the discharge line throttling valve in order to fill the line slowly and guard against excessive shock pressure which could damage pipe ends, gaskets, sprinkler heads, and any other fixtures connected to the line. When the discharge line is completely filled, adjust the throttling valve to the required discharge flow rate.

Leakage

No leakage should be visible at pump mating surfaces, or at pump connections or fittings. Keep all line connections and fittings tight to maintain maximum pump efficiency.

Overheating

Overheating can occur if the valves in the suction or discharge lines are closed. Operating against closed valves could bring the liquid to a boil, build pressure, and cause the pump to rupture or explode. If overheating occurs, stop the pump and allow it to cool before servicing it. Refill the volute casing with cool liquid.

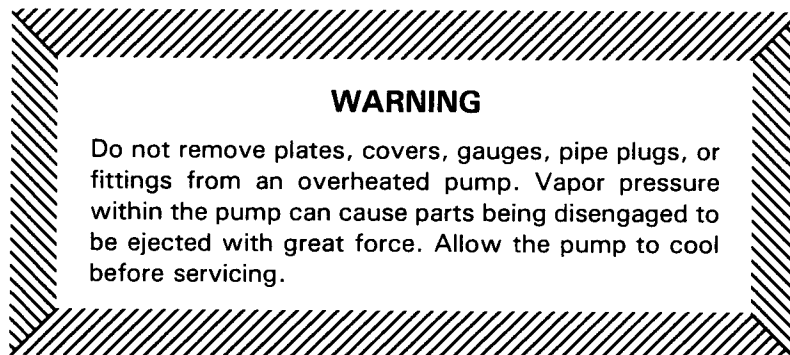

Strainer Check

Check the suction strainer regularly during pump operation, or if the pump flow rate begins to drop, and clean it as necessary. Be especially alert for unusual noises when pumping liquids containing solids.

Pump Vacuum Check

Install a vacuum gauge in the system, using pipe dope on the threads.

The pump should pull a vacuum of 20 inches or more of mercury at operating speed with the suction line blocked. If it does not, check for air leaks in the seals or gaskets.

Open the suction line, and read the vacuum gauge with the pump primed and at operating speed. Shut off the pump. The vacuum gauge reading will immediately drop proportionately to static suction lift, and should then stabilize. If the vacuum reading falls off rapidly after stabilizing, an air leak exists. Before checking the lines for the source of the air leak, check the point of installation of the vacuum gauge.

STOPPING

After stopping the pump, disconnect the power source to ensure that the pump will remain inoperative.

In below freezing conditions, drain the pump to prevent damage from freezing. Also, clean out any solids by flushing with a hose. Operate the pump for approximately one minute; this will remove any remaining liquid that could freeze the pump rotating parts.

If the pump will be idle for more than a few hours, or if it has been pumping liquids containing a large amount of solids, drain the pump, and flush it thoroughly with clean water. To prevent large solids from clogging the drain port and preventing the pump from draining completely, insert a rod or stiff wire in the drain port, and agitate the liquid during the draining process. Clean out any remaining solids by flushing with a hose.

When pumps are first started, the bearings may seem to run at temperatures above normal. Continued operation should bring the temperatures down to normal levels.



TROUBLESHOOTING

WARNING

Before attempting to open or service the pump:


1. Consult pump service manual.
2. Disconnect the power source to ensure that the pump will remain inoperative.
3. Allow the pump to cool if overheated.
4. Close suction and discharge valves.
5. Drain pump.

Trouble	Possible Cause	Probable Remedy
PUMP FAILS TO PRIME	Air leak in suction line. Lining of suction hose collapsed. Suction check valve clogged or binding. Leaking or worn seal or pump gasket. Suction lift or discharge head too high. Suction strainer clogged.	Correct leak. Replace suction hose. Clean valve. Check pump vacuum. Replace leaking or worn seal or gasket. Check piping installation and install bypass line if needed. See INSTALLATION. Clean suction strainer.
PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE	Air leak in suction line. Suction intake not submerged at proper level or sump too small. Lining of suction hose collapsed. Impeller or other wearing parts worn or damaged. Impeller clogged. Pump speed too slow. Discharge head too high. Suction lift too high.	Correct leak. Check installation and correct as needed. Check submergence chart (Section B, page 4). Replace suction hose. Check impeller clearance. Replace worn parts as needed. Free impeller of debris. Check driver output. Install bypass line. Reduce suction lift.

Trouble	Possible Cause	Probable Remedy
<p>PUMP STOPS OR FAILS TO DELIVER RATED FLOW OR PRESSURE (cont)</p>	<p>Leaking or worn seal or pump gaskets.</p> <p>Suction strainer clogged.</p>	<p>Check pump vacuum. Replace leaking or worn seal or pump gaskets.</p> <p>Clean suction strainer.</p>
<p>PUMP REQUIRES TOO MUCH POWER</p>	<p>Pump speed too high.</p> <p>Discharge head too low.</p> <p>Liquid solution too thick.</p>	<p>Reduce speed of power source.</p> <p>Adjust discharge valve.</p> <p>Dilute if possible.</p>
<p>PUMP CLOGS FREQUENTLY</p>	<p>Discharge flow too slow.</p> <p>Suction check valve clogged or binding.</p>	<p>Open discharge valve fully to increase flow rate, and run engine at maximum governed speed.</p> <p>Free valve, and clean or replace it.</p>
<p>EXCESSIVE NOISE</p>	<p>Cavitation in pump.</p> <p>Pumping entrained air.</p> <p>Pump or drive not securely mounted.</p> <p>Impeller clogged or damaged.</p>	<p>Reduce suction lift and/or friction losses in suction line.</p> <p>Locate and eliminate source of air bubble.</p> <p>Secure mounting hardware.</p> <p>Clean out debris; replace damaged parts.</p>

MAINTENANCE AND REPAIR

MAINTENANCE AND REPAIR OF THE WEARING PARTS OF THE PUMP WILL MAINTAIN PEAK OPERATING PERFORMANCE.

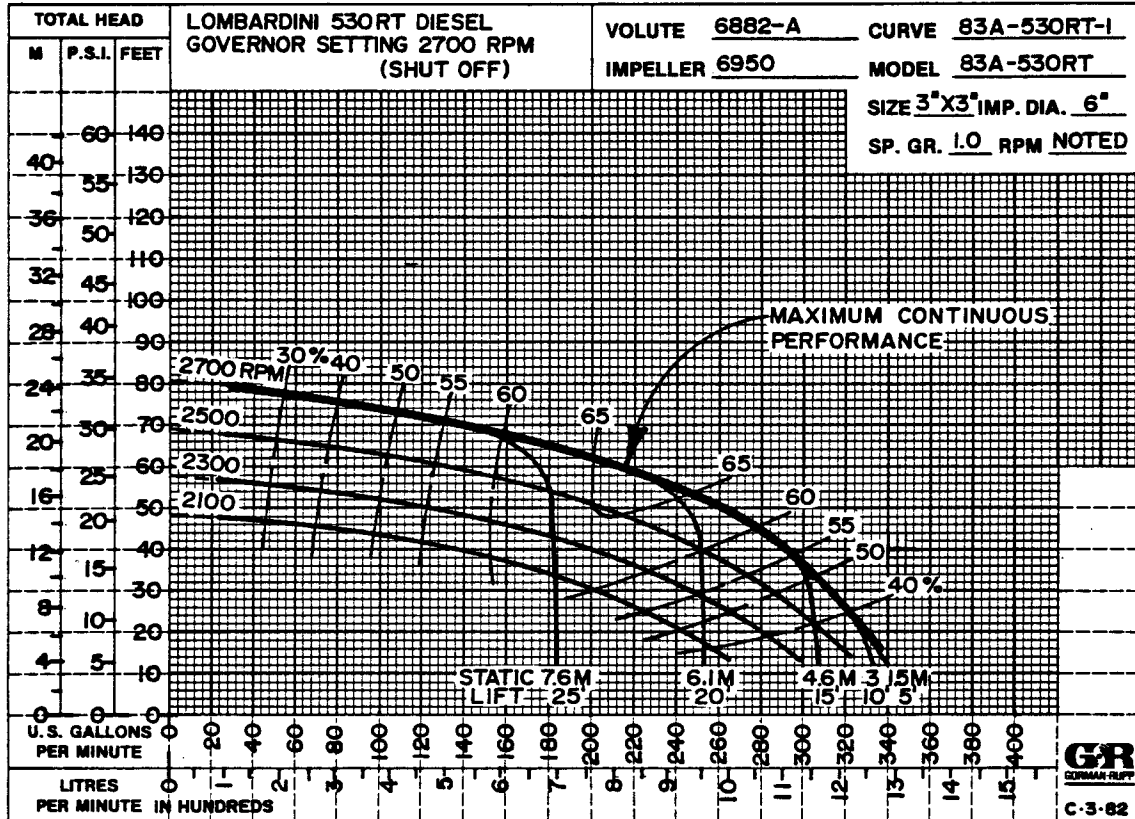

* STANDARD PERFORMANCE FOR PUMP MODEL 83A2-53ORT

* Based on 70°F clear water at sea level with minimum suction lift. Since pump installations are seldom identical, your performance may be different due to such factors as viscosity, specific gravity, elevation, operating and ambient temperature, and impeller trim. If your pump serial number is followed by an "N" or if you have a question on performance, contact The Gorman-Rupp Company.

SECTIONAL VIEW

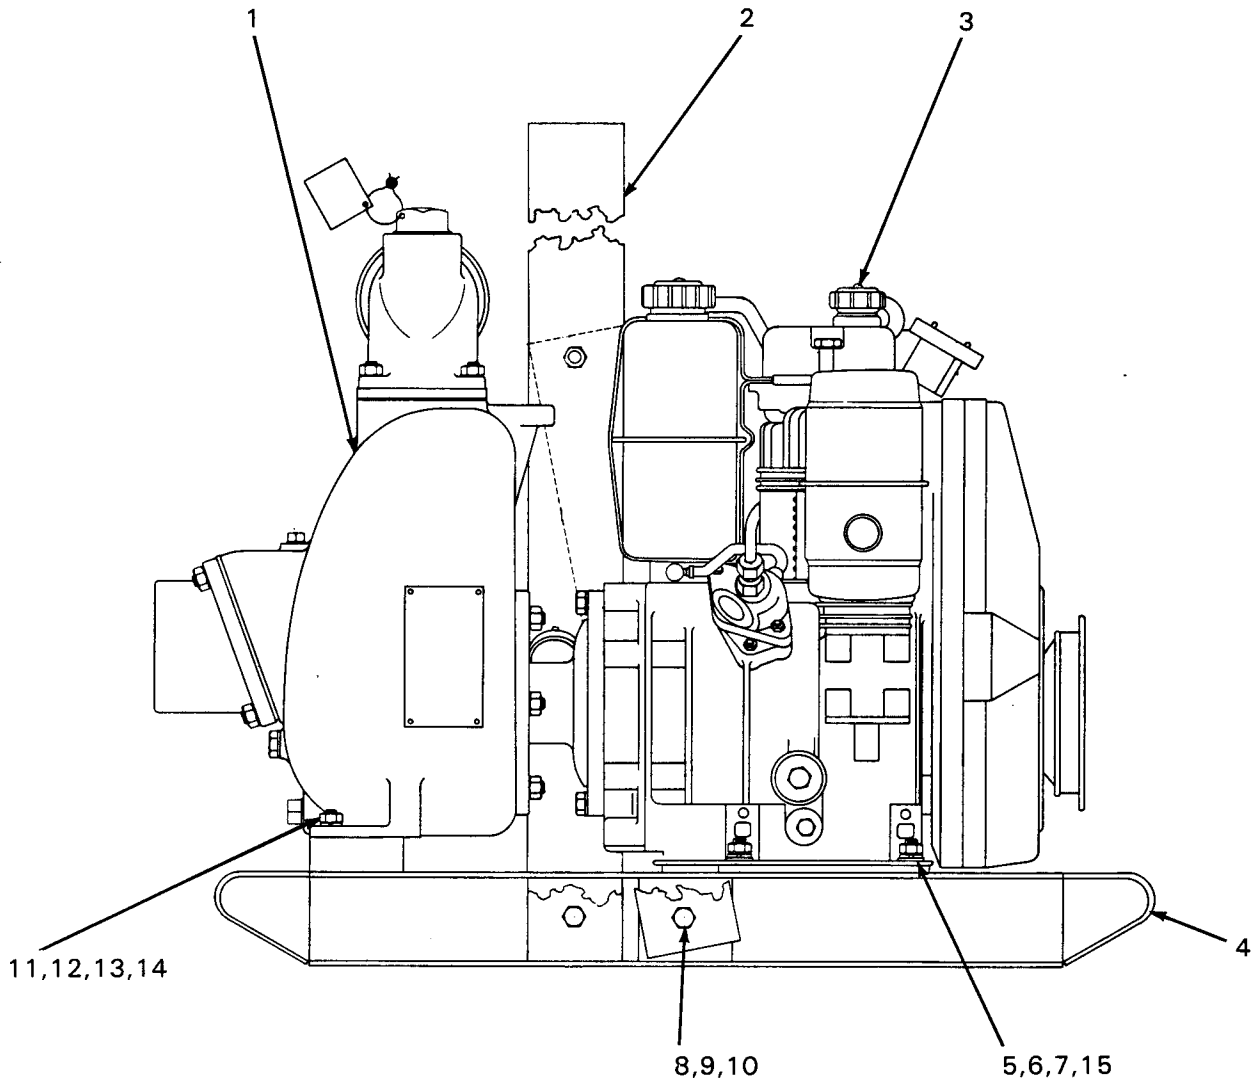


Figure 1. Pump Model 83A2-530RT



PARTS LIST
83A2-530RT PUMP MODEL ASSEMBLY
(From S/N 766501 and up)

ITEM NO.	PART NAME	PART NUMBER	MATERIAL CODE	QTY
1	PUMP END ASSEMBLY (See fig. 2)	83A		1
2	LIFTING BAIL ASSEMBLY	44714-033		1
3	LOMBARDINI 530RT ENGINE	29226-007		1
4	COMBINATION BASE	41566-077	24150	1
5	HEX HEAD CAPSCREW	B-0603	15991	4
6	LOCKWASHER	J-06	15991	4
7	HEX NUT	D-06	15991	4
8	HEX HEAD CAPSCREW	B-1006	15991	6
9	LOCKWASHER	J-10	15991	6
10	HEX NUT	D-10	15991	6
11	HEX HEAD CAPSCREW	B-0605	15991	2
12	LOCKWASHER	J-06	15991	2
13	HEX NUT	D-06	15991	2
14	FLAT WASHER	K-06	15991	2
15	FLAT WASHER	K-06	15991	4

CANADIAN SERIAL NO. AND UP

SECTIONAL VIEW

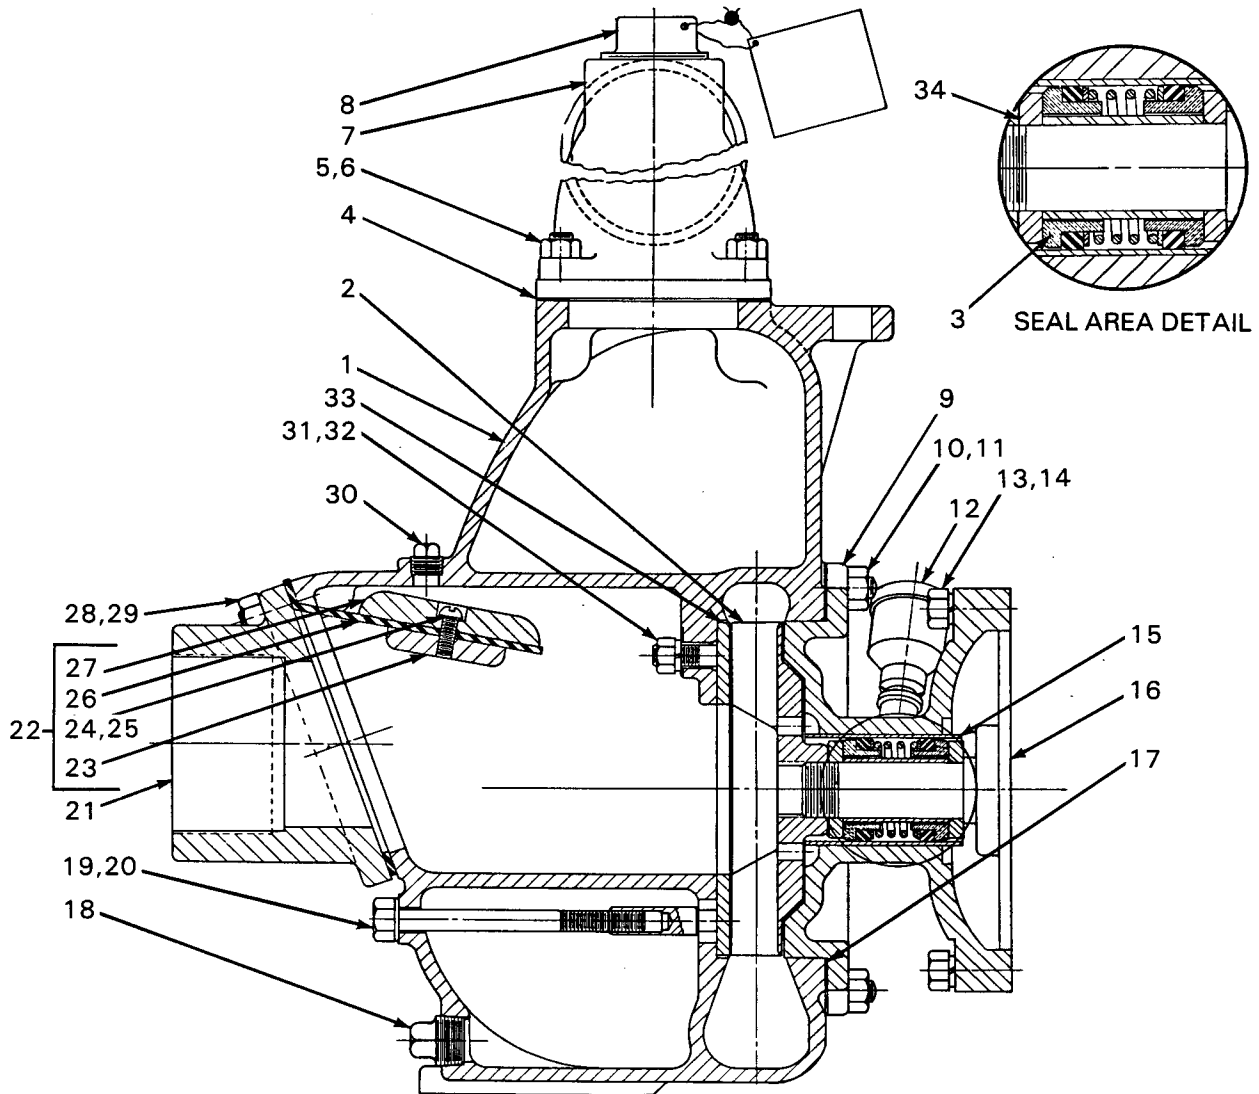


Figure 2. 83A2-(530RT) Pump End Assembly



PARTS LIST

83A2 (530RT) PUMP END ASSEMBLY

ITEM NO.	PART NAME	PART NUMBER	MATERIAL CODE	QTY
1	VOLUTE CASING	6882-A	10010	1
2	★IMPELLER	6950	10010	1
3	★SEAL ASSEMBLY	GS-1000		1
4	★DISCHARGE ELBOW GASKET	543-G	18000	1
5	STUD	C-0607	15991	4
6	HEX NUT	D-06	15991	4
7	DISCHARGE ELBOW	543	10010	1
8	FILL PLUG ASSEMBLY	48271-067		1
9	INTERMEDIATE ASSEMBLY	427-A	10010	1
10	STUD	C-0605½	15991	6
11	HEX NUT	D-06	15991	6
12	★SEAL GREASE CUP	S-36		1
13	HEX HEAD CAPSCREW	B-0606	15991	4
14	LOCKWASHER	J-06	15991	4
15	★SEAL LINER	83	14080	REF
16	ENGINE SHAFT EXTENSION			REF
17	★VOLUTE GASKET SET	229-B	18000	1
18	VOLUTE DRAIN PLUG	P-12	11990	1
19	FLAT WASHER	KF-06	18040	1
20	HEX HEAD CAPSCREW	B-0618	15991	1
21	SUCTION FLANGE	2946	10010	1
22	CHECK VALVE ASSEMBLY	544-A		1
23	★ VALVE WEIGHT	18	10010	1
24	ROUND HEAD MACHINE SCREW	X-0403	17090	1
25	LOCKWASHER	J-04	17090	1
26	★ CHECK VALVE	544-G	19070	1
27	★ VALVE WEIGHT	1364	10010	1
28	STUD	C-0606	15991	4
29	HEX NUT	D-06	15991	4
30	PIPE PLUG	P-04	11990	1
31	HEX NUT	D-06	15991	1
32	LOCKWASHER	J-06	15991	1
33	★WEAR PLATE ASSEMBLY	6951	15990	1
34	★IMPELLER SHIM SET	2-X	17090	REF
NOT SHOWN:				
	NAME PLATE	2613-C	13990	1
	DRIVE SCREW	BM#04-03	15990	4
	STRAINER	2645	24000	1

★ Indicates parts recommended for stock.



PUMP MODEL ASSEMBLY DISASSEMBLY AND REASSEMBLY

This pump requires little service due to its rugged, minimum-maintenance design. If it becomes necessary to inspect and/or replace the wearing parts, however, follow these instructions, which are keyed to the sectional views (see figures 1 and 2), and the accompanying parts lists.

PUMP MODEL ASSEMBLY DISASSEMBLY

NOTE

The engine cannot be separated from the pump end assembly unless the impeller and seal assembly have been removed (see **PUMP END ASSEMBLY DISASSEMBLY**).

Remove the engine spark plug, or take other precautions to ensure that the engine will remain inoperative while the pump is being serviced, and close all connecting valves.

PUMP END ASSEMBLY DISASSEMBLY

See figure 1, and remove the hex head capscrews (11), lockwashers (12), and hex nuts (13) and flat washers (14), securing the pump end assembly (1) to the combination base (4).

See figure 2, remove the volute drain plug (18), and drain the pump. Clean and reinstall the drain plug.

Impeller

Remove the hex nuts (11) securing the volute casing (1) to the intermediate assembly (9), and separate the assemblies.

To prevent the grease in the seal grease cup (12) from escaping, turn the crossarm on the cup clockwise until it rests against the cover (see figure 4).

To loosen the impeller (2), tap the vanes in the direction of pump rotation with a block of wood or a soft-faced mallet or hammer. Unscrew the impeller with caution; tension on the seal spring will be released as the impeller is removed.

Seal Assembly

Remove the impeller adjusting shims (34). For ease of reassembly, tag and tie the shims.

Carefully remove the seal spring, the stationary and rotating seal elements, and the shaft sleeve, using a stiff wire with a hooked end if necessary.

Intermediate Assembly

If desired to remove the intermediate from the engine, remove the hex head capscrews (13) and lockwashers (14) securing the intermediate.

Check Valve Assembly

For access to the check valve assembly (22), remove the hex nuts (29) securing the suction flange (21) to the volute casing.

Wear Plate Assembly

The wear plate assembly (33) is secured by a hex head capscrew (19) and flat washer (20) located at the lower part of the volute casing, and by a hex nut (31) and lockwasher (32) which can be reached through the pump suction port.

ENGINE REMOVAL

See figure 1, and remove the hex head capscrews (5), lockwashers (6), hex nuts (7), and flat washers (15) securing the engine to the combination base (4).


PUMP MODEL ASSEMBLY REASSEMBLY

ENGINE INSTALLATION

See figure 1, and secure the engine to the combination base.

PUMP END ASSEMBLY REASSEMBLY

Clean the engine crankshaft and the bore of the seal liner (15, figure 2), with a soft cloth soaked in cleaning solvent.

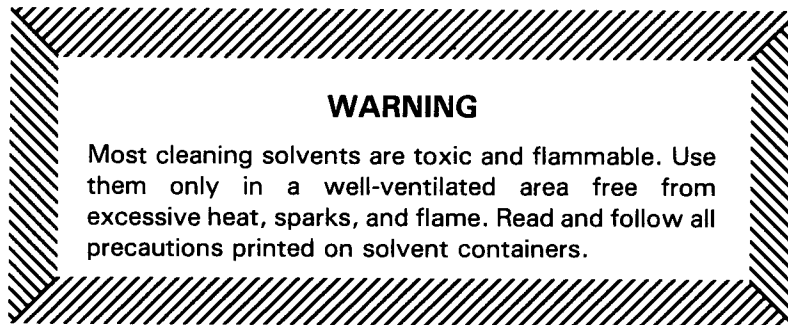

Inspect the seal liner, which is a press fit in the intermediate, and replace it if worn or grooved. If the seal liner is replaced, a hole must be drilled in it after installation to permit the passage of lubricant to the seal assembly. Deburr the hole after drilling, and clean the seal liner.

If removed, secure the intermediate assembly to the engine.

CAUTION

To prevent deforming the engine pilot diameter lugs, use great caution when positioning the intermediate assembly over the engine pilot. Tighten the mounting hardware evenly to ensure that the intermediate bosses will bottom squarely against the engine mounting face.

Seal Reassembly

CAUTION

This seal is not designed for operation at temperatures above 110°F. Do not use at higher operating temperatures.

The seal is not normally reused because of the precision finish on its lapped faces, but if it is necessary to reuse the old seal, wash all metallic parts in cleaning solvent and dry thoroughly.

Inspect the seal components for wear, scoring, grooves, and other damage that might cause seal failure. If any components are worn, replace the entire seal assembly; never mix old and new seal components. See figure 3.

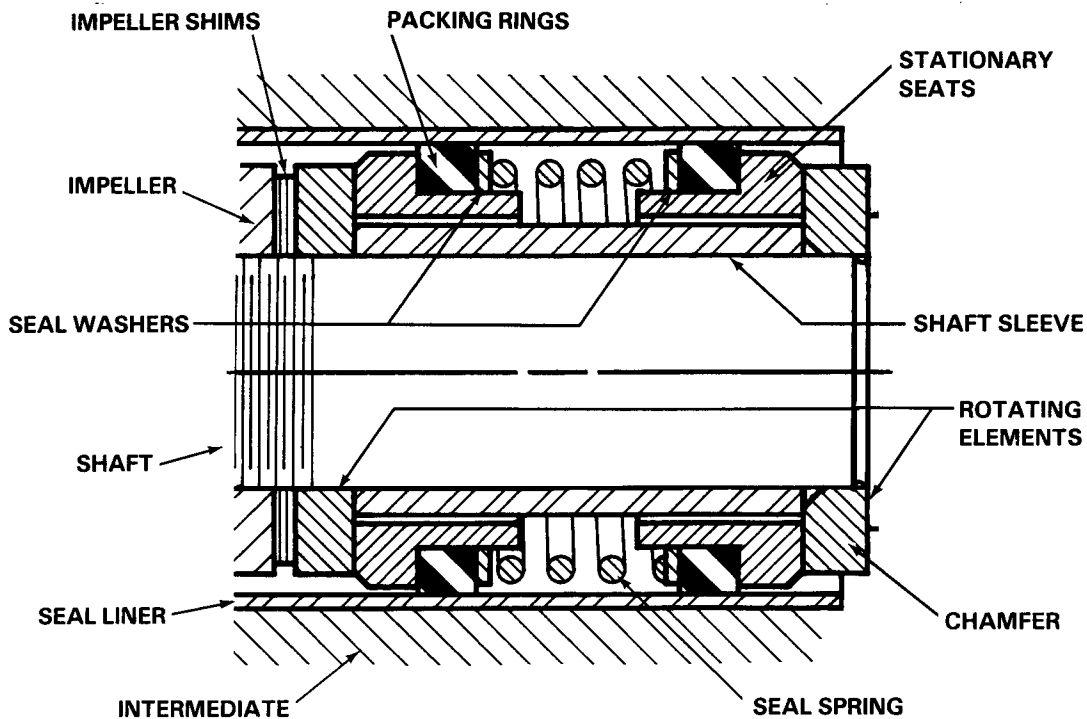


Figure 3. GS-1000 Seal Assembly

Lubricate the packing rings with petroleum jelly, soft grease, or oil, and place a drop of light lubricating oil on the lapped faces of the seal. Install the seal as a complete unit.

NOTE

Position the seal cone at the engine end of the seal so that the chamfered side of the cone faces the impeller as shown in figure 3.

Install the impeller adjusting shims.

Impeller

Inspect the impeller, and replace it if cracked or worn. Install the impeller.

A clearance of .020 to .040 inch between the impeller and the intermediate assembly is recommended for maximum pump efficiency. Measure this clearance, and add or remove impeller shims until it is reached.

Wear Plate

Inspect the wear plate, and replace it if badly scored or worn.

Check Valve Assembly

Make certain that the check valve assembly is correctly positioned, and that the hardware securing the suction flange is securely tightened.

Final Reassembly

Replace the volute casing gasket set (17), slip the studs (10) of the volute casing through their respective holes in the intermediate assembly, and secure the intermediate assembly to the volute casing.

A clearance of .008 to .015 inch between the impeller and the wear plate is also recommended for maximum pump efficiency. To reach this clearance, remove gaskets in the volute gasket set until the impeller binds against the wear plate when the shaft is turned. When the impeller binds, add .012 inch of gaskets.

See figure 1, and secure the assembled pump model assembly to the combination base.

Make certain that all piping connections are secure, and open all connecting valves. Fill the volute with liquid, and see Section C, **OPERATION**.

See **LUBRICATION** before starting the pump.

LUBRICATION

Seal Assembly

See figure 4. Before starting the pump, fill the seal grease cup through the grease fitting with a good grade of No. 2 lithium-base grease until grease escapes from the relief hole. Turn the grease cup arm counterclockwise until it is at the top of the stem; this will release the spring to apply grease to the seal assembly.

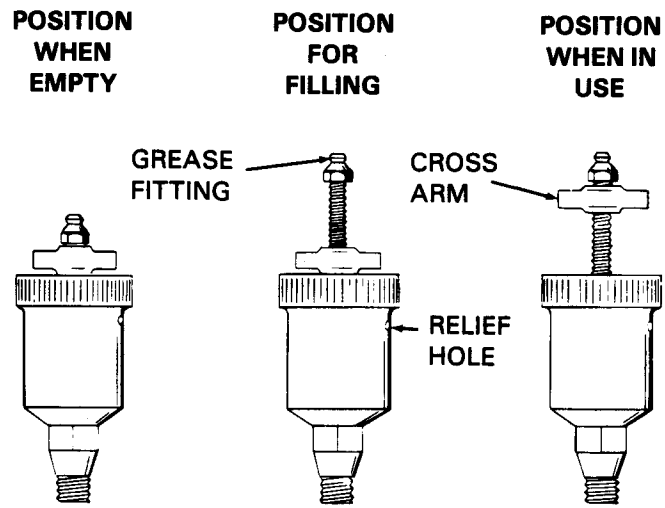


Figure 4. Automatic Lubricating Grease Cup

Engine

See the engine manufacturer's recommendations for engine lubrication.

**For U.S. and International Warranty Information,
Please Visit www.grpumps.com/warranty
or call:
U.S.: 419-755-1280
International: +1-419-755-1352**

**For Canadian Warranty Information,
Please Visit www.grcanada.com/warranty
or call:
519-631-2870**